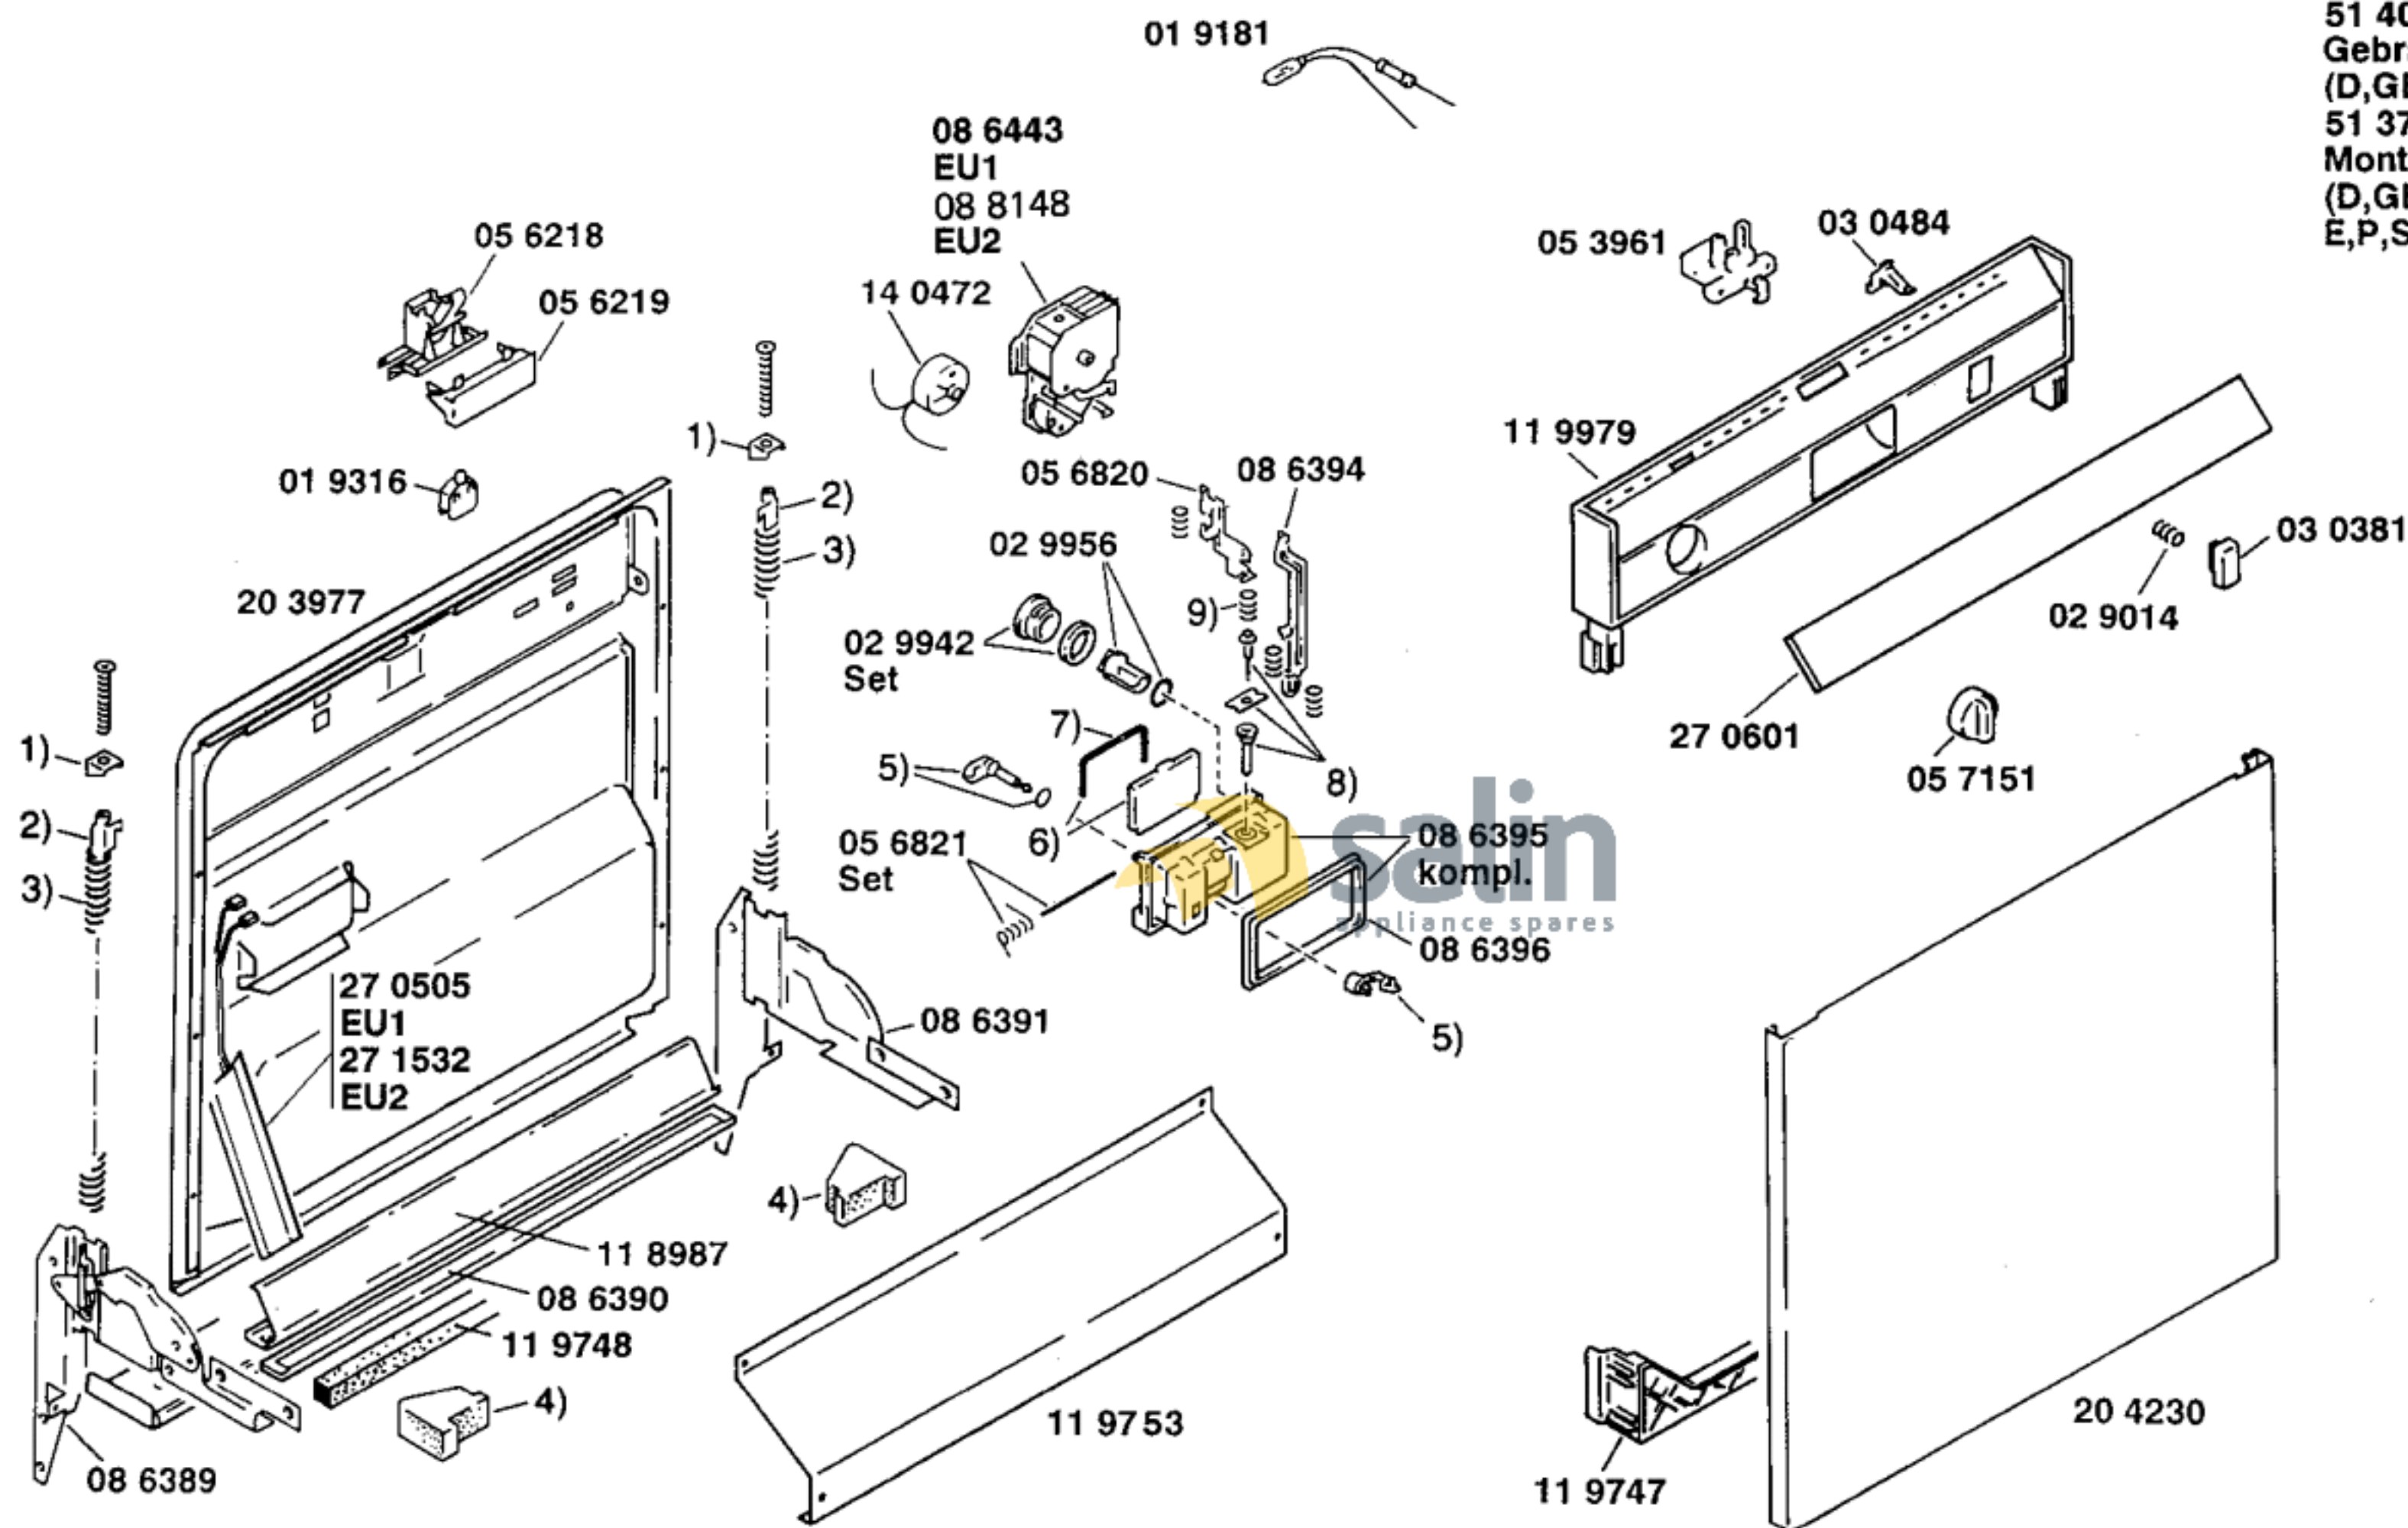


**BOSCH**SMS1012/01-EU1  
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent - Nummern - Konstante  
3740 . . . . .

**51 4010**  
**Gebrauchsanweisung**  
 (D,GB,F,I,NL,E,P)  
**51 3779**  
**Montageanweisung**  
 (D,GB,F,I,NL,DK,  
 E,P,S,N,SF,GR,TR)

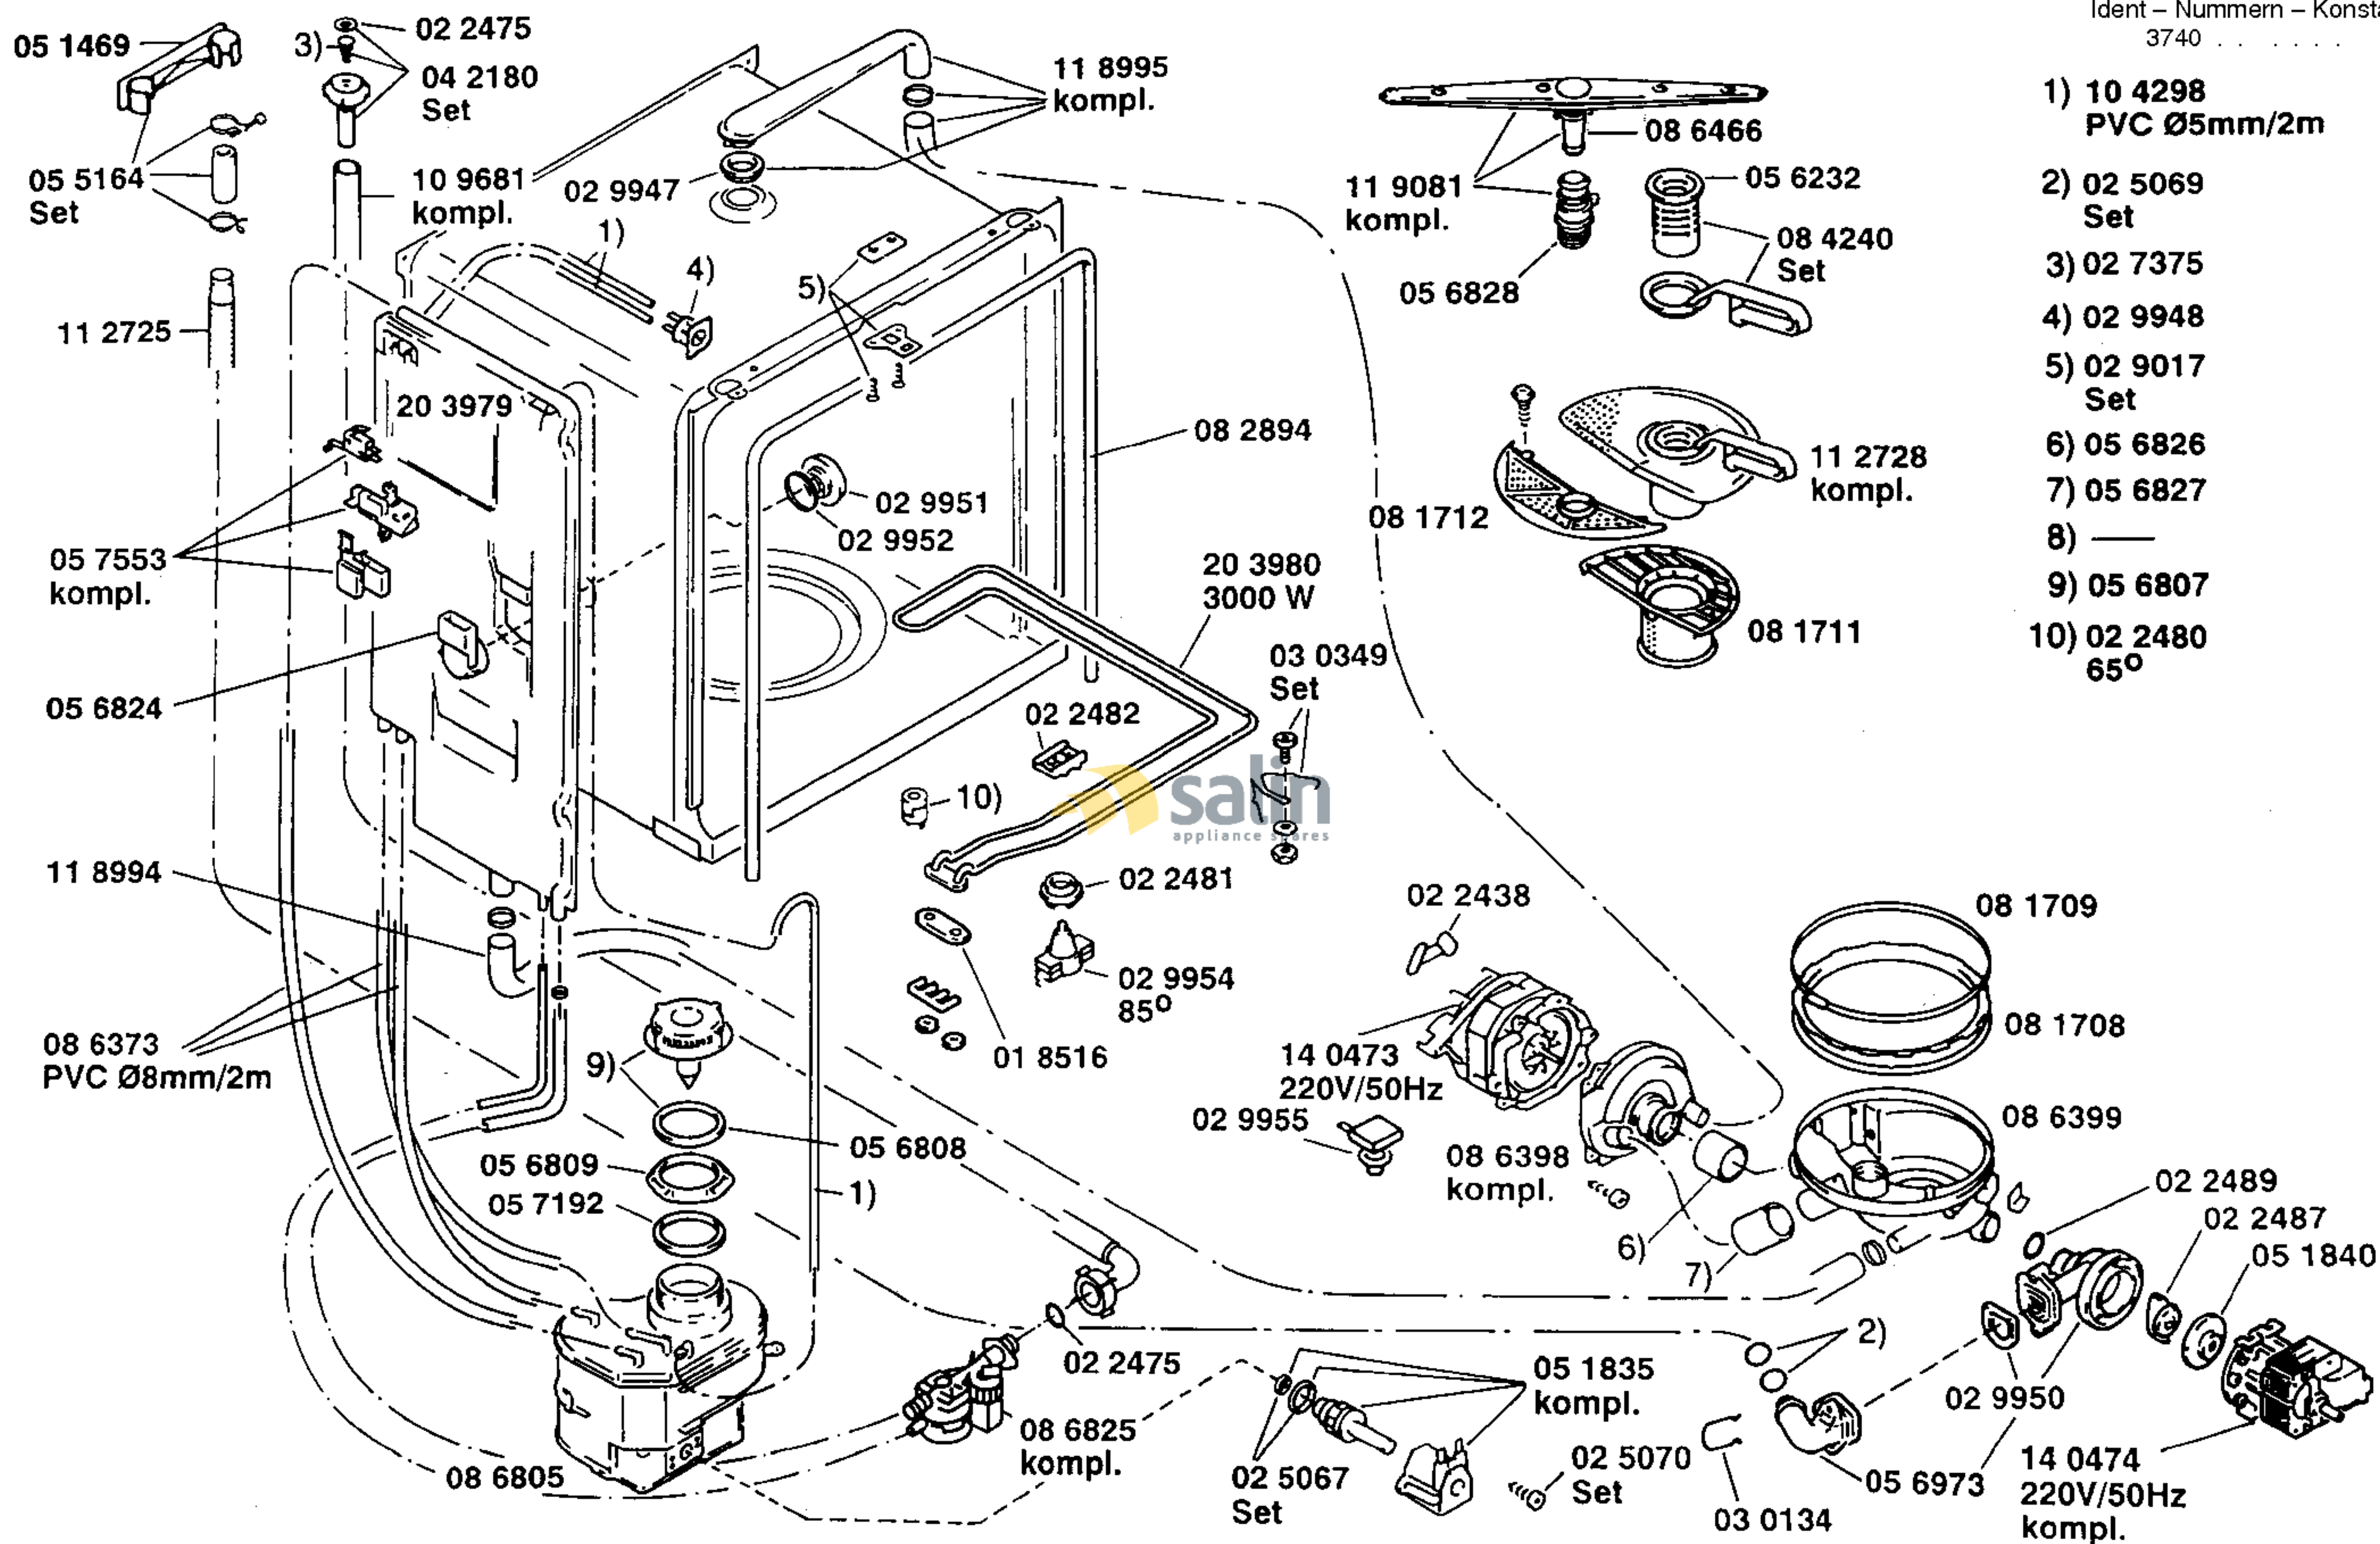
- 1) 02 9941
- 2) 02 9029
- 3) 11 9795
- 4) 05 6860
- 5) 02 9944 Set
- 6) 05 6822
- 7) 02 9943
- 8) 02 9945 Set
- 9) 02 9002 Set

160793-4/1

FAMILY : SMS1012

MODEL NO: SMS1012/01

Check Position No/Part No or Replacement No

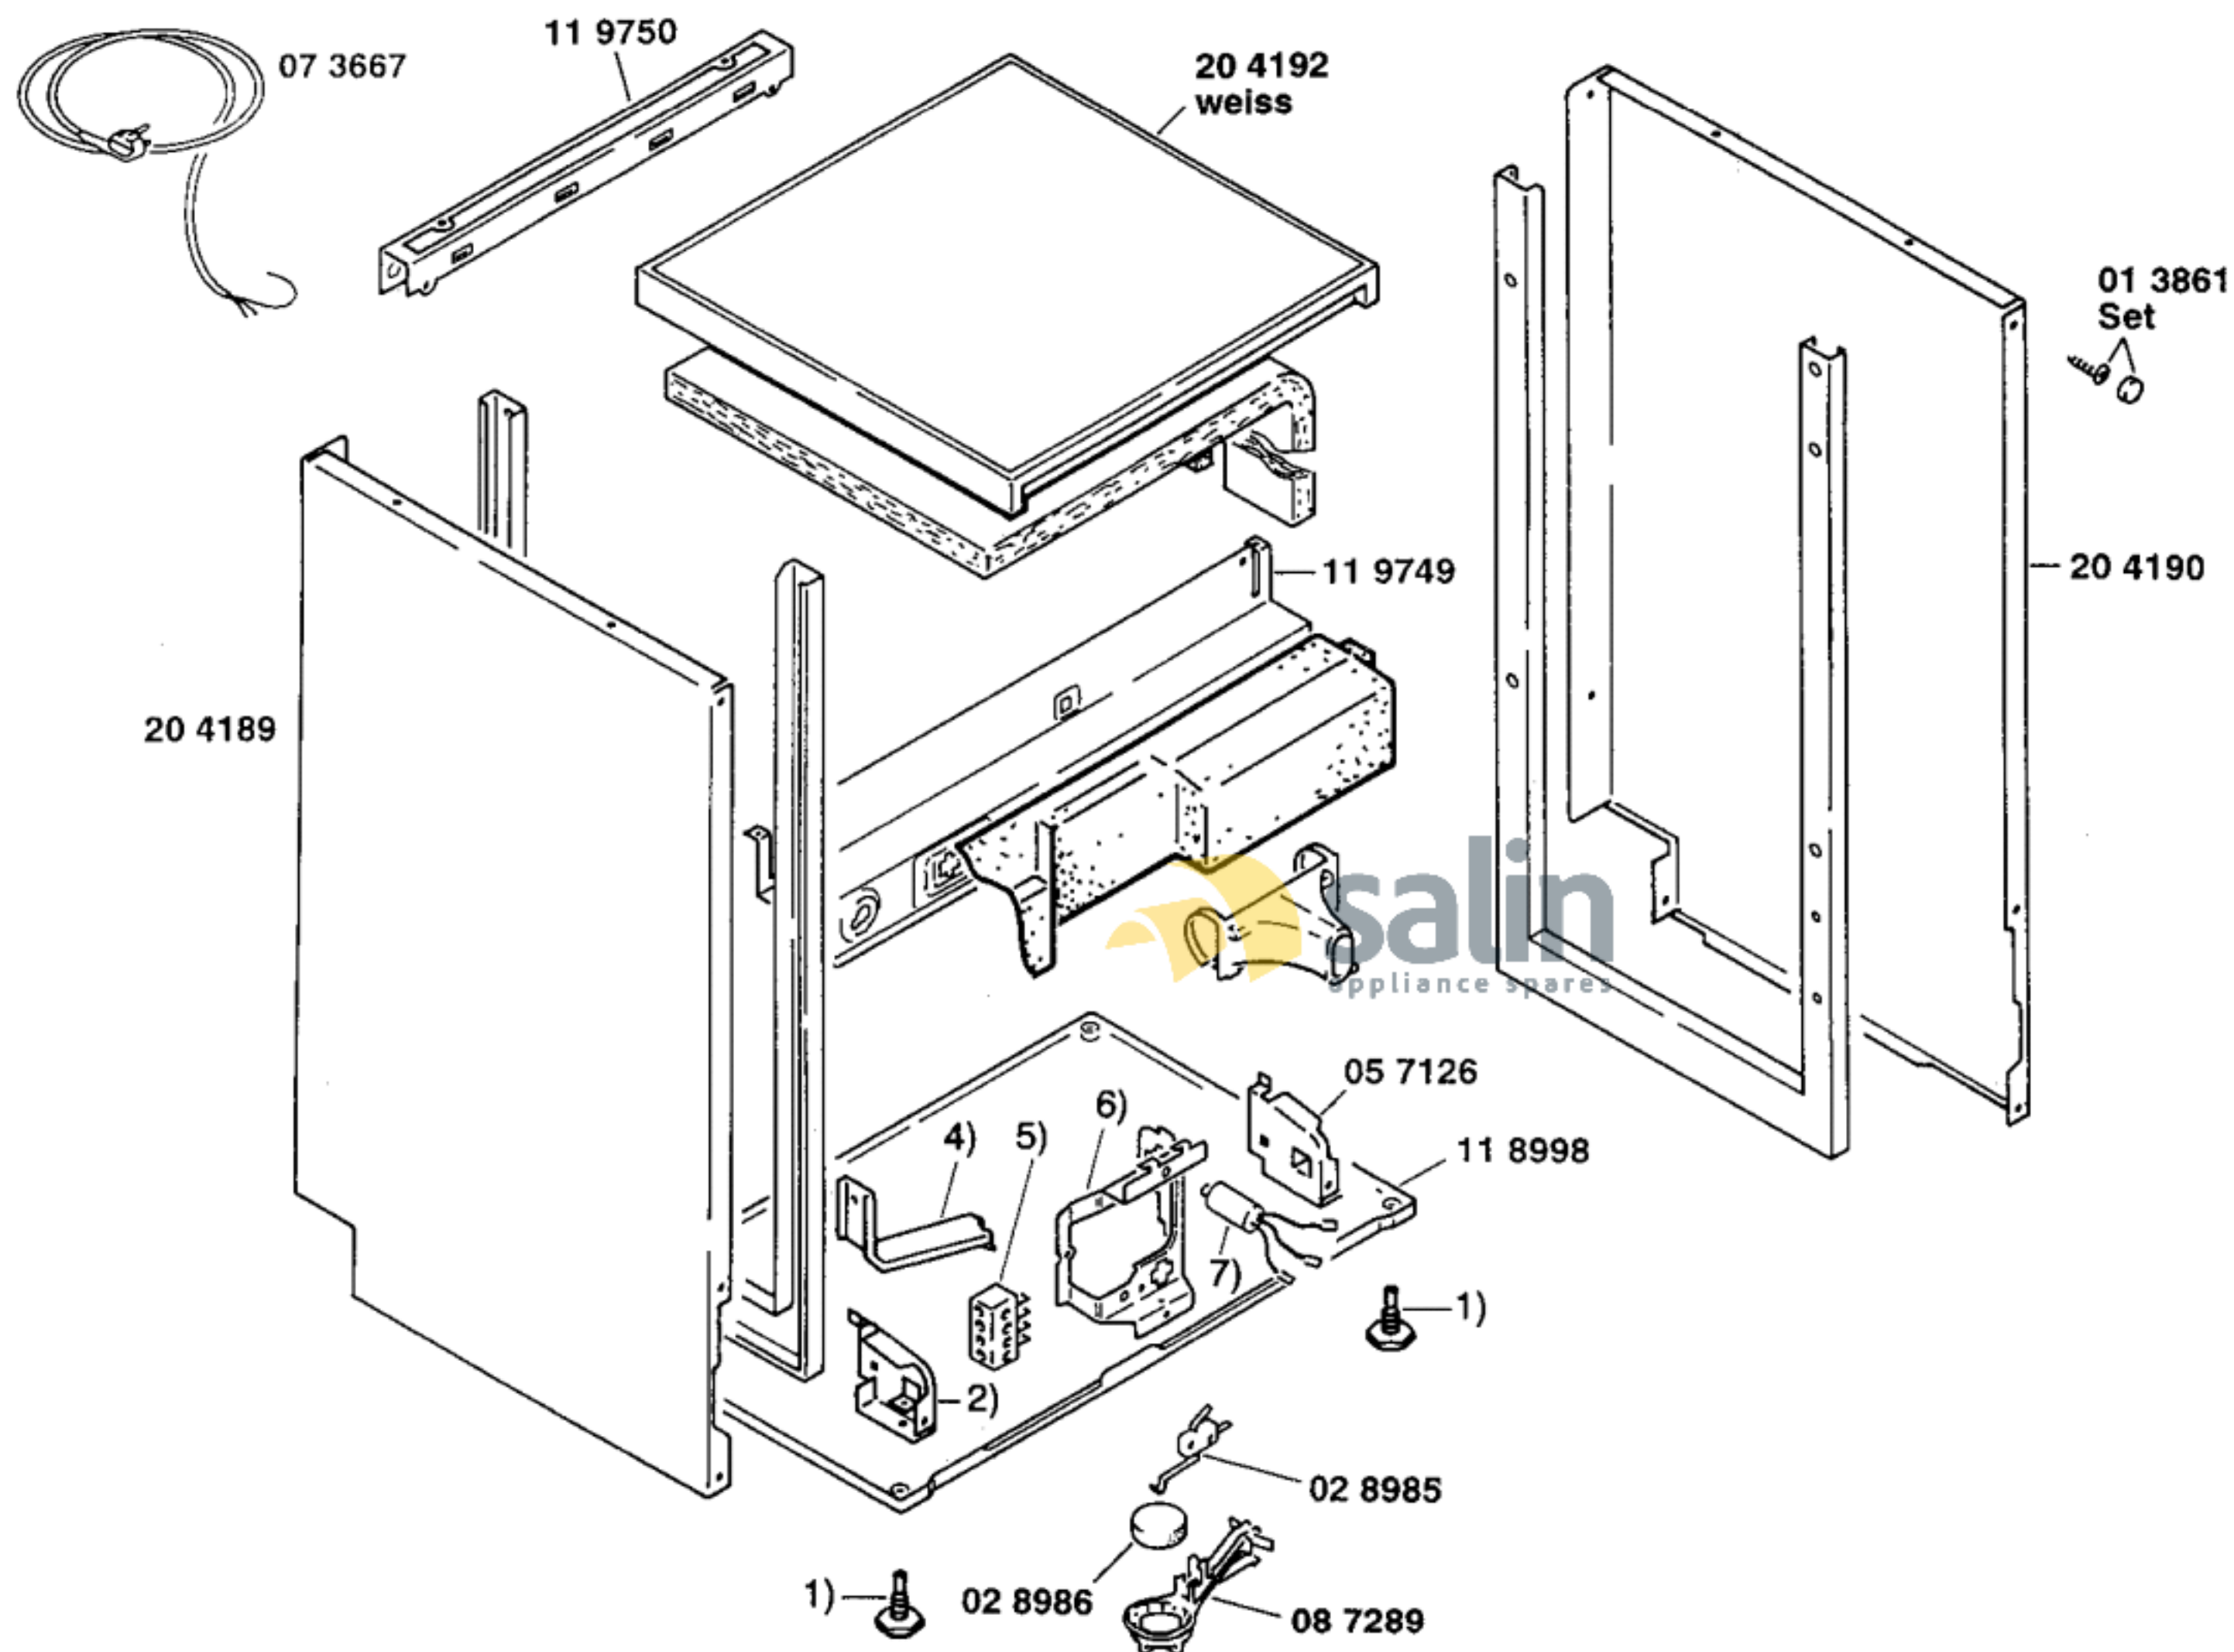
**BOSCH**SMS1012/01-EU1  
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent – Nummern – Konstante  
3740 . . . . .

160793-4/2

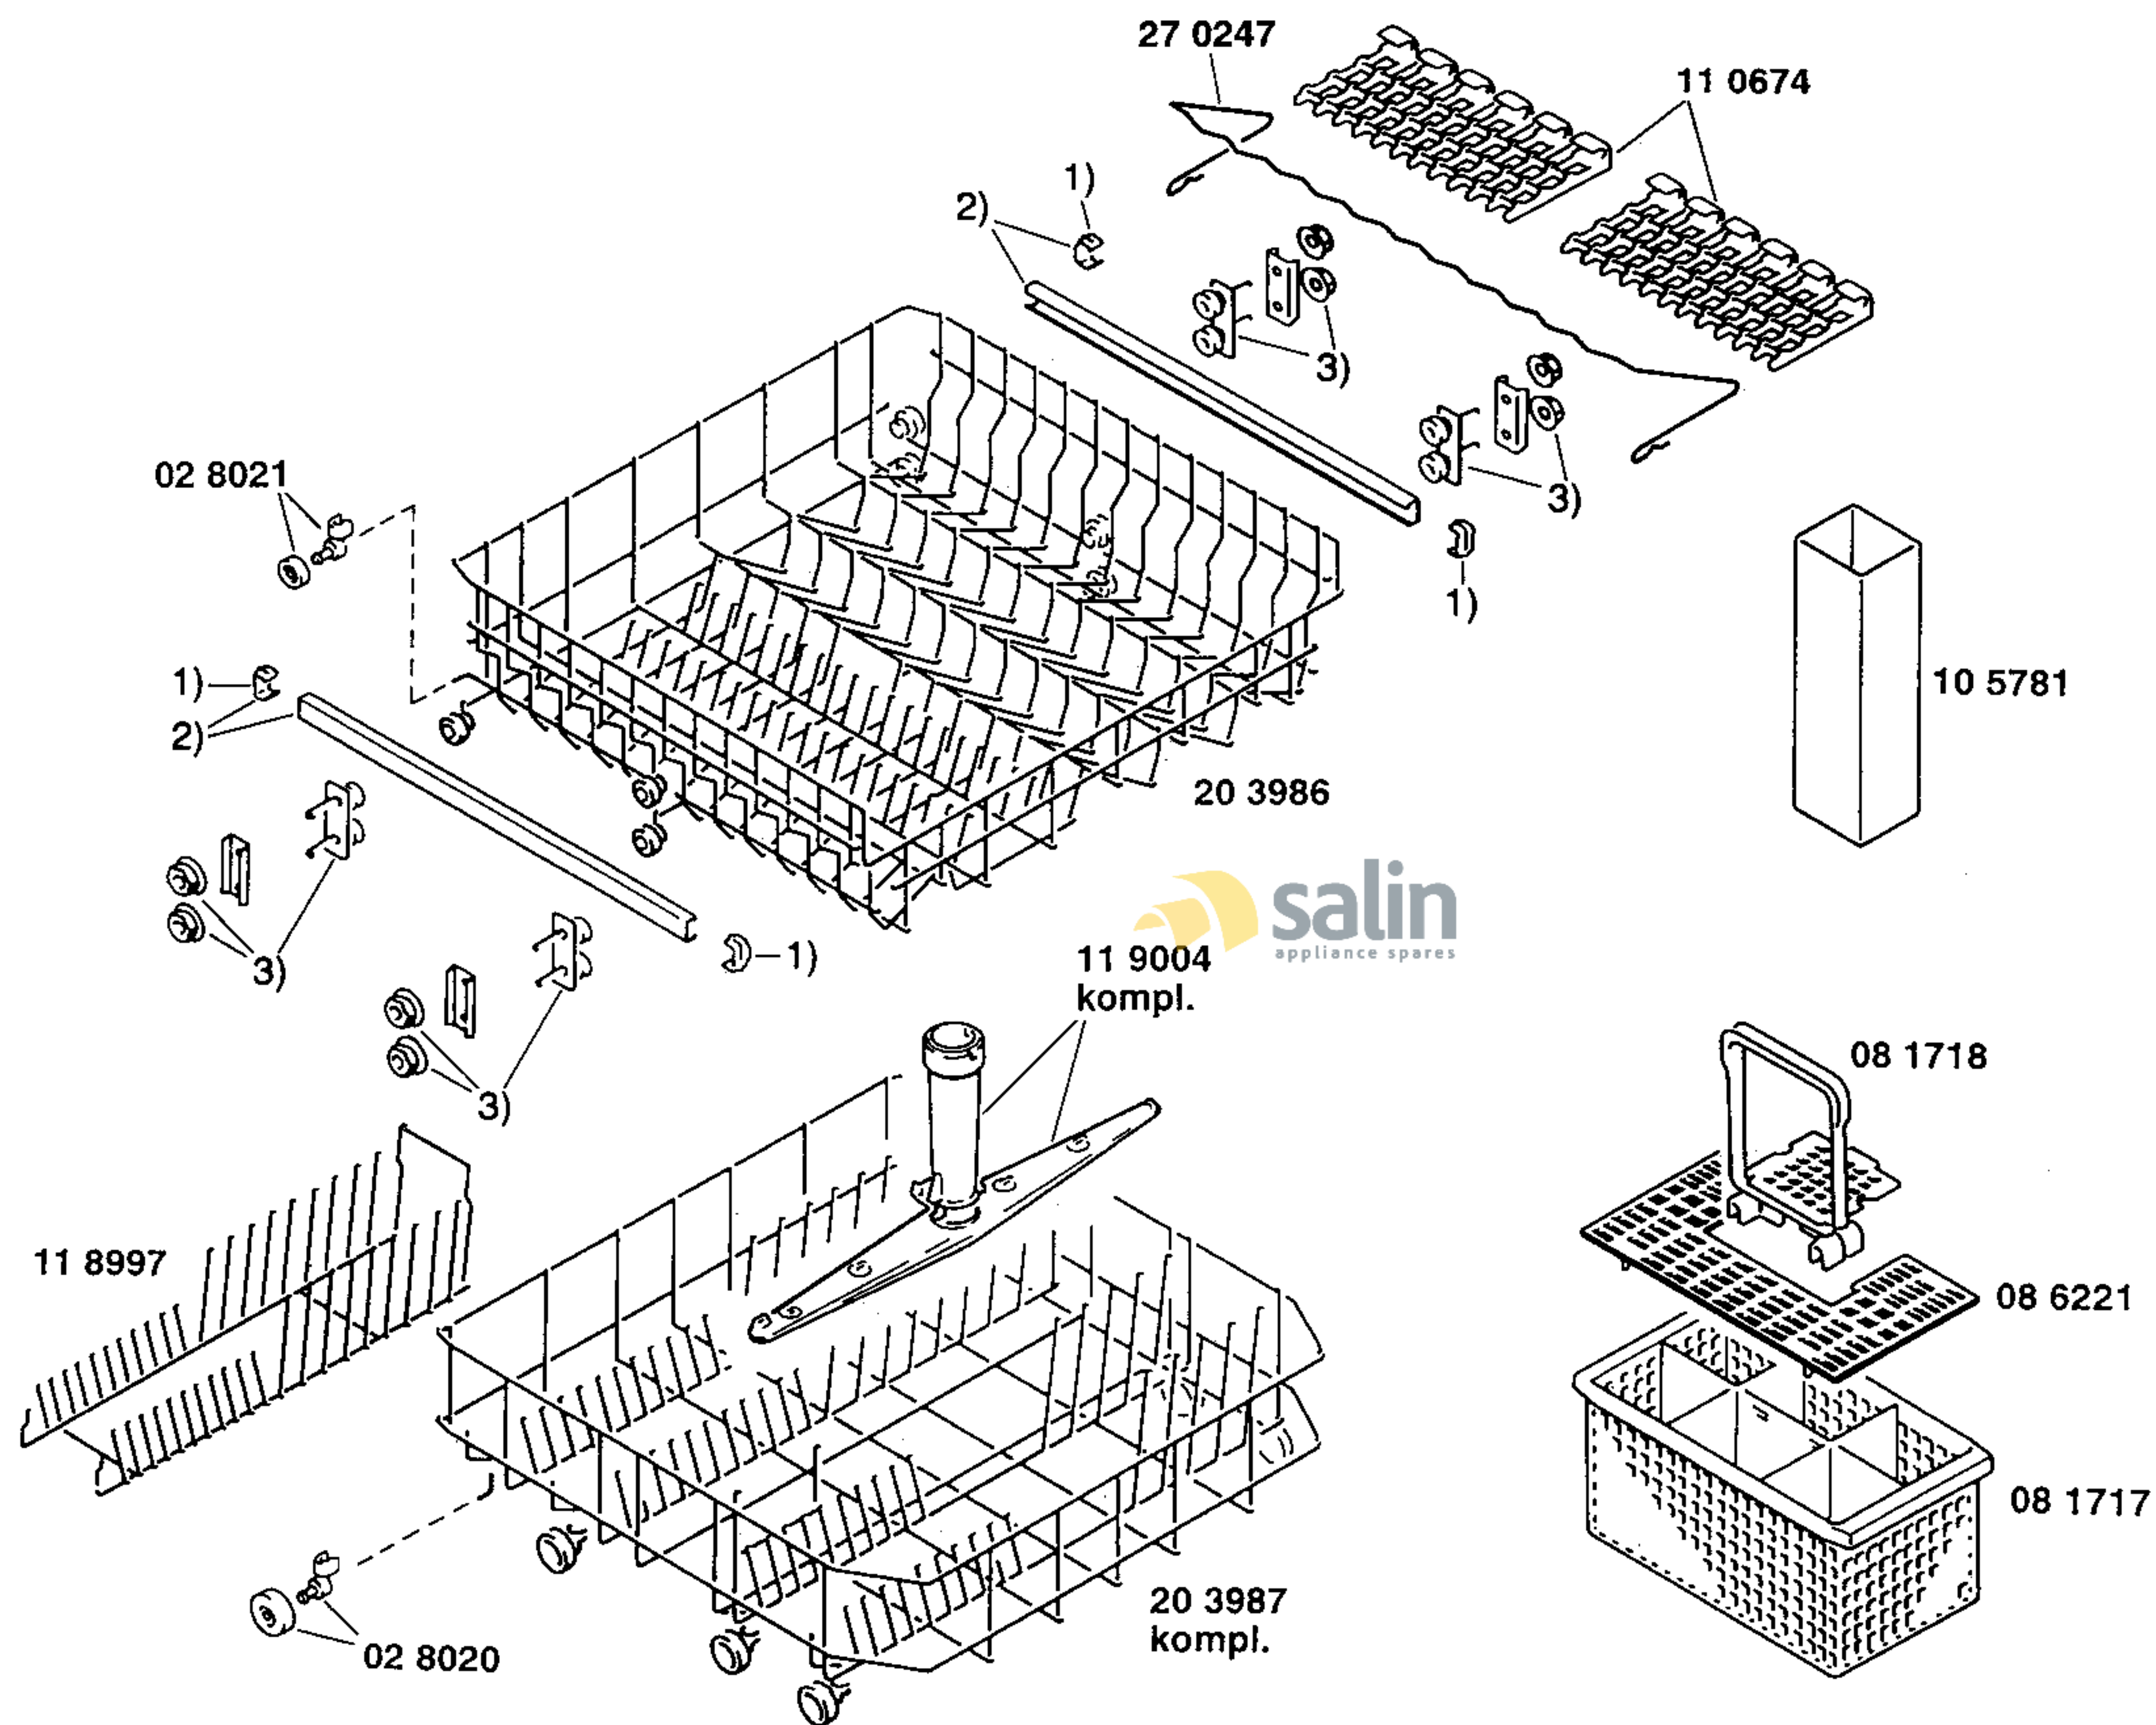
FAMILY : SMS1012

MODEL NO: SMS1012/01

Check Position No/Part No or Replacement No

Ident – Nummern – Konstante  
3740 . . . . .

- 1) 02 9020  
2) 05 7127  
3) —  
4) 08 6400  
5) 02 7385  
6) 08 6970  
7) 04 3889

**BOSCH**SMS1012/01-EU1  
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE  
StandgeräteIdent – Nummern – Konstante  
3740 . . . . .

- 1) 01 9202  
2) 11 0668  
3) 05 6247