


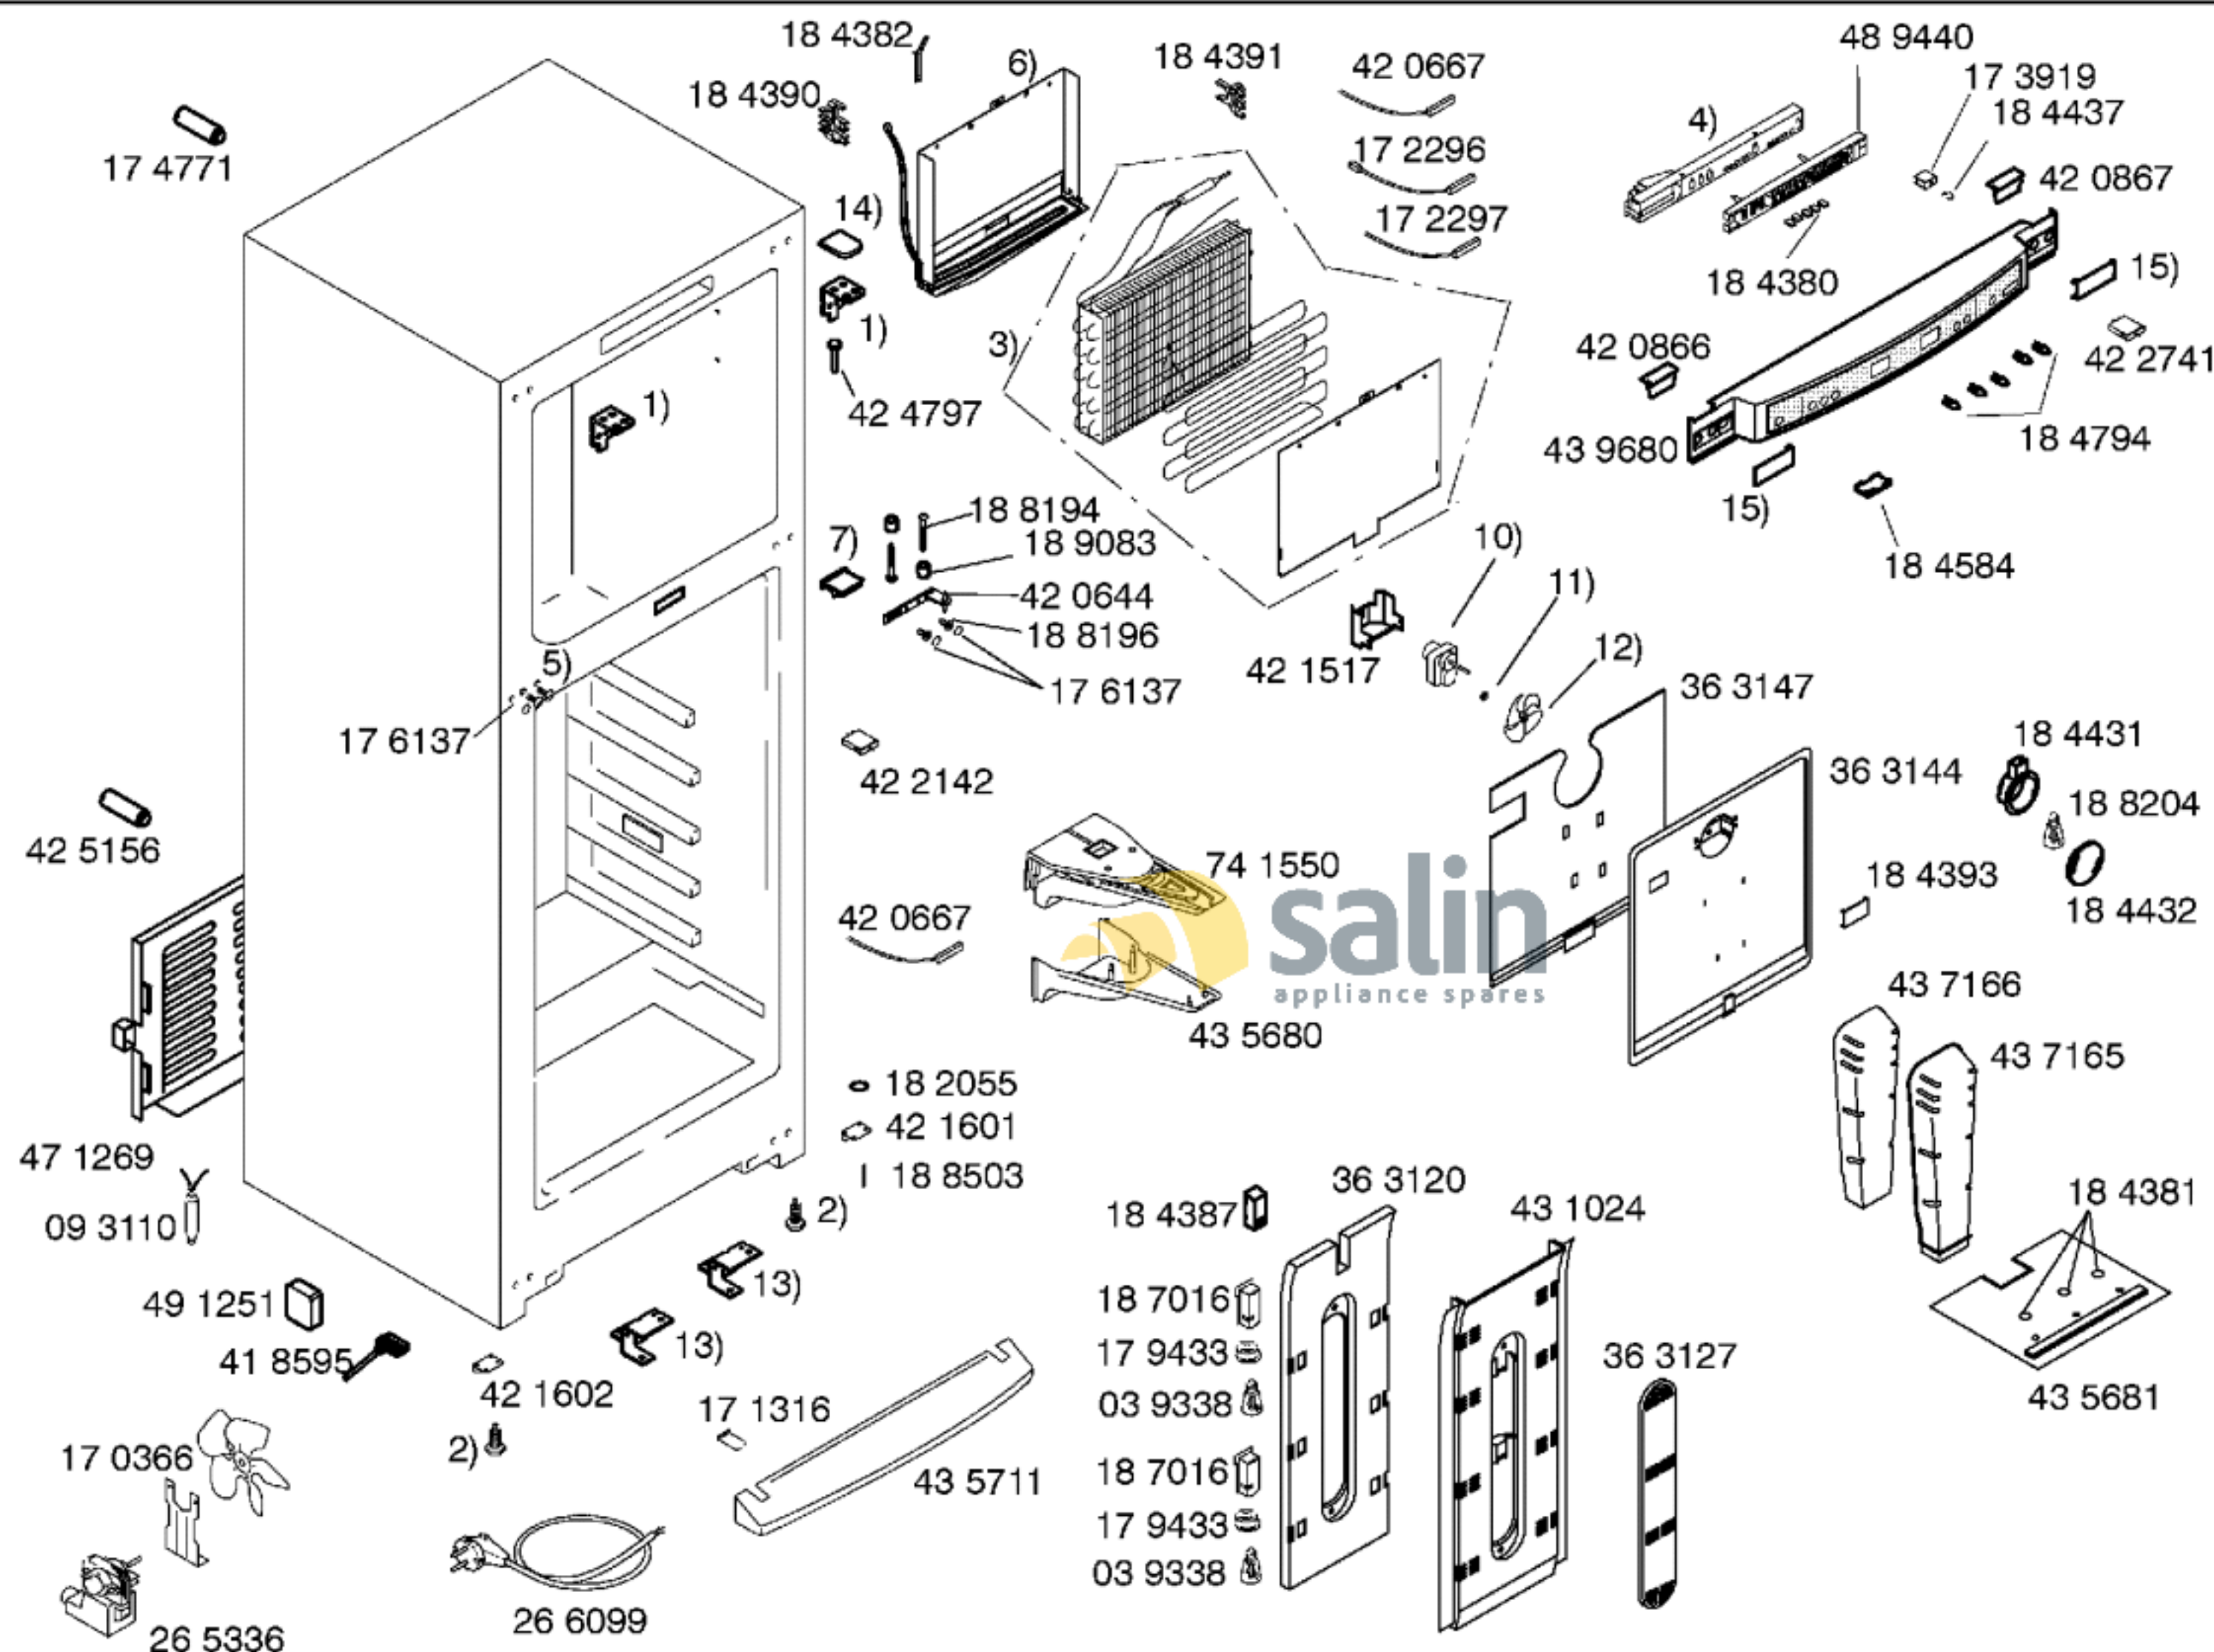


Mat. - Nr. - Konstante
3740

Gebrauchsanweisung
59 1294

(DE,TR)


1) 42 4798
2) 42 4340
3) 43 5737
V01,V02
44 0979
V03

4) 49 3812
5) 16 5552
6) 43 5739
7) 41 8128
8) 43 5738
9) 43 5707
10) 49 1665
11) 17 1508
12) 17 1565
13) 49 1346
14) 42 4799
15) 42 0864

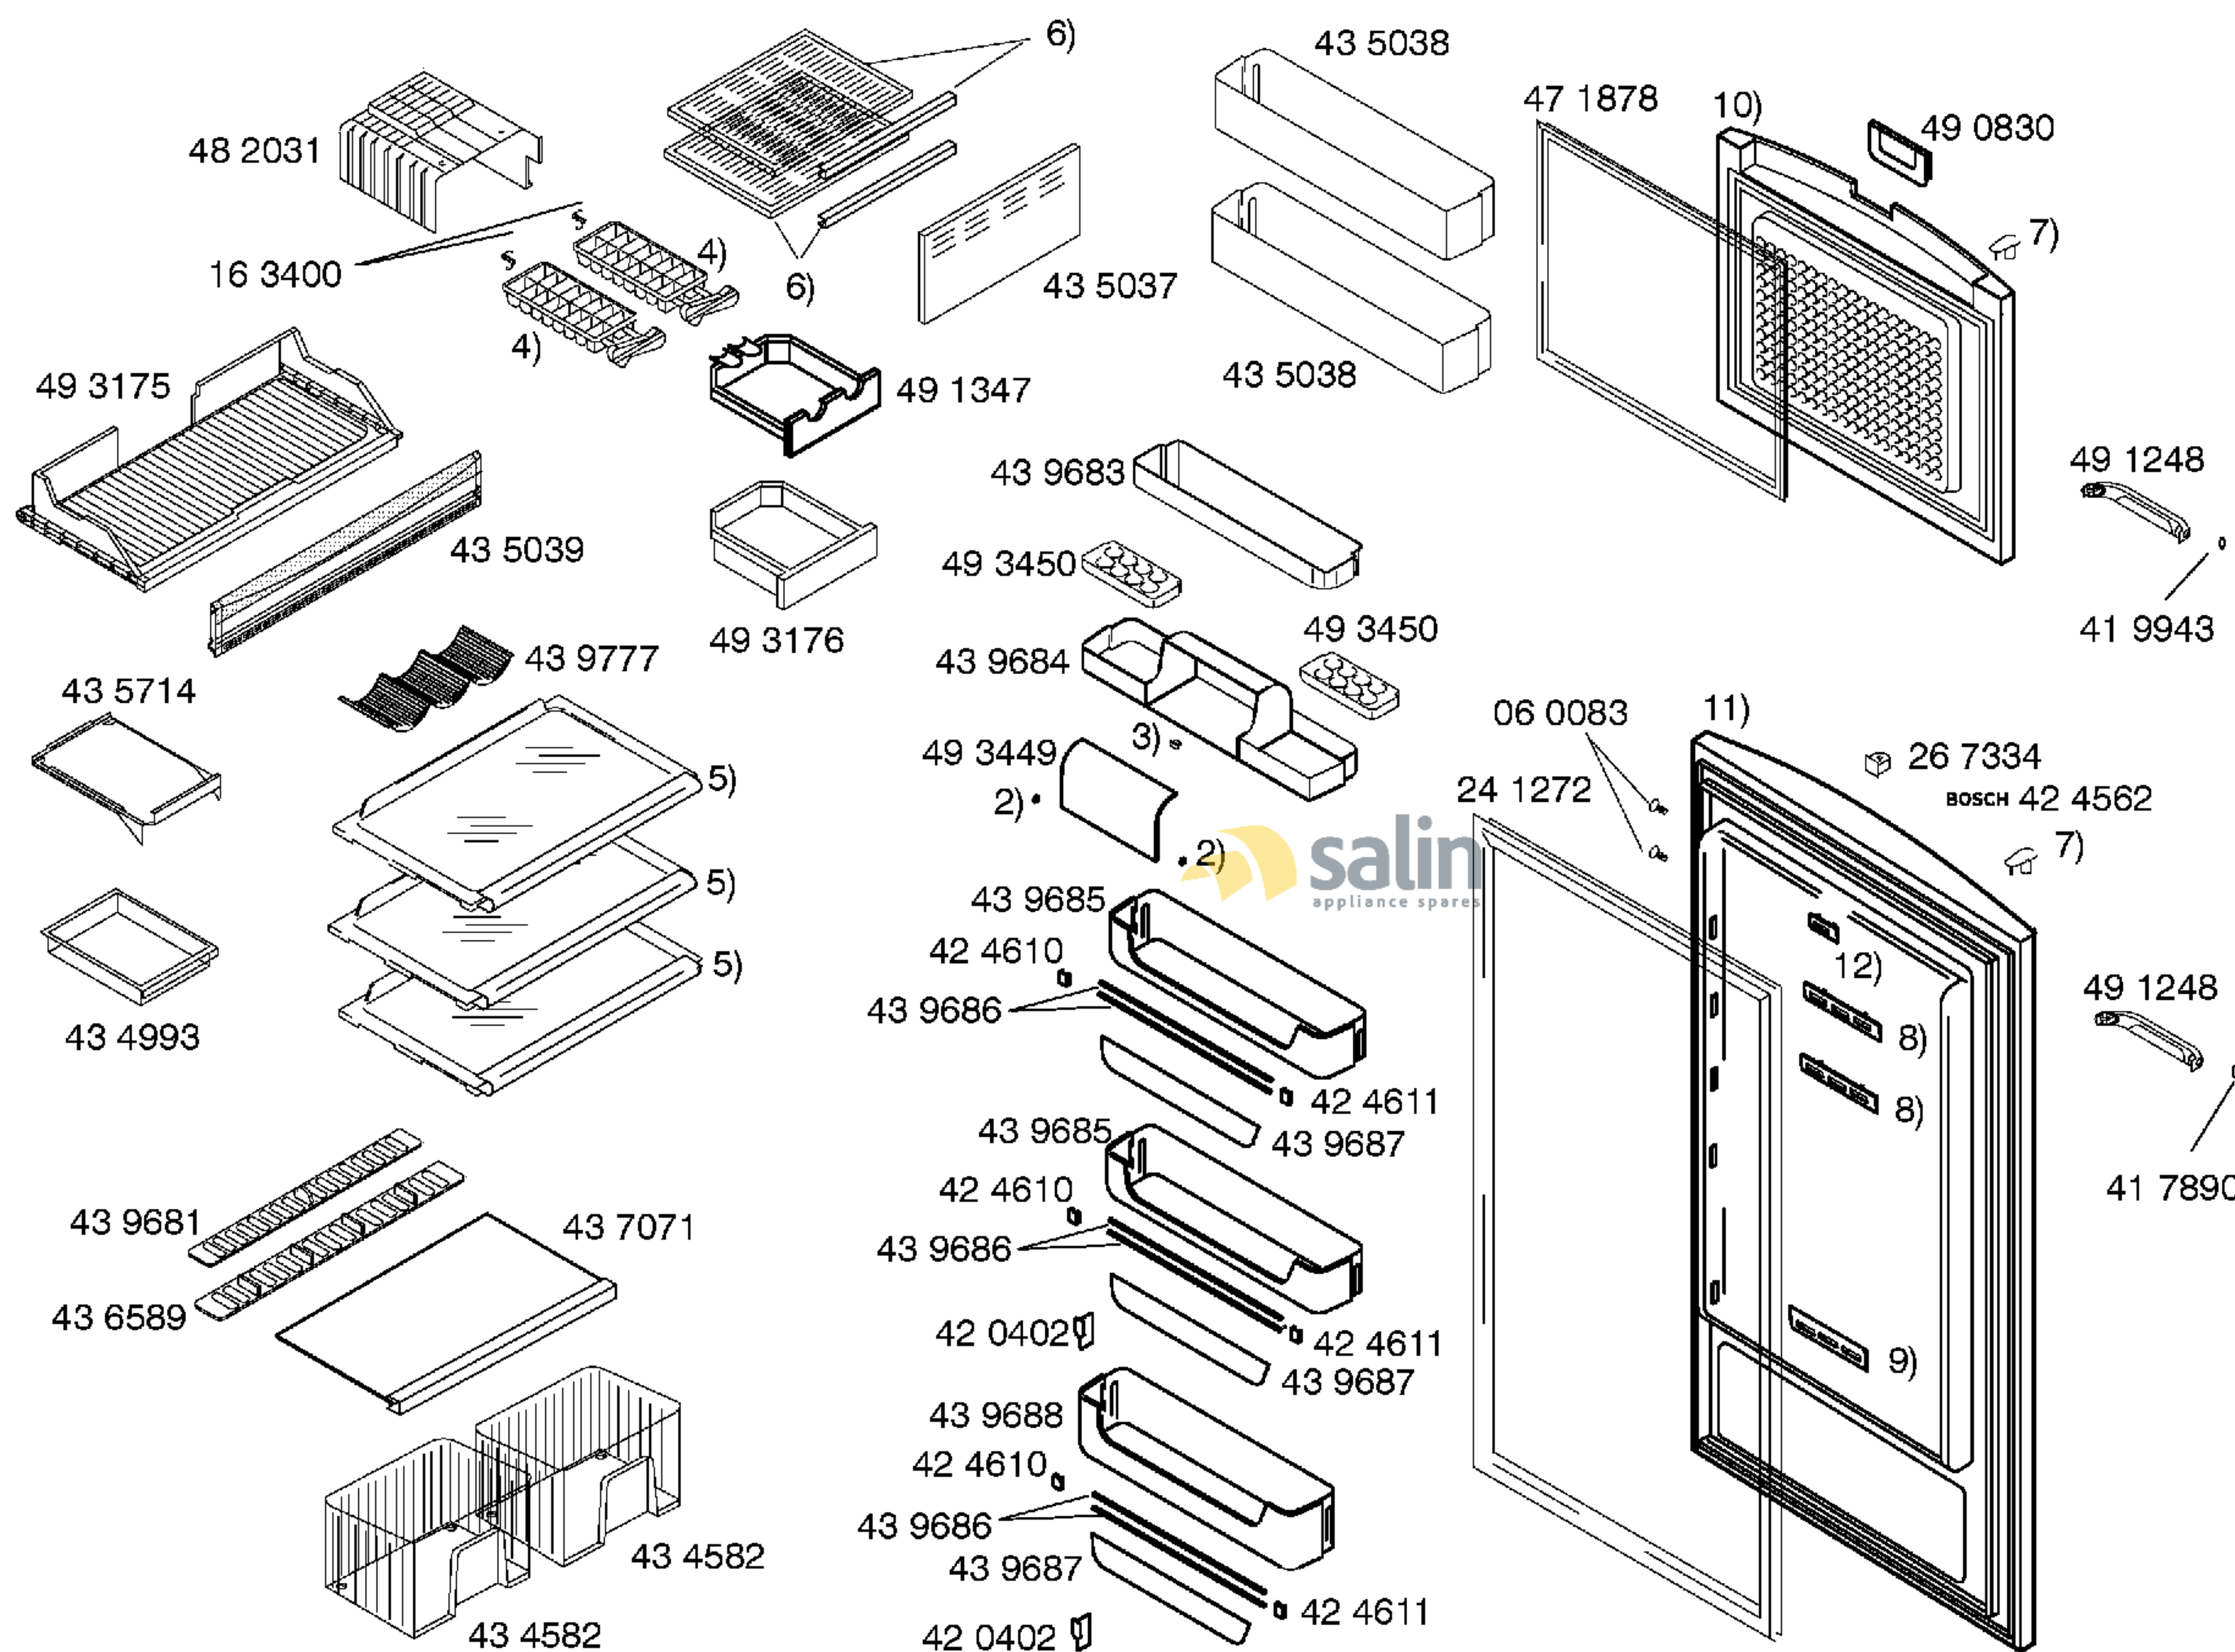

Mat. - Nr. - Konstante
3740

- 1) 41 6844
- 2) 42 0568
- 3) 42 0751
- 4) 49 1361
- 5) 43 7243
- 6) 43 8709
- 7) 17 3857
- 8) 49 3815
- 9) 49 3814
- 10) 47 3372
- V01
- 47 3898
- V02,V03
- 11) 24 1858
- V01
- 24 2098
- V02,V03
- 12) 49 4446

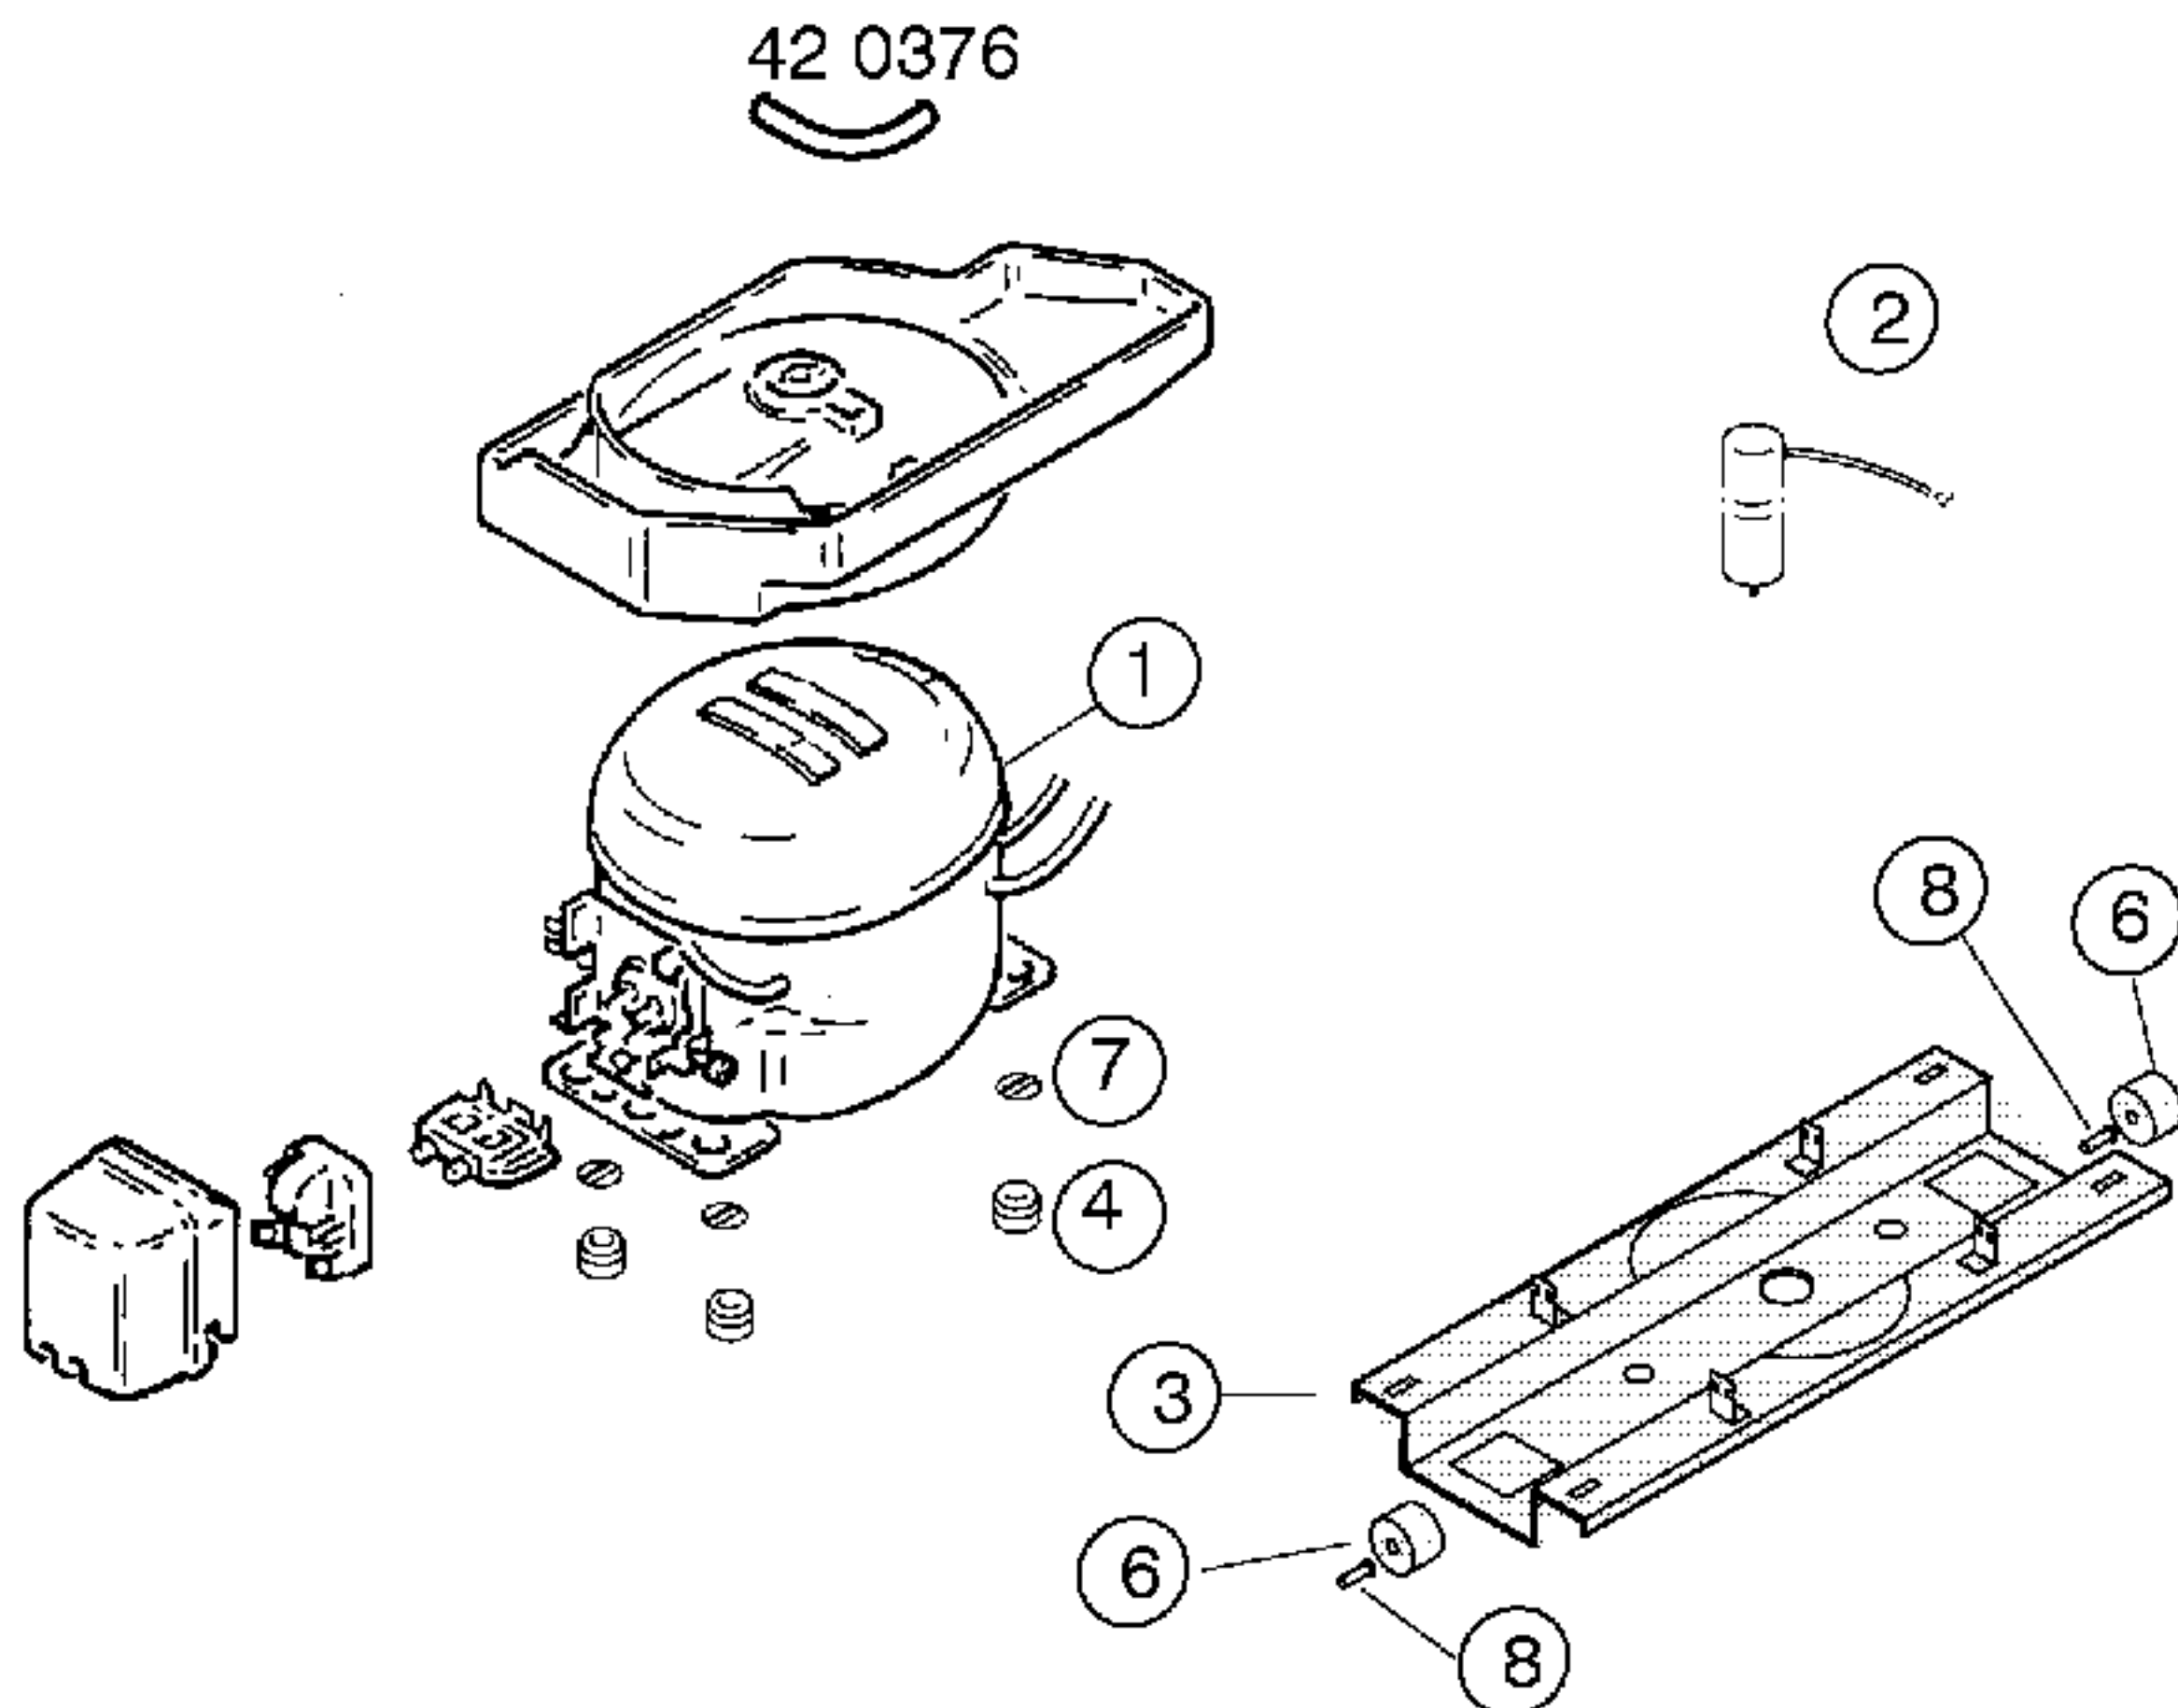

Pos.	ACC HXK12QQ		
1	14 5383		
2	17 4093		
3	35 4583		
4	16 3427		
5			
6	17 1318		
7	17 1519		
8	18 1014		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör Typ/Type/Tip Förderleistung/Delivery/Verim/h Anlaufstrom/Starting current/Giris akimi Widerstand/Resistance/Rezistans Ha/ Hi/aux.	ACC HXK12AA		
Temp.Reyler/Thermostat/Termostat Typ/Type/Tip Reglerstellung/Position/Termostat pozisyonu Schaltwerte/Acta kapama degerleri Valeurs de commutation/Termostat degeri (.abtaven' od)	..ein/acma °C ..aus"/kapama ..alarm'		
Füllmenge/Fill. quantity/ Dolum miktarı	R600	g	
Anschlusswert/Comm. load/Giris gucu	W		
Heizung/Heater/Rezistans Widerstand/Resistance/Direnc Leistung/Power/Guc	Ω W		
Ventilador/Blower/Vantilatör Widerstand/Resistance/Rezistans	Ω		
Magnetventil/Magnetic valve/Manyetik valf Widerstand/Resistance/Rezistans Spannung/Voltage/Gerilim	Ω V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız