


**BOSCH**

SMS2032/01-EU1, weiss
 SMS2032EE/01-E1, weiss
 SMS2032II/01-I1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident - Nummern - Konstante
 3740

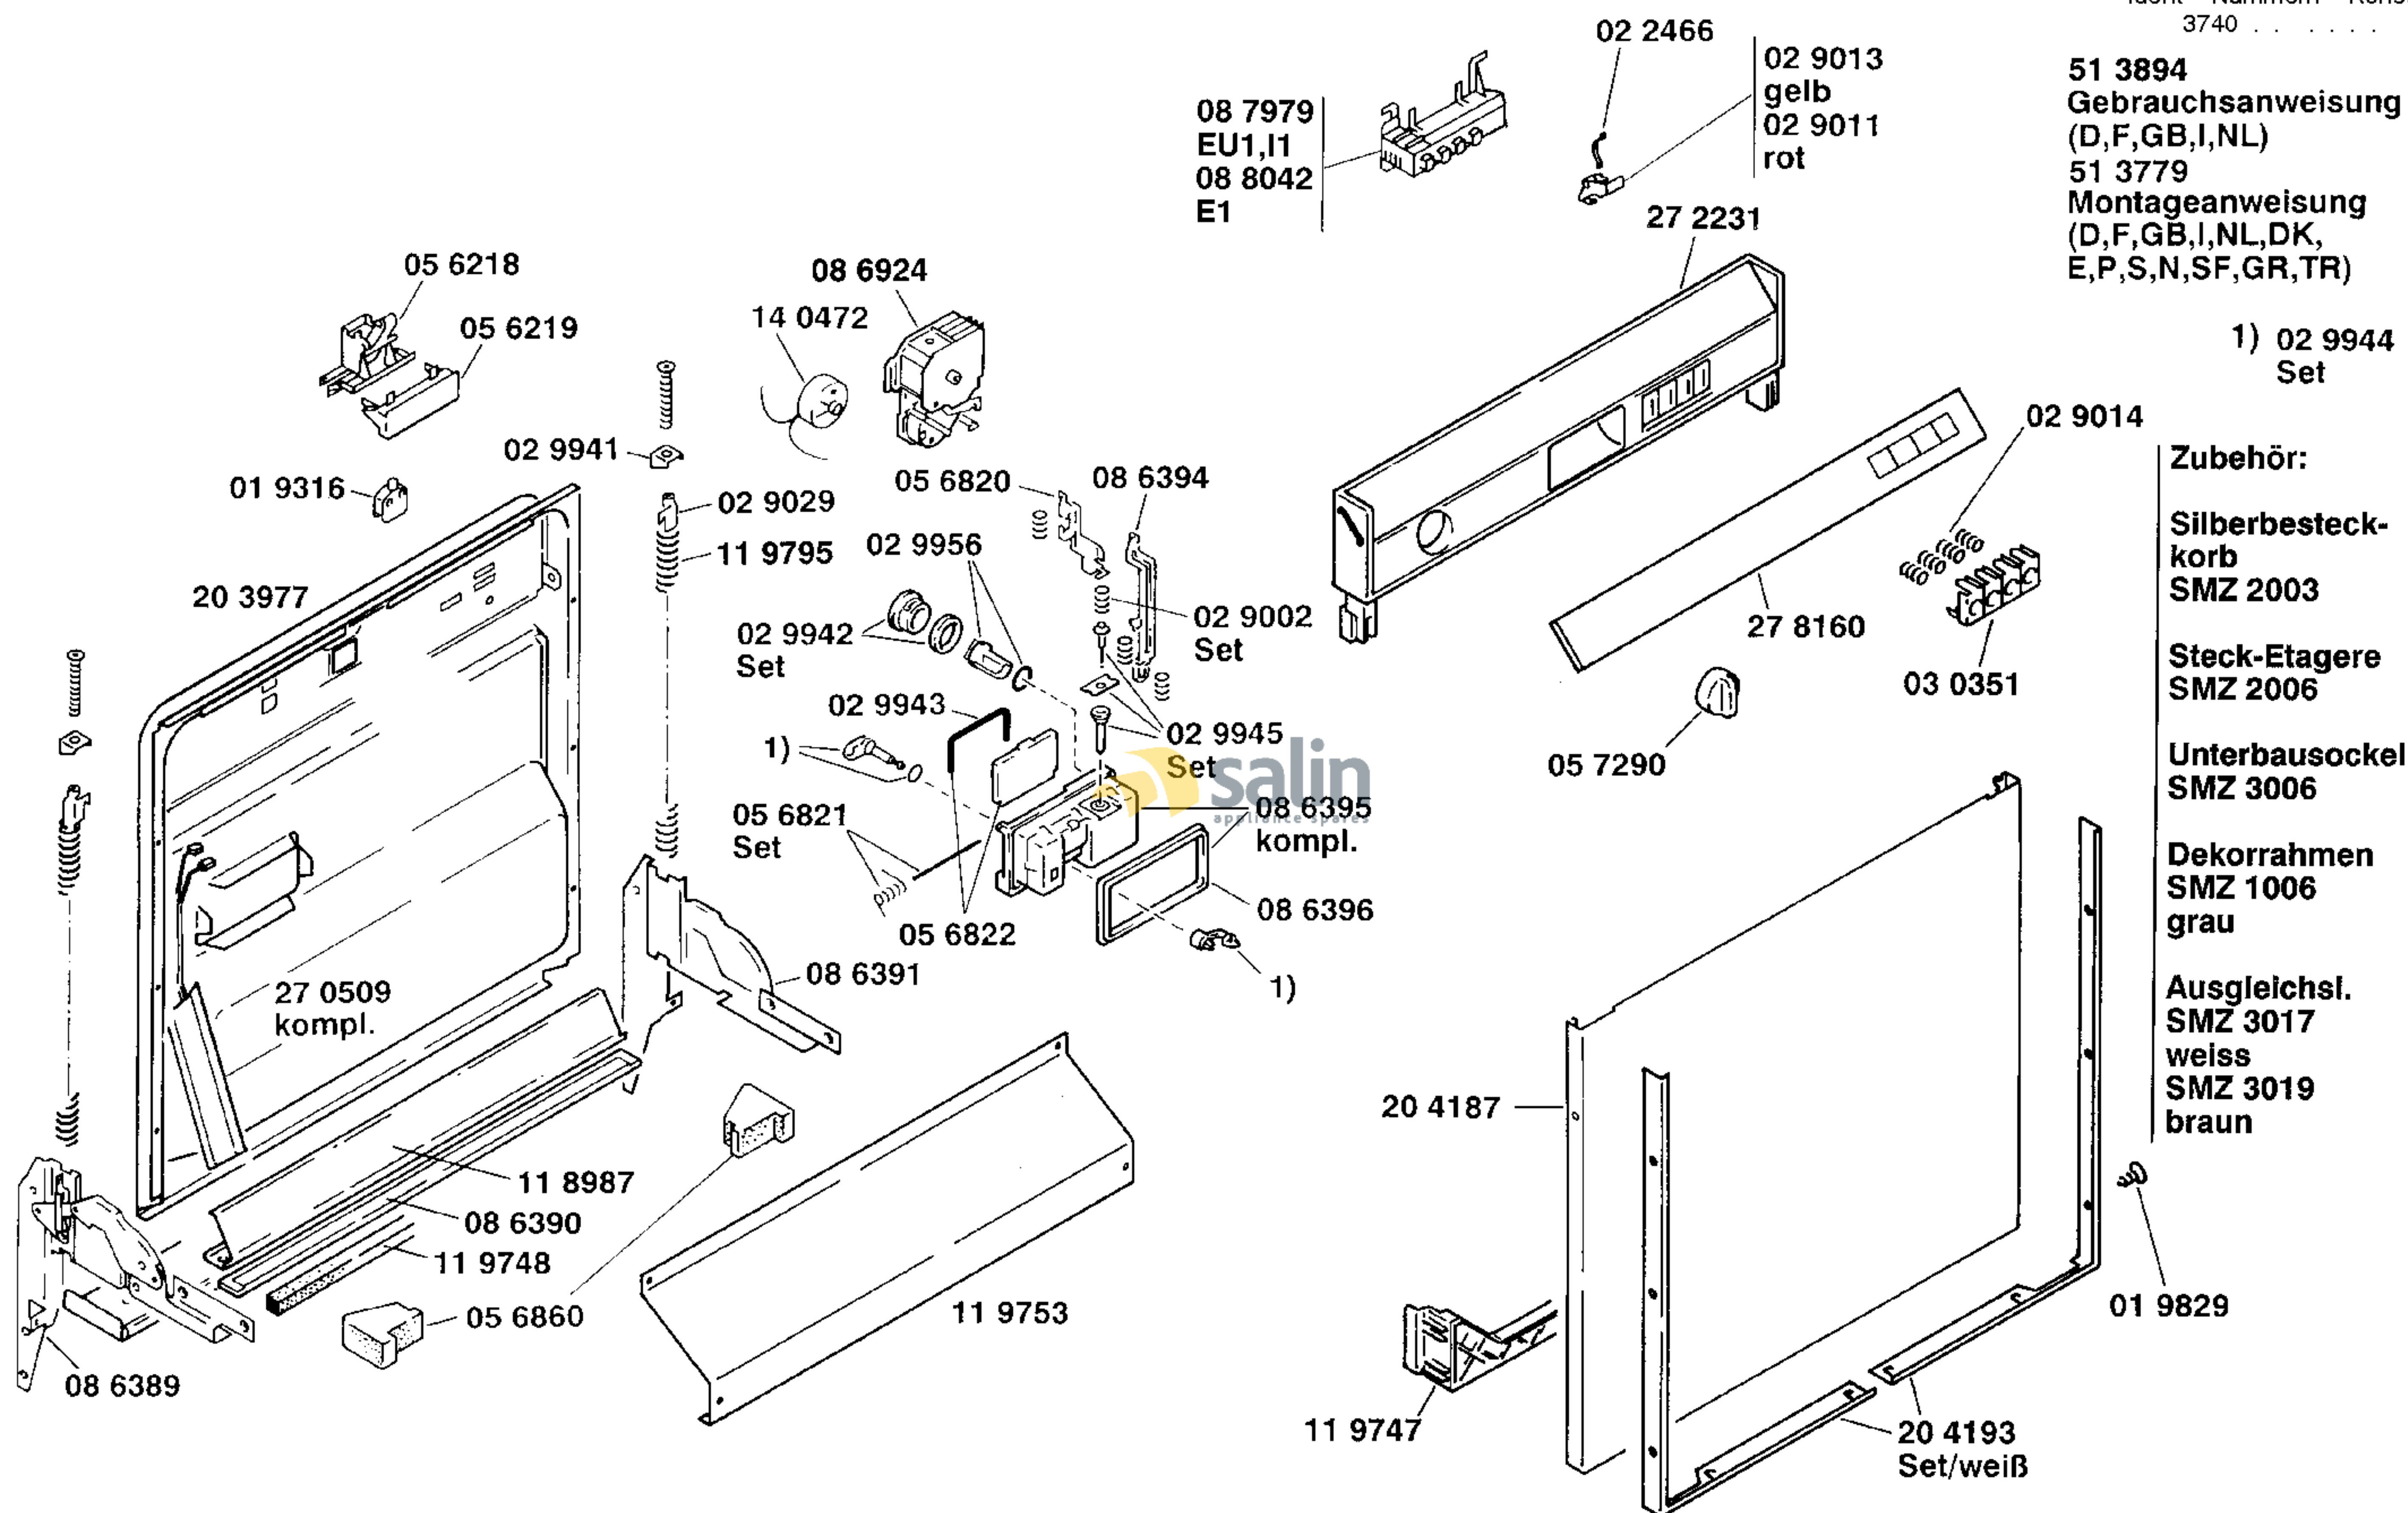

E160719-4/1

FAMILY : SMS2032EE

MODEL NO: SMS2032EE/01


Check Position No/Part No or Replacement No

**BOSCH**

SMS2032/01-EU1, weiss
 SMS2032EE/01-E1, weiss
 SMS2032II/01-I1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident – Nummern – Konstante
 3740

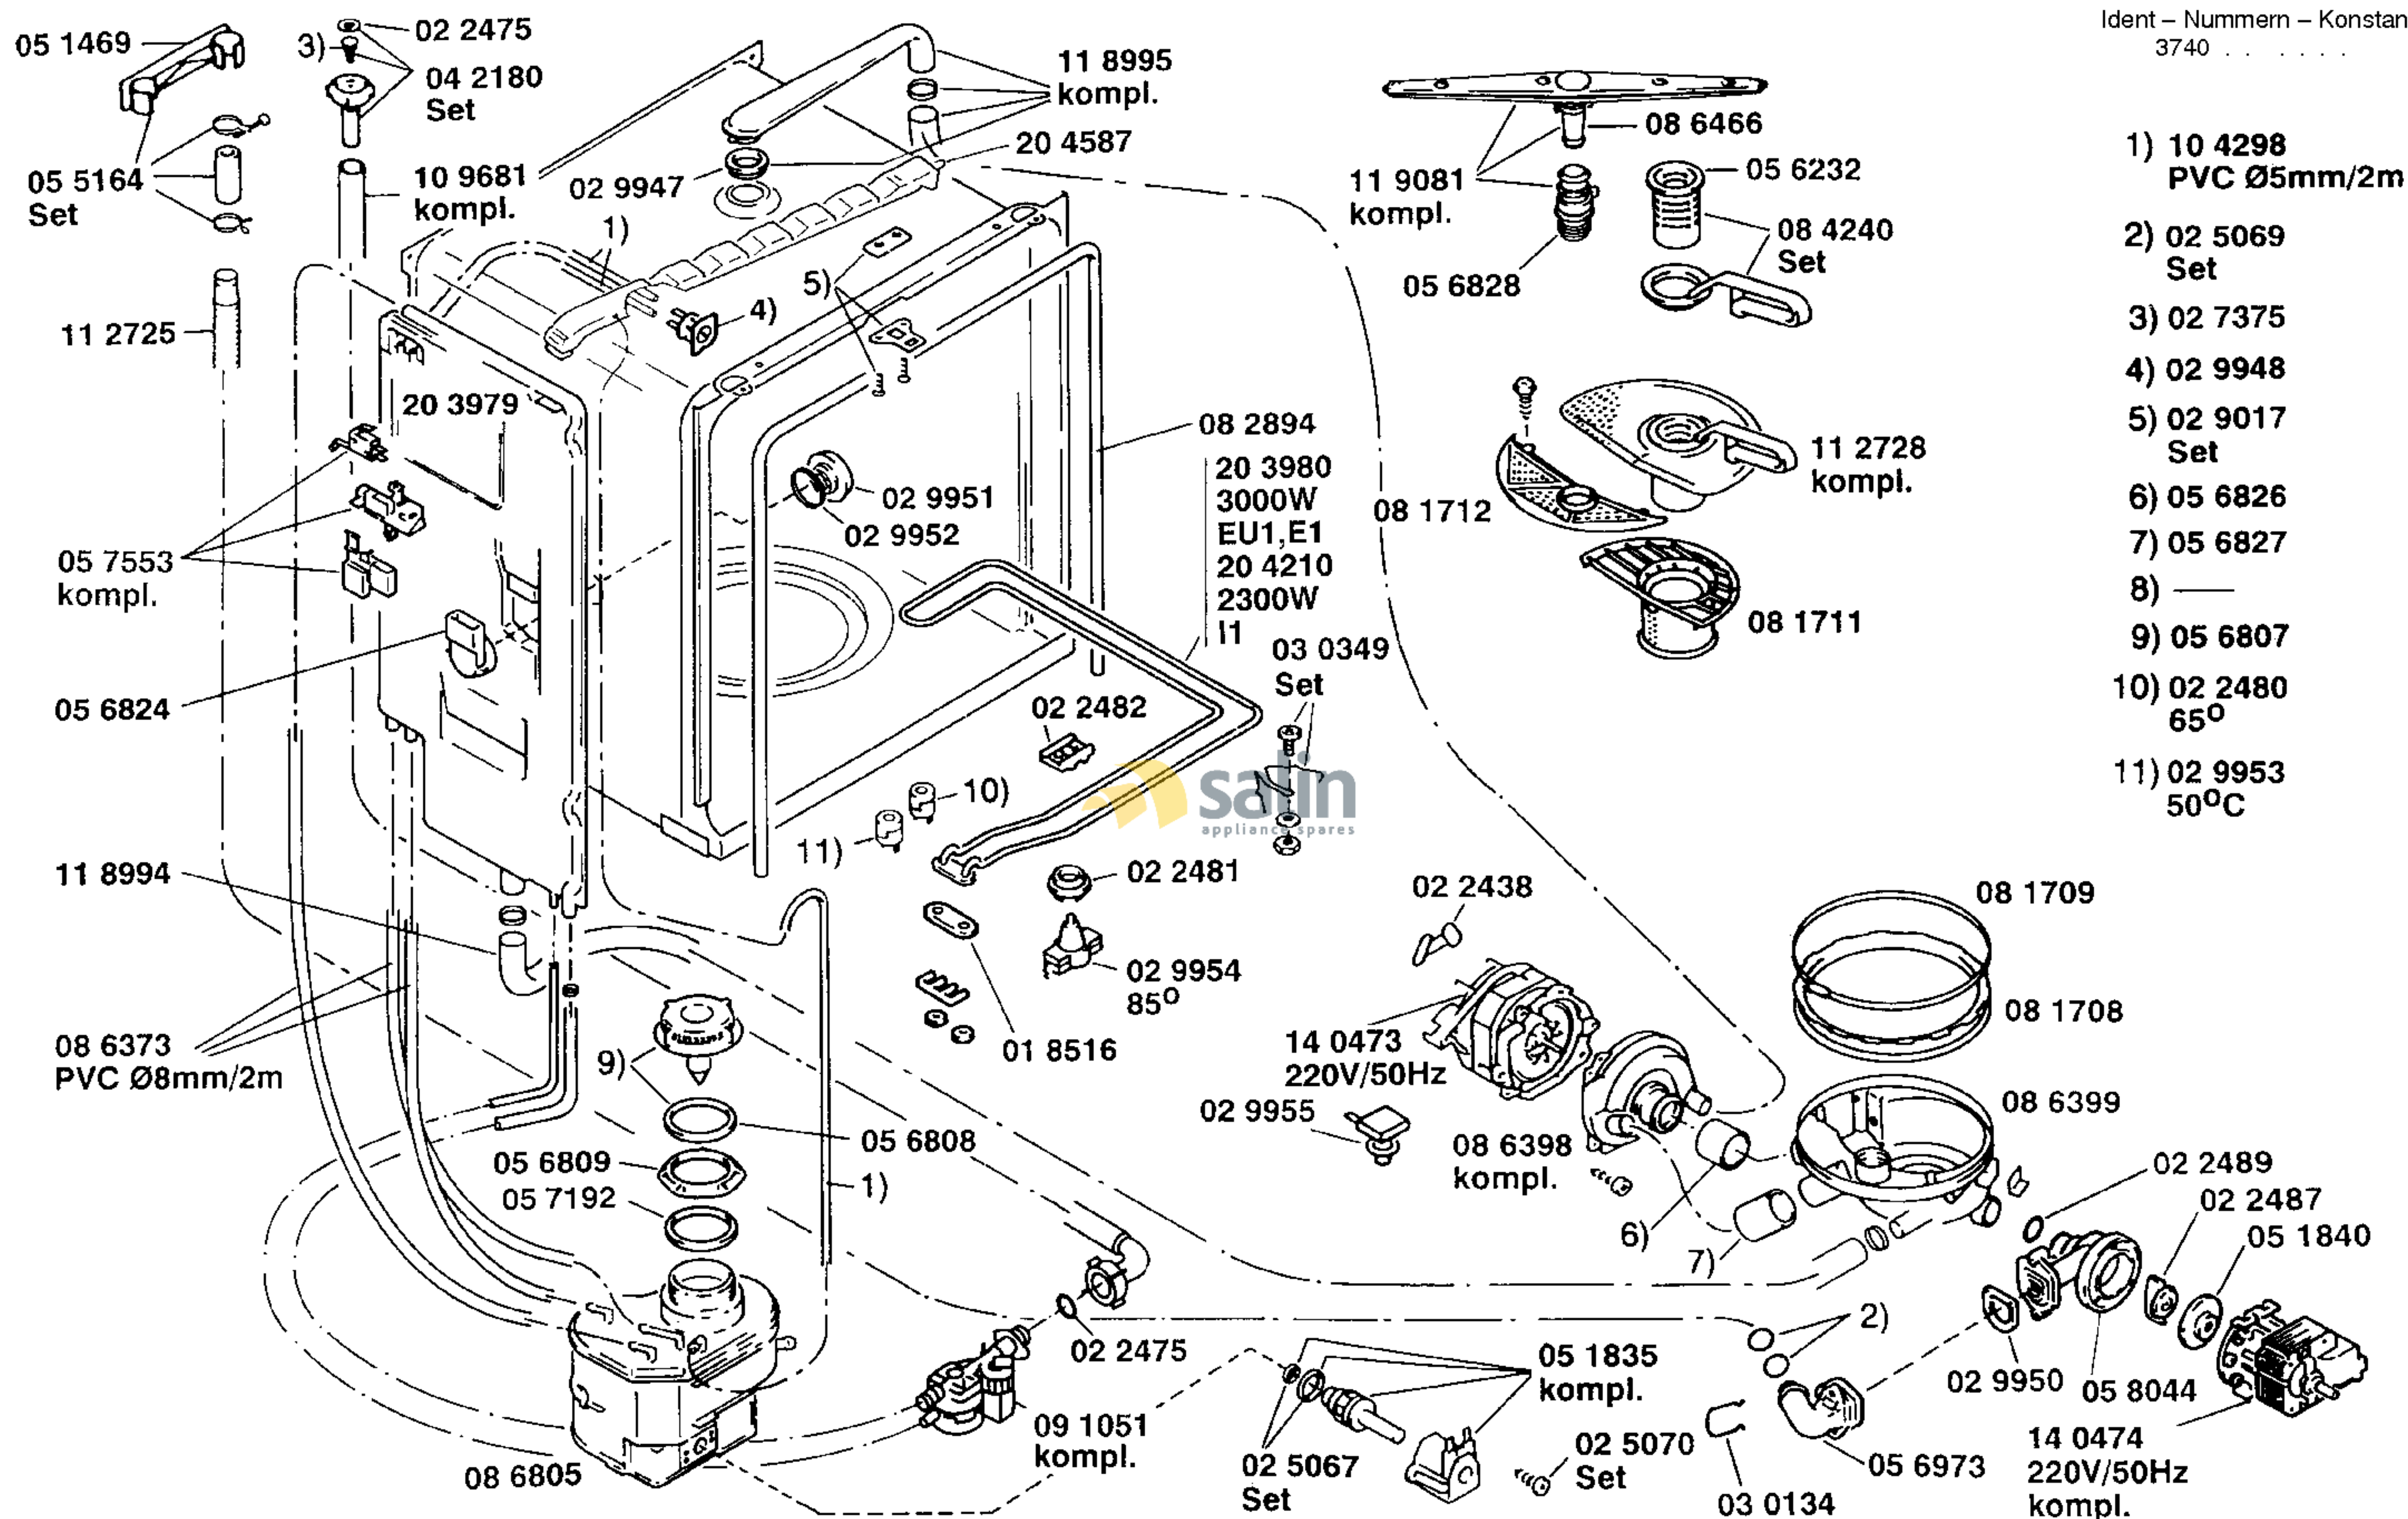

E160719-4/2

FAMILY : SMS2032EE

MODEL NO: SMS2032EE/01


Check Position No/Part No or Replacement No

**BOSCH**

SMS2032/01-EU1, weiss
 SMS2032EE/01-E1, weiss
 SMS2032II/01-I1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident – Nummern – Konstante
 3740

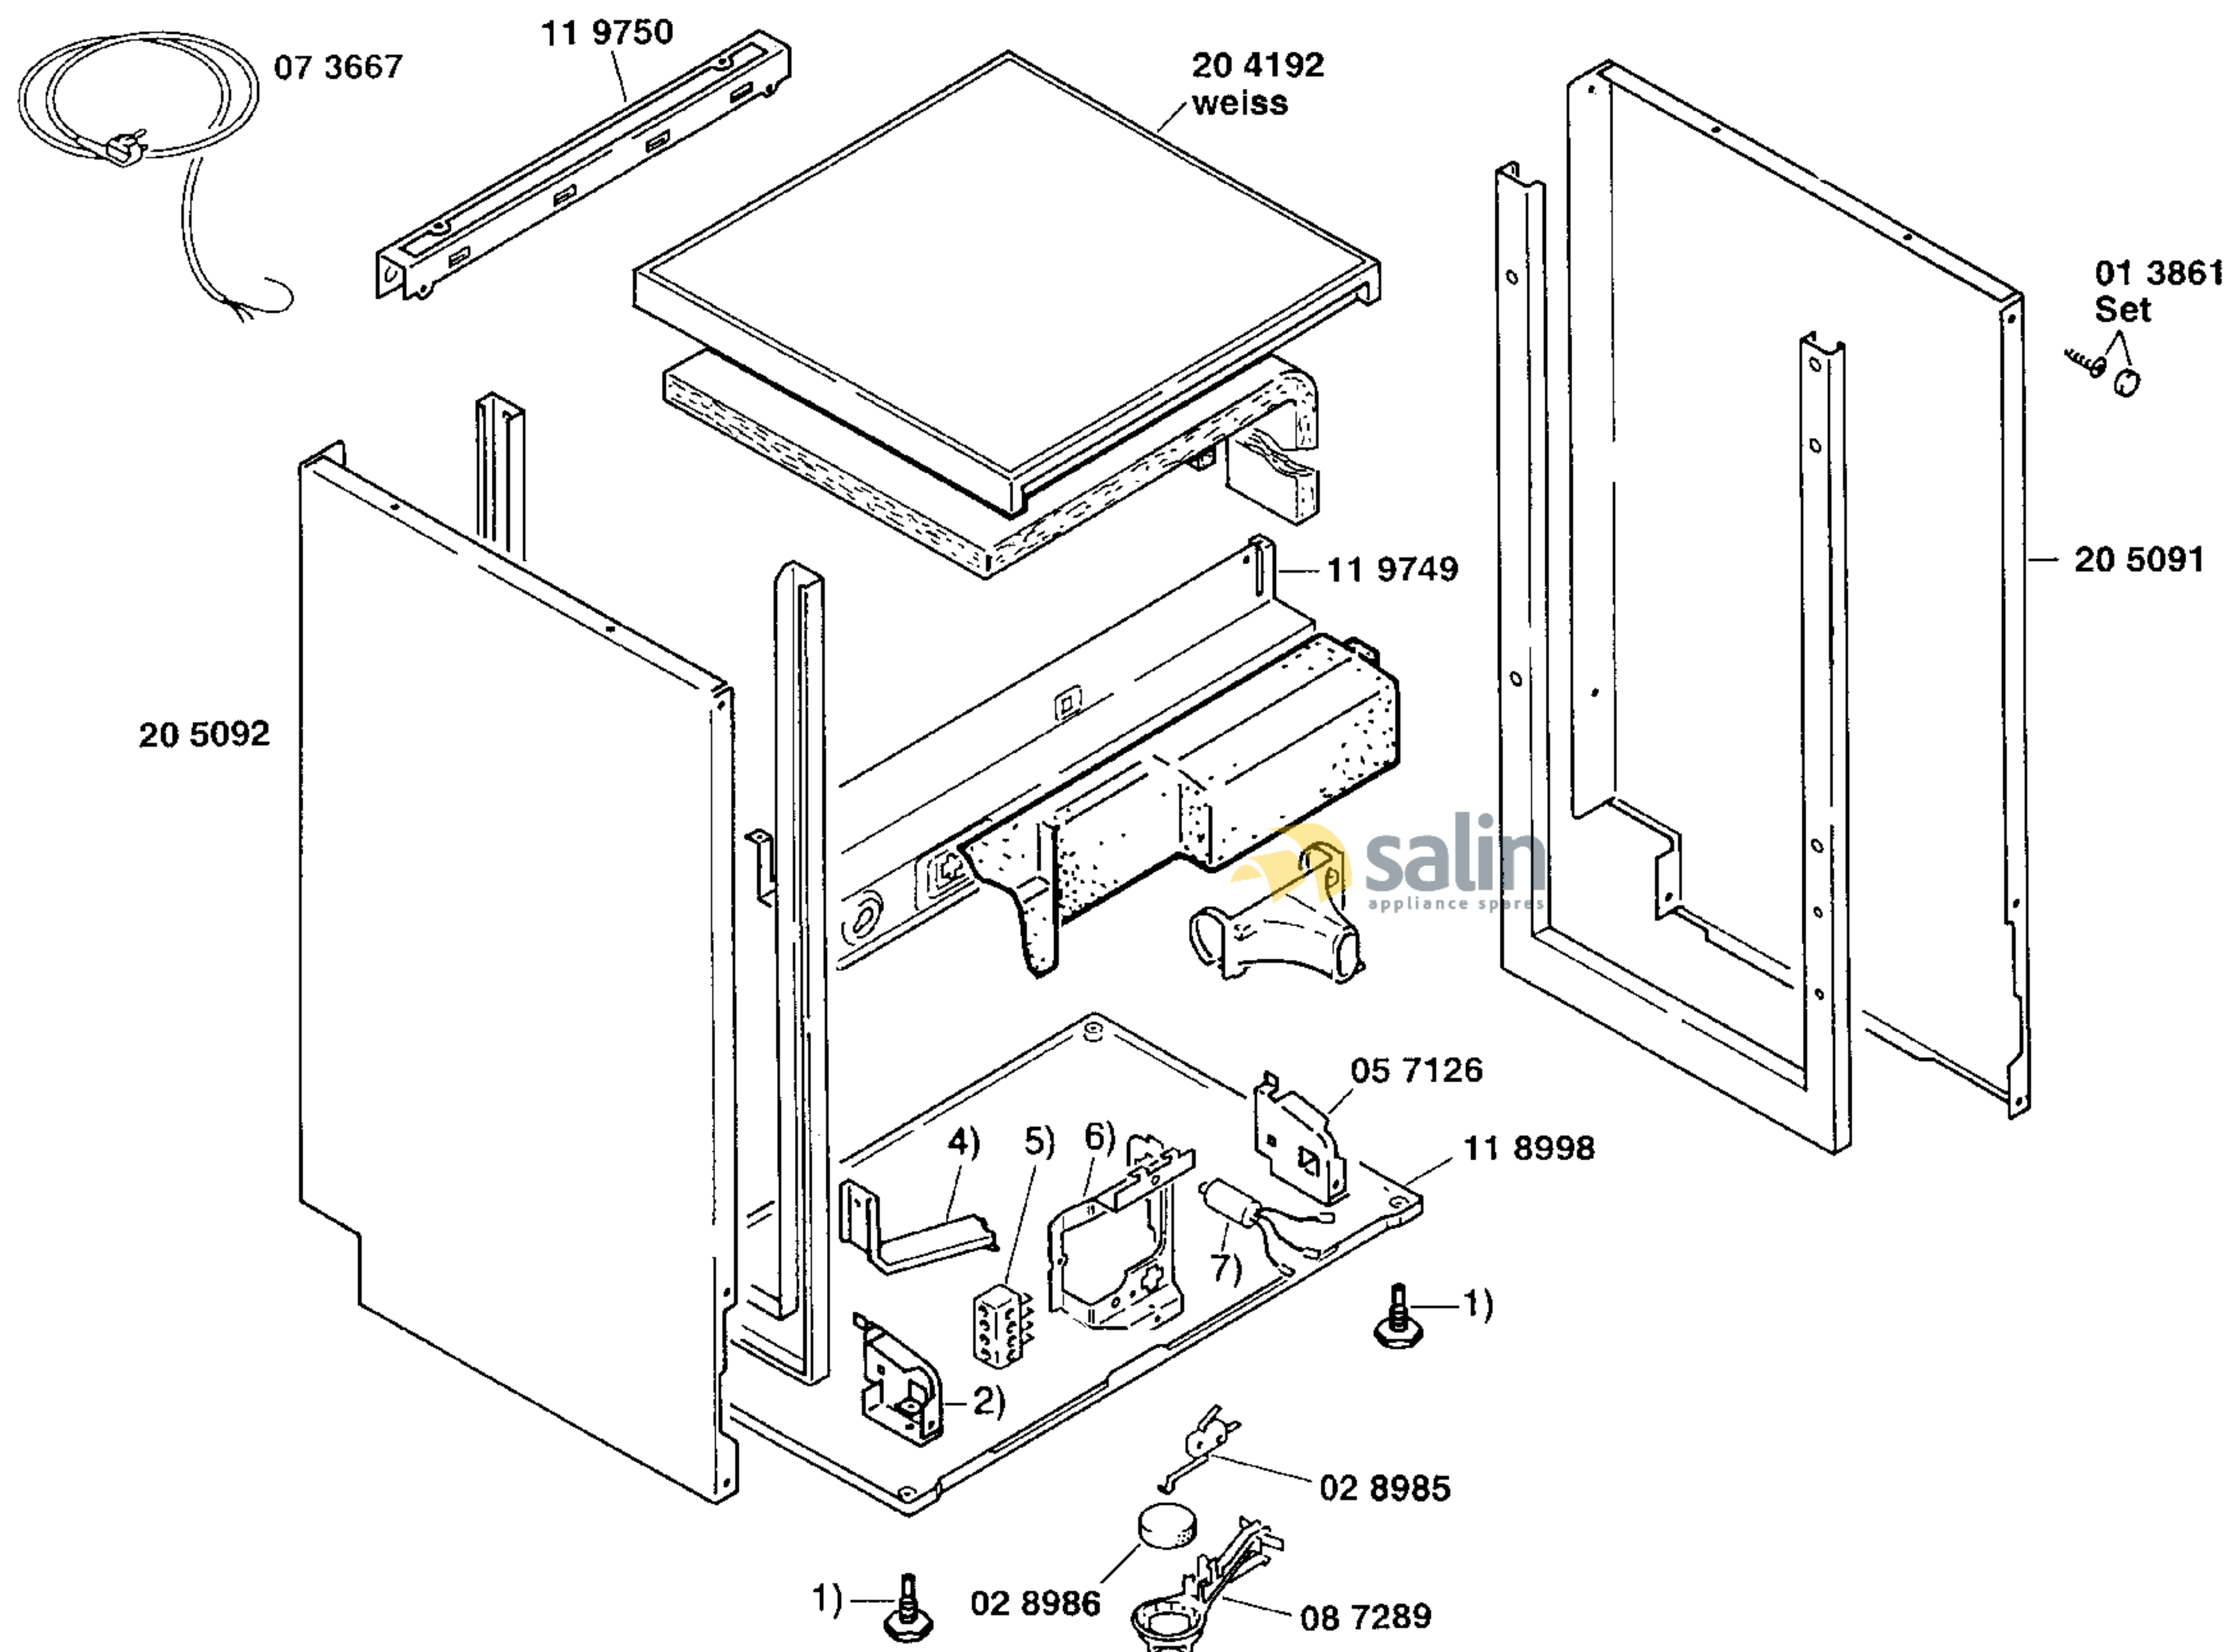

- 1) 02 9020
- 2) 05 7127
- 3) —
- 4) 08 6400
- 5) 02 7385
- 6) 08 6970
- 7) 04 3889

E160719-4/3


FAMILY : SMS2032EE
 MODEL NO: SMS2032EE/01
 Check Position No/Part No or Replacement No

**BOSCH**

SMS2032/01-EU1, weiss
 SMS2032EE/01-E1, weiss
 SMS2032II/01-I1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident - Nummern - Konstante
 3740

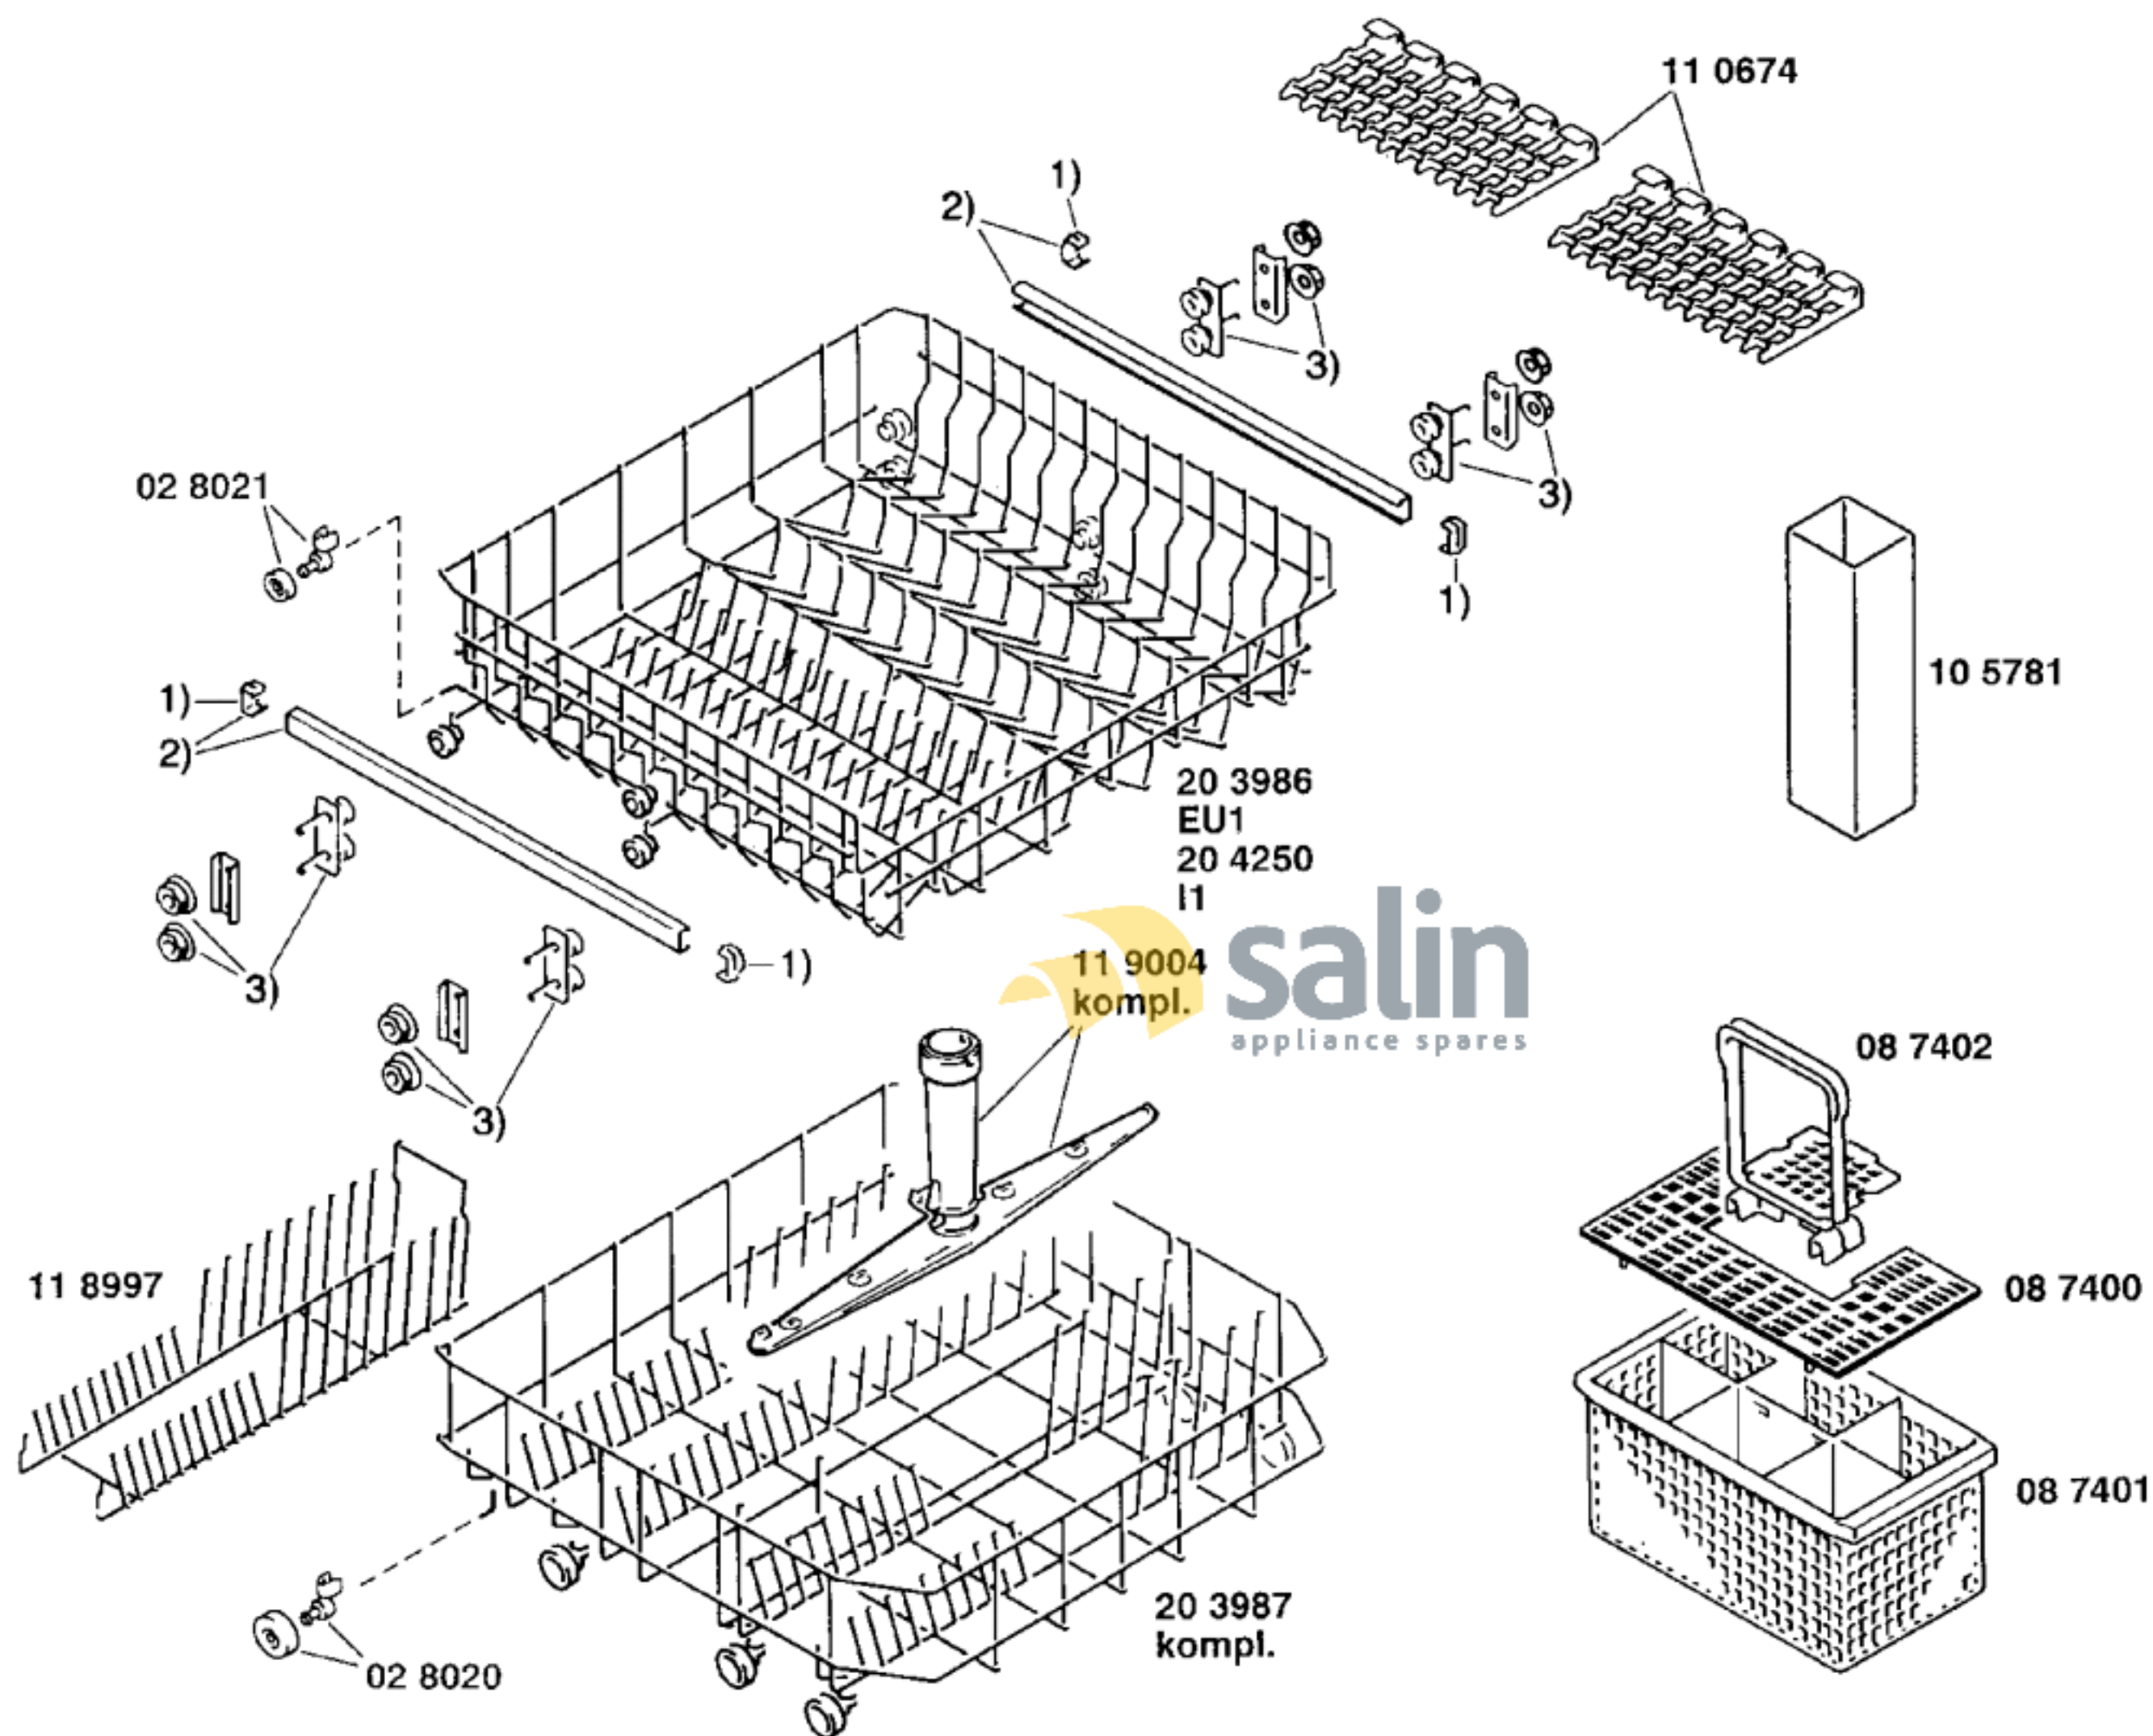

E160719-4/4

FAMILY : SMS2032EE

MODEL NO: SMS2032EE/01

Check Position No/Part No or Replacement No