


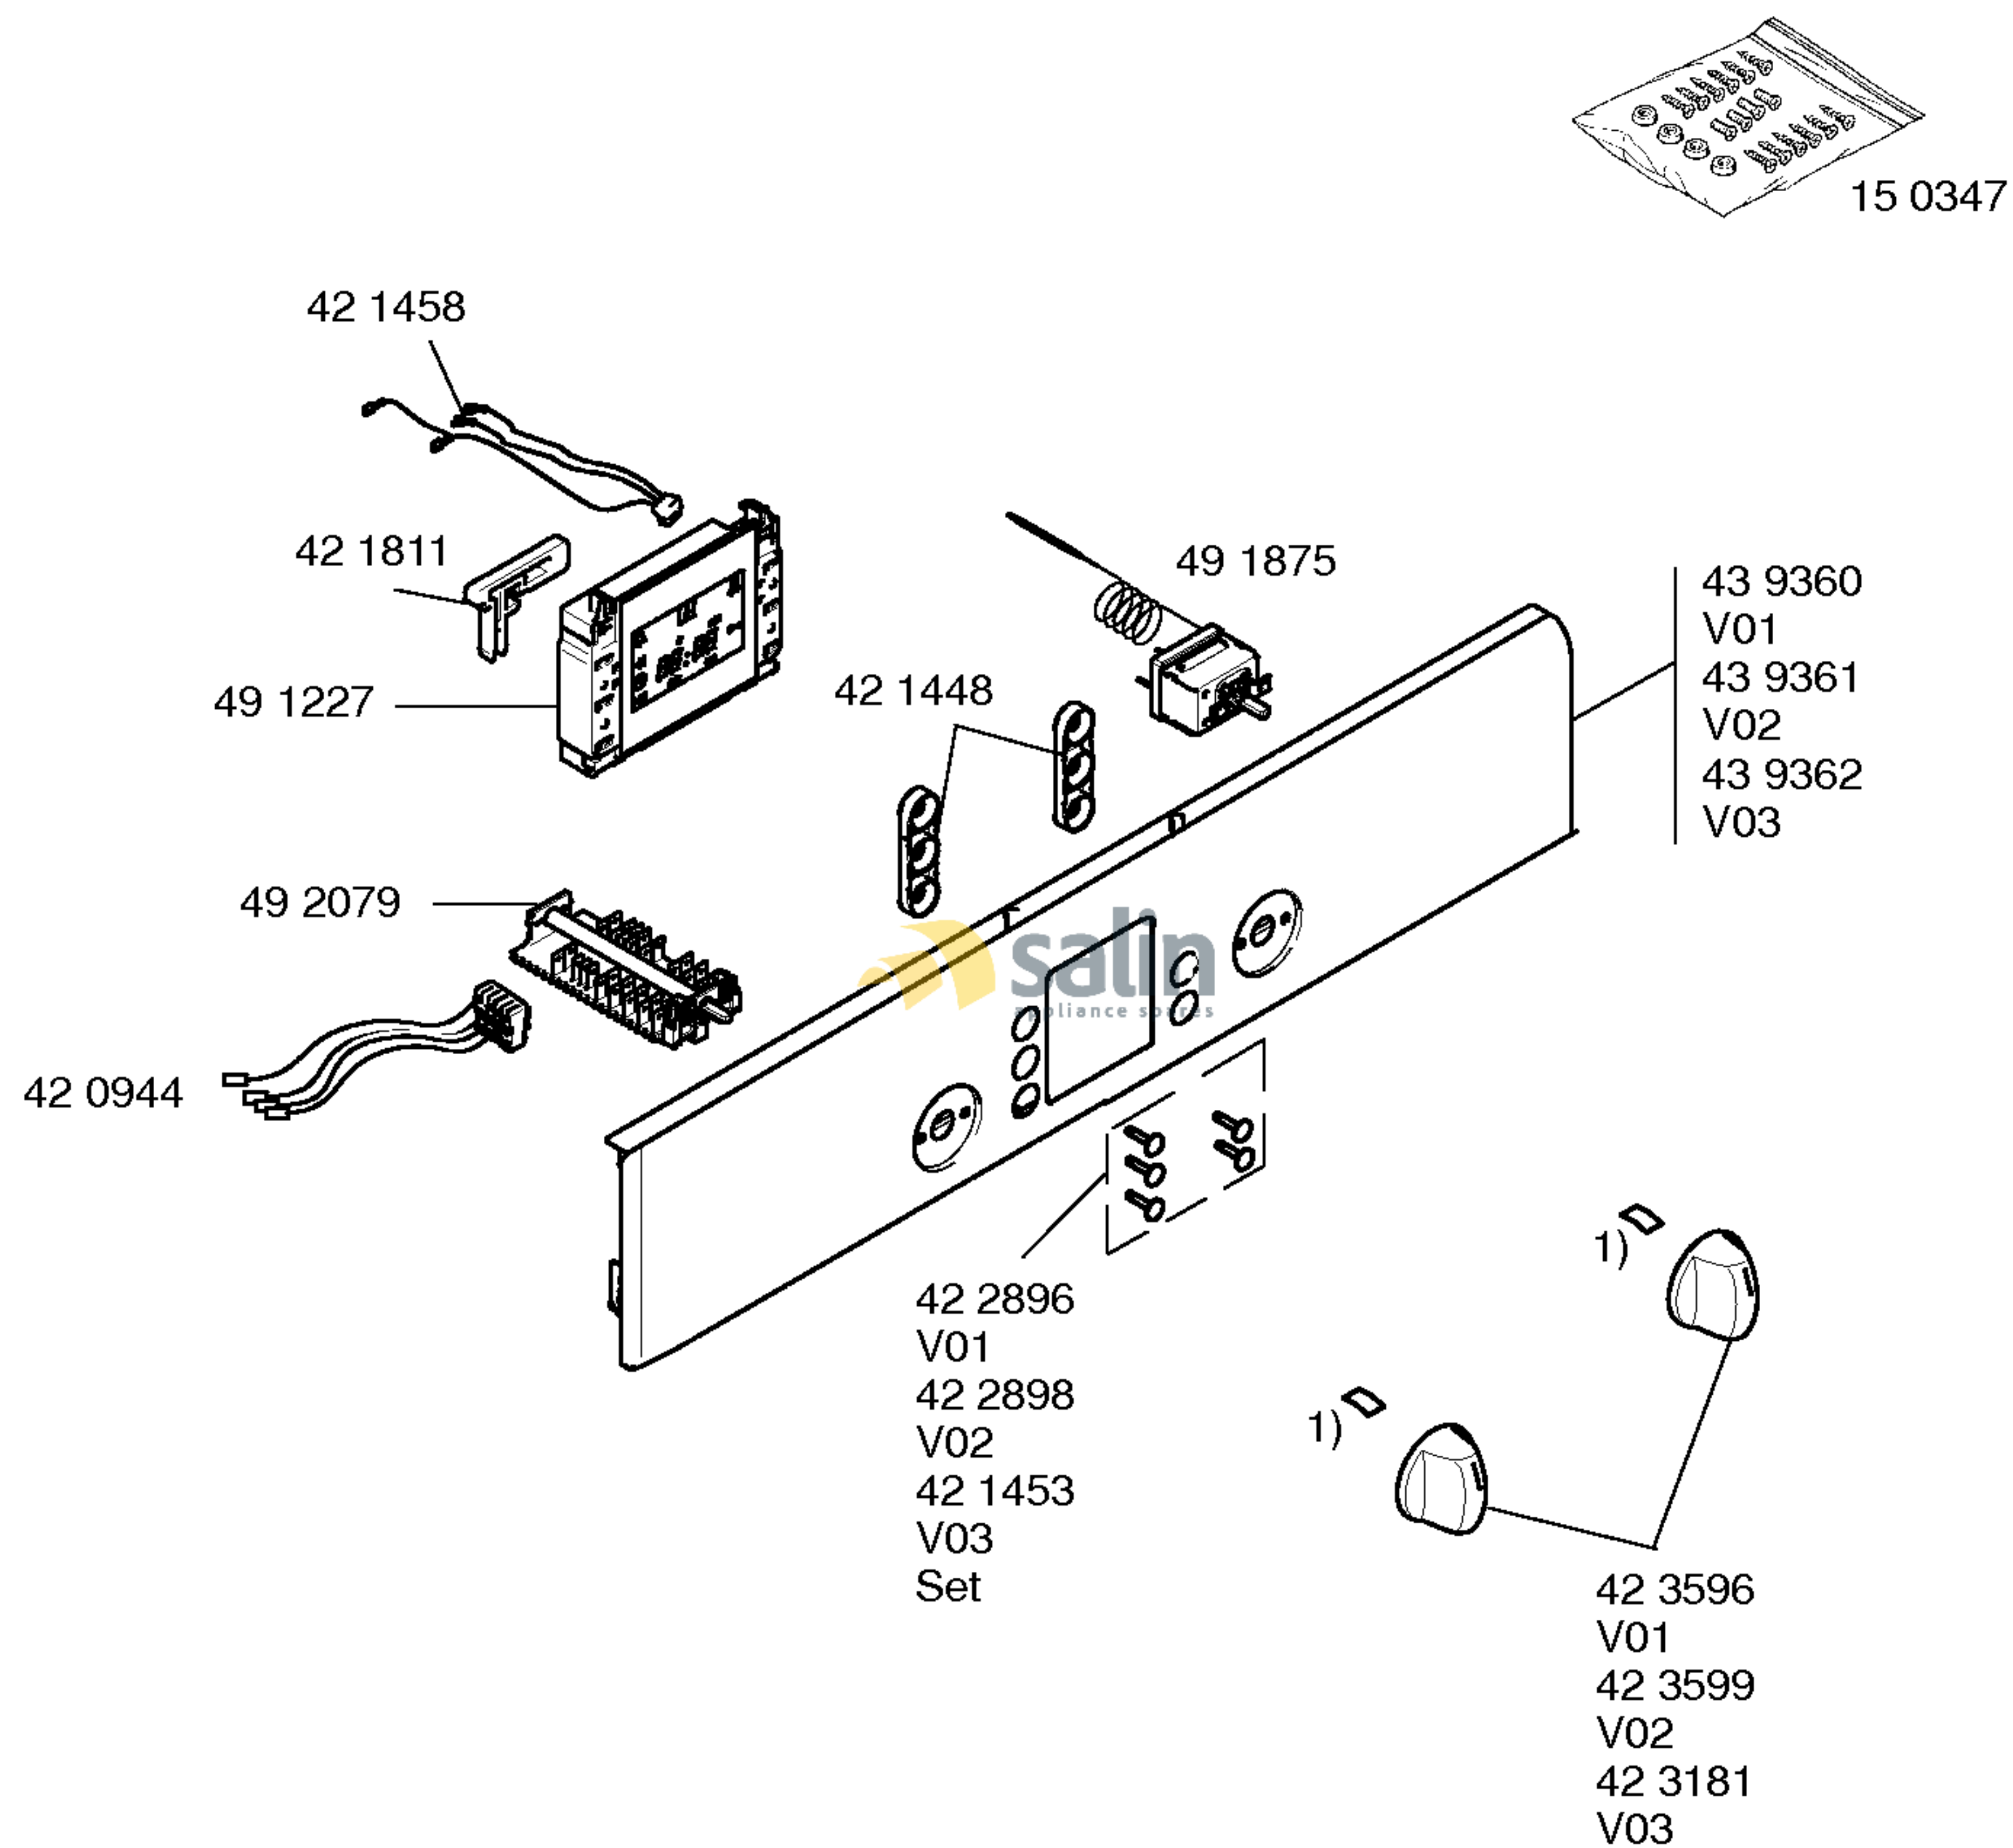

Mat. – Nr. – Konstante
3740

Gebrauchsanweisung

59 0596 (da)

59 0600 (no)

59 0603 (sv)

59 0605 (fi)

Montageanweisung

58 6500

(de,en,fr,it,nl,da,sv,no
fi,es,pt,el,cs,pl,tr,ru)

Zubehoer:

HEZ331000

Backblech emailliert

HEZ331010

Backblech Antihft

HEZ332000

Universalpfanne

HEZ332010

Universalpfanne

Antihft

HEZ333000

Profipfanne

HEZ333001

Deckel f. Profipfanne

HEZ334000

Kombirost

HEZ324000


Einlegerost

HEZ325000

Grillblech 2-teilig


1) 01 4254



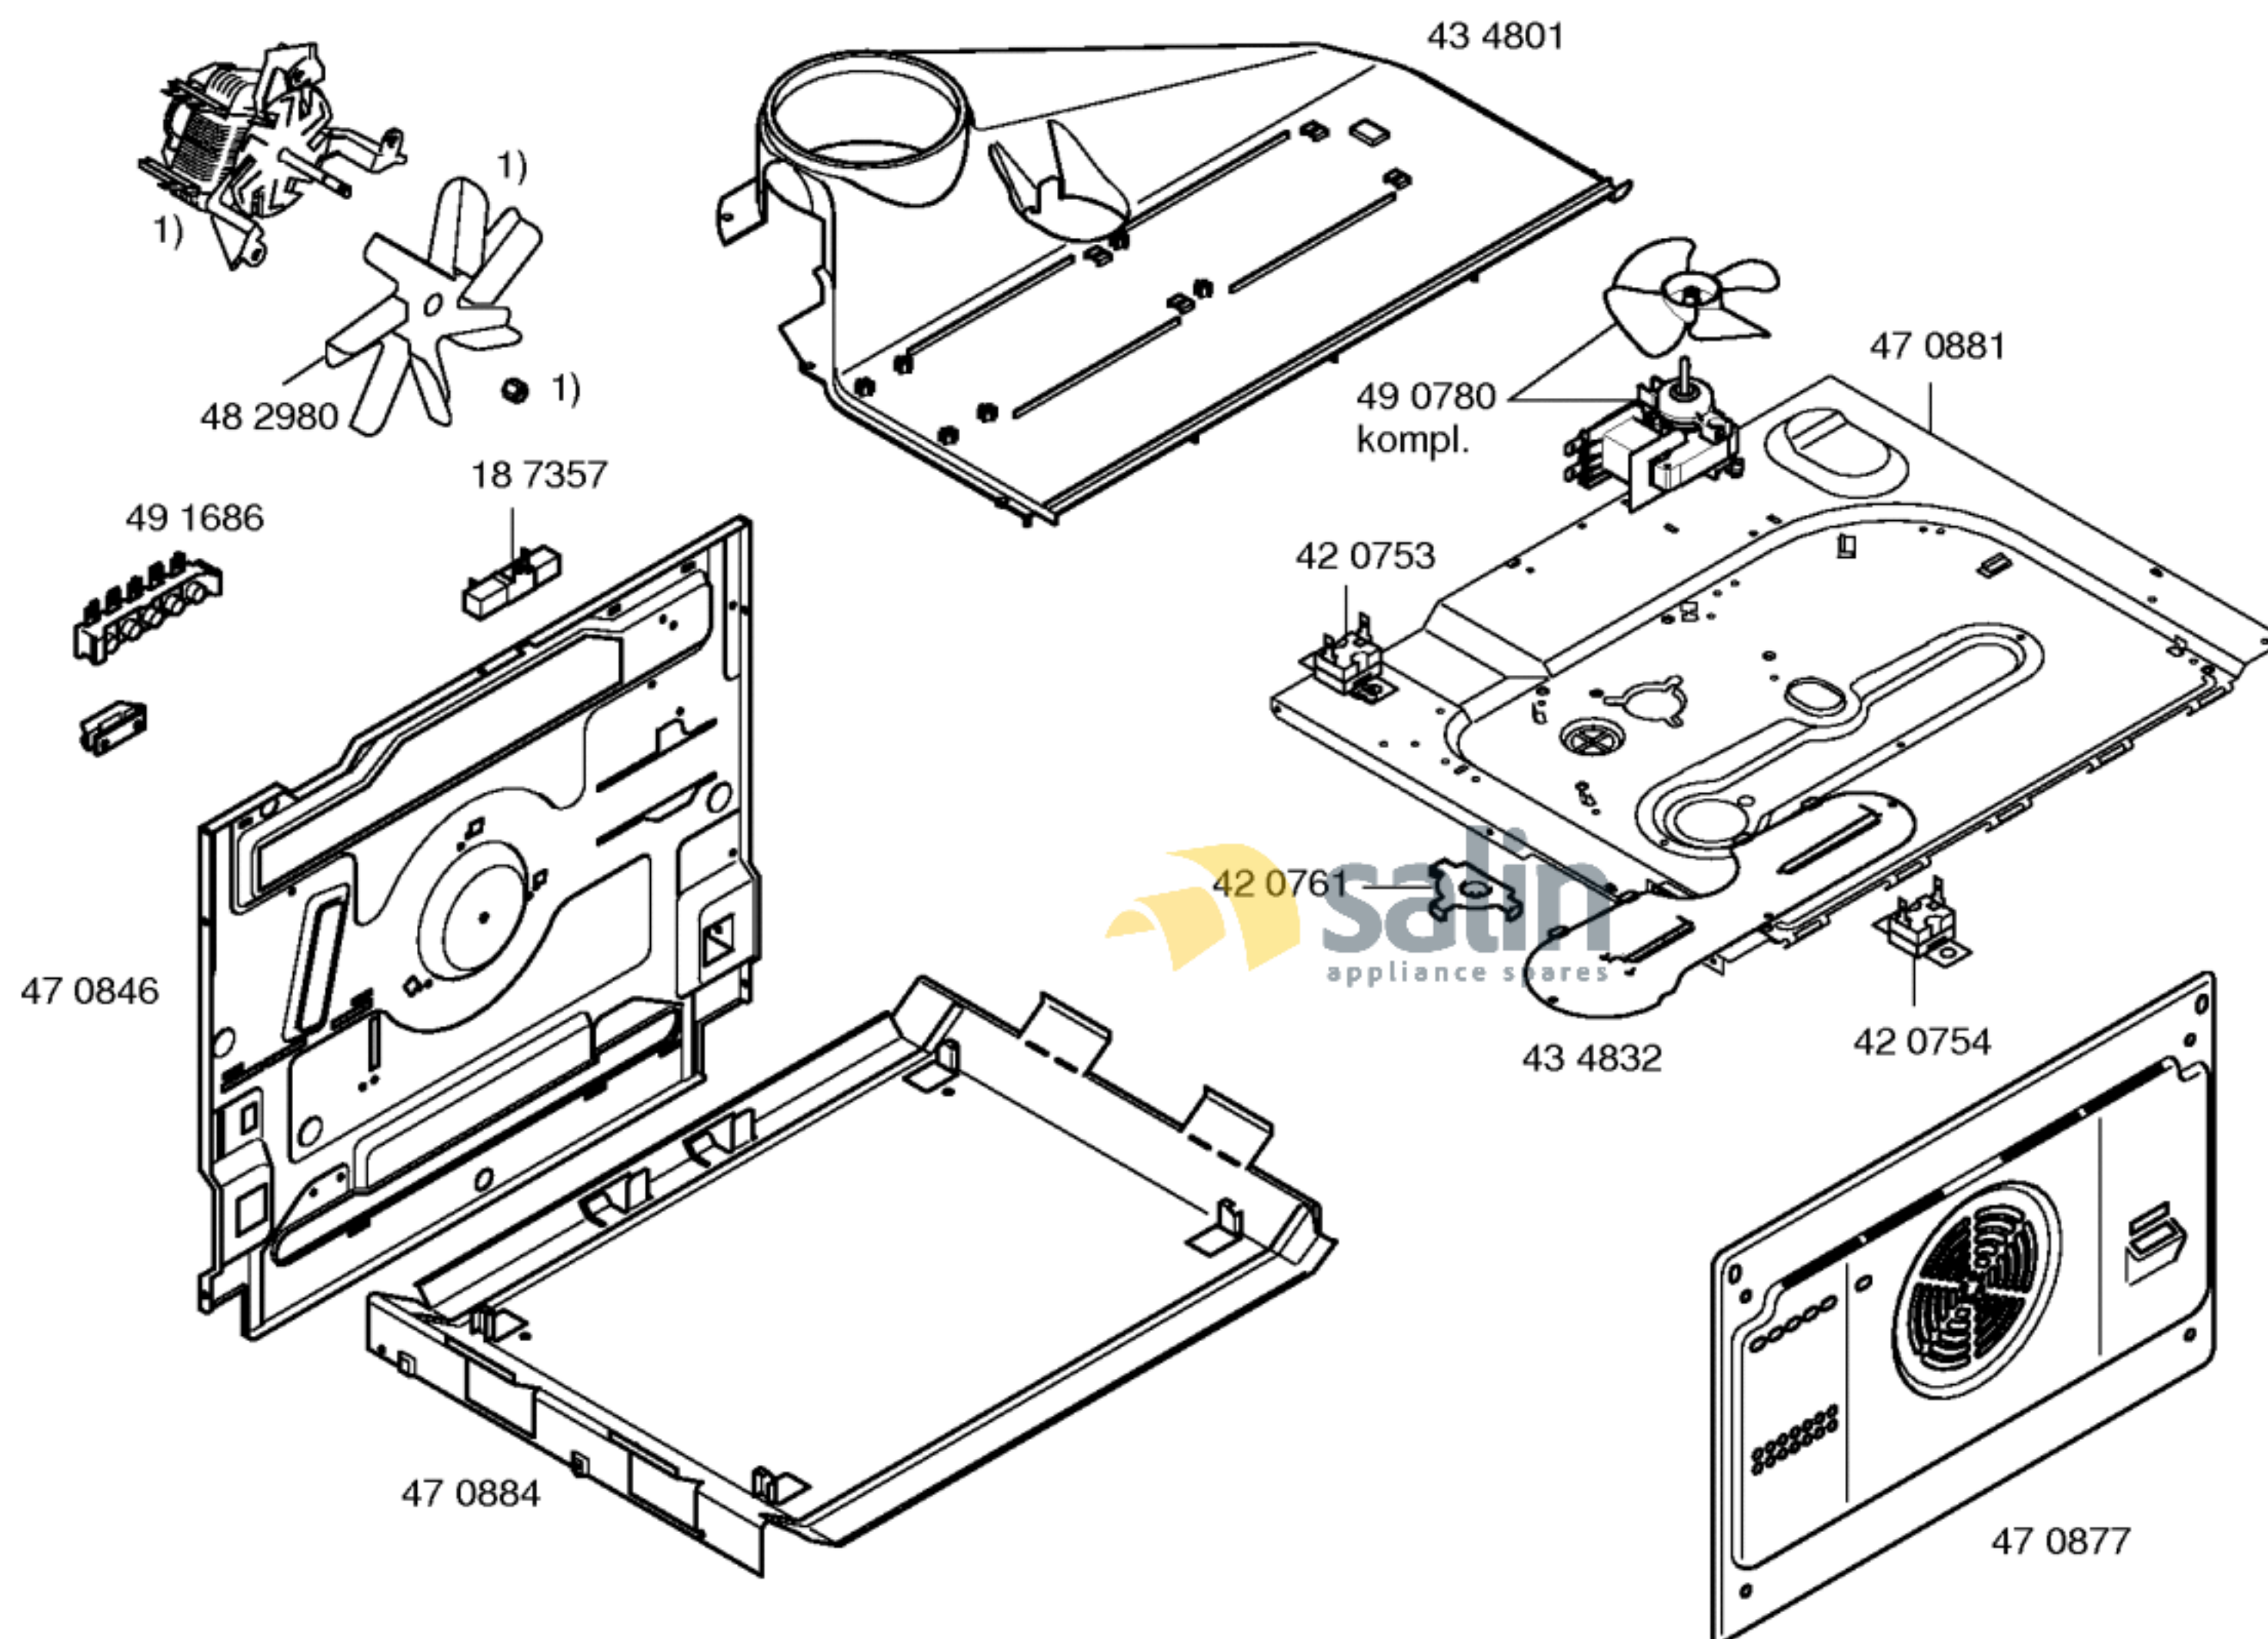

1) 49 0541
Set

Zubehoer:
HEZ336000
Glaspfanne
HEZ6001
Backform
Auslaufsicher
HEZ317000
Pizzaform
HMZ21GB
Glasbraeter
HEZ6000
Metallbraeter
HEZ338200
Teleskopauszug
2-fach
HEZ338300
Teleskopauszug
3-fach
HEZ338305
Teleskop-Vollauszug
3-fach

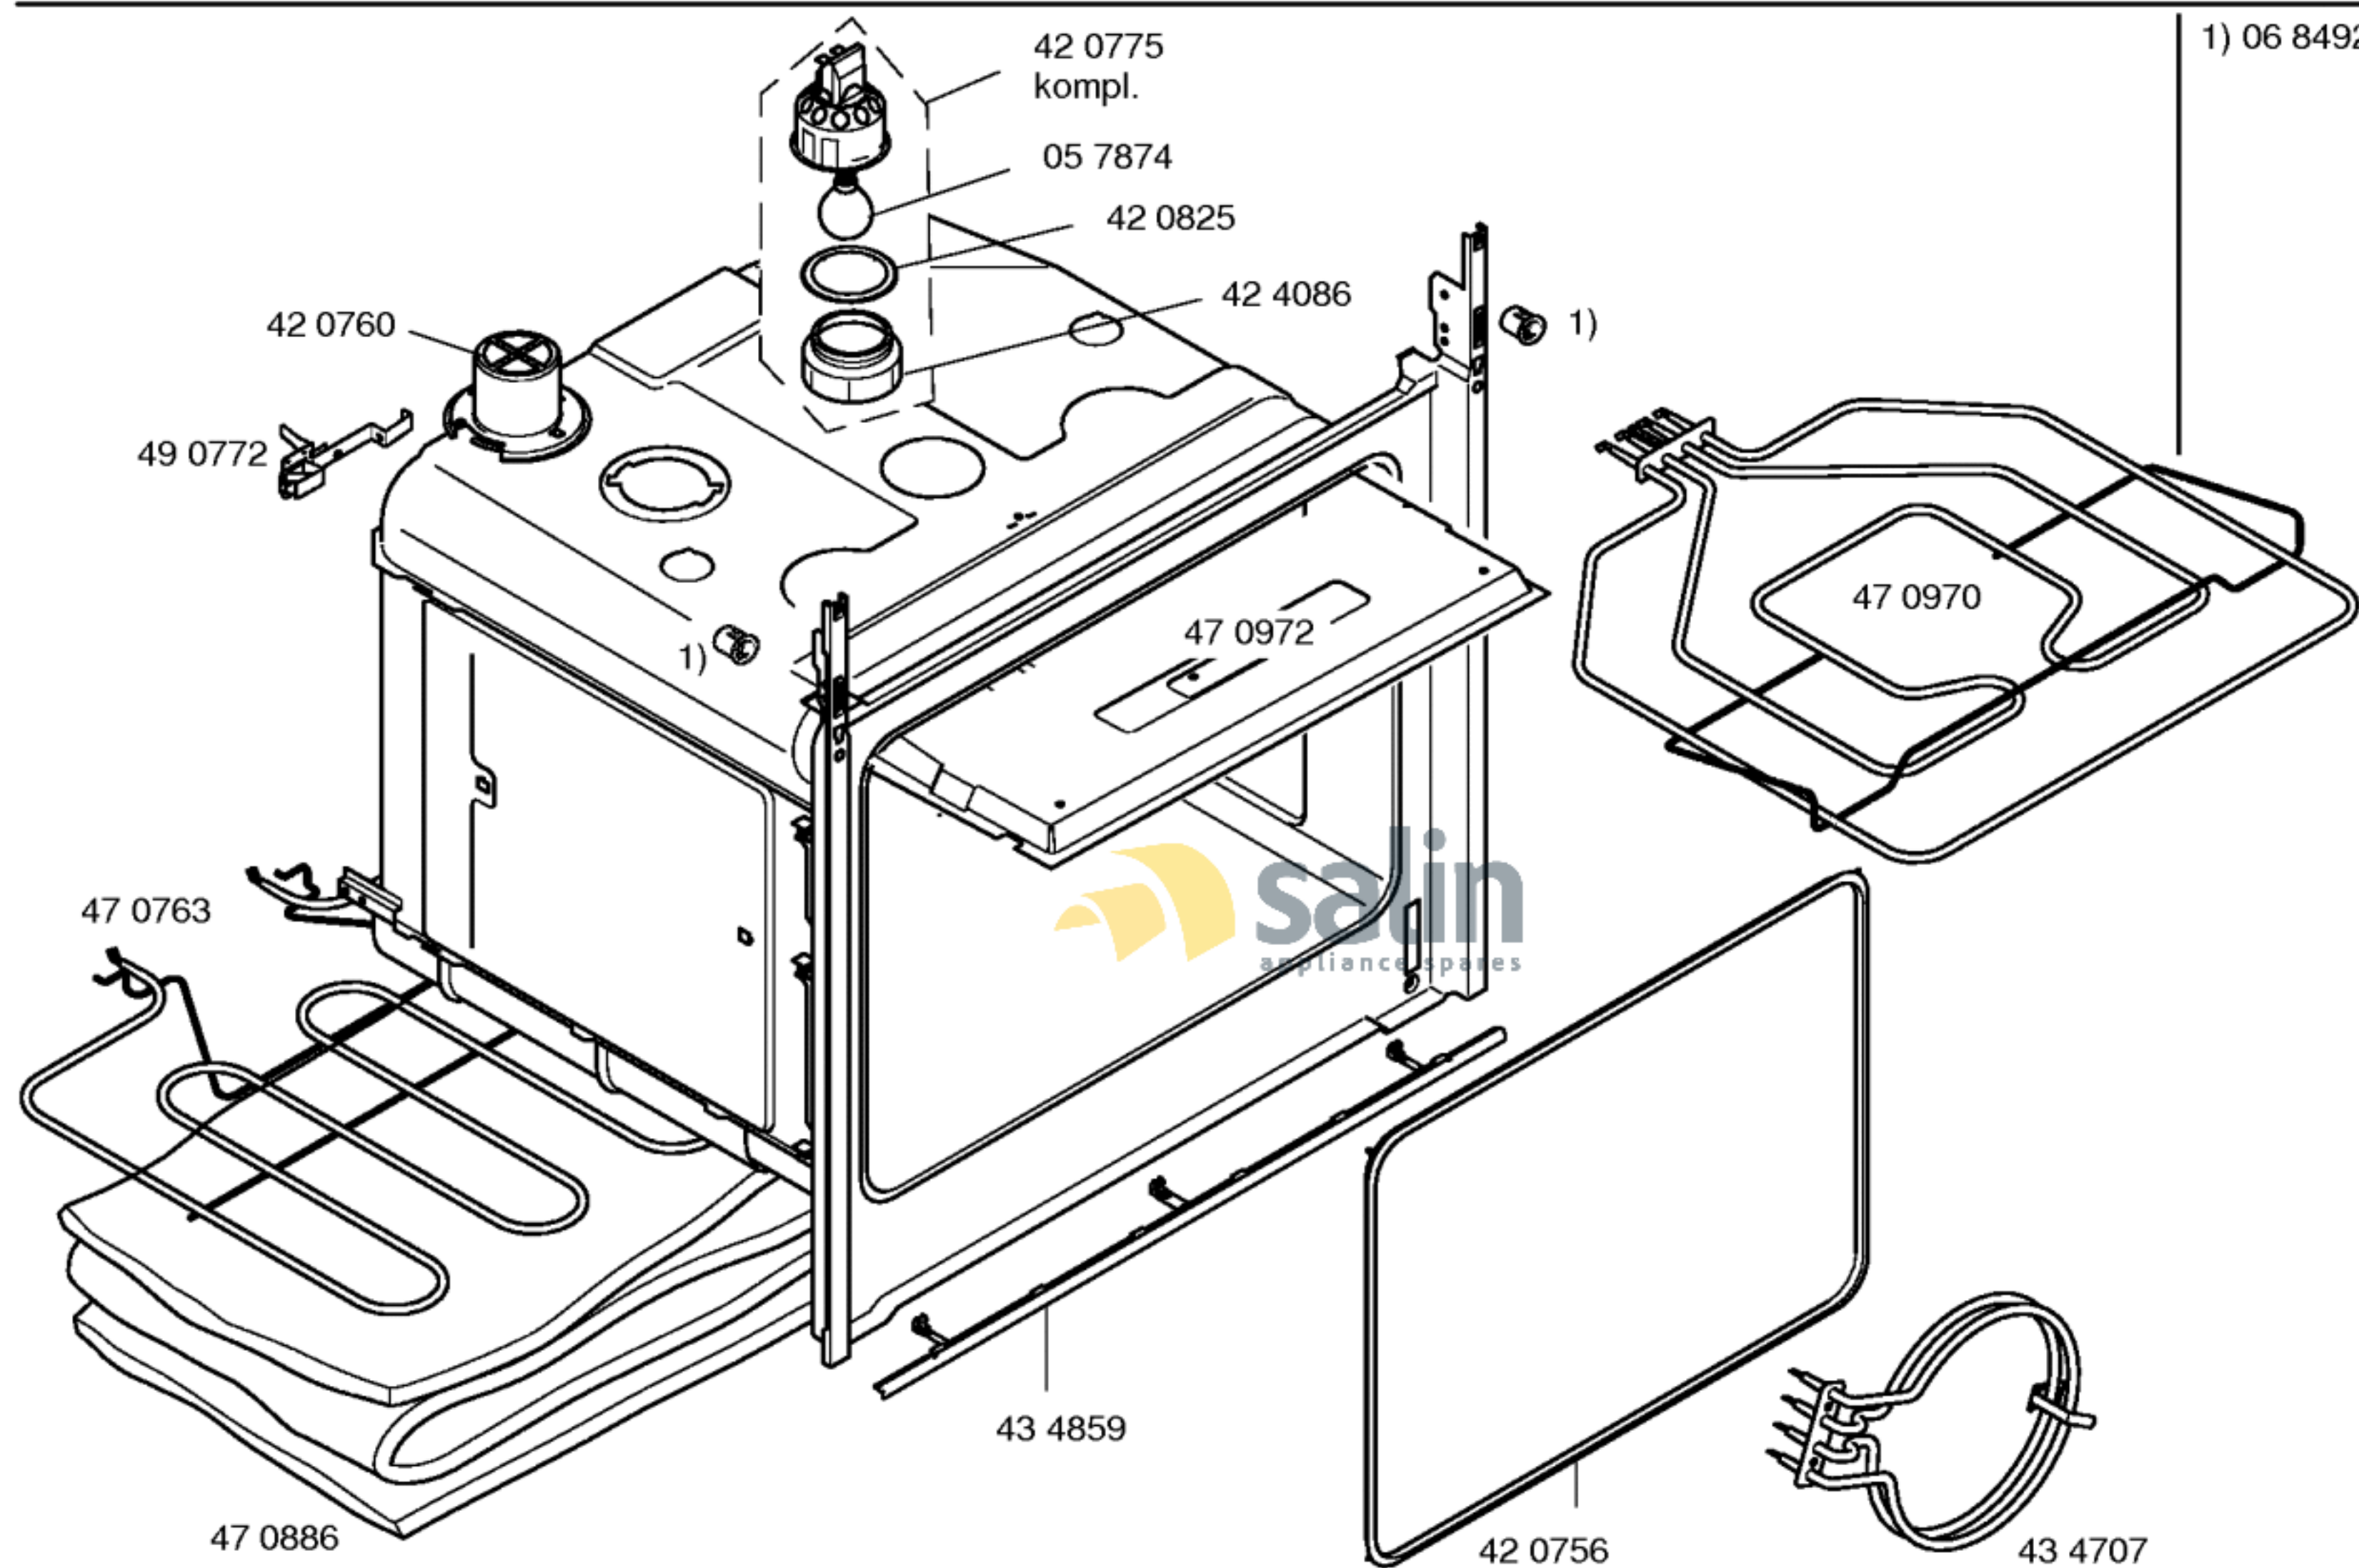


58300000074836_aet_000_d-6/3


FAMILY : HBN430220S

MODEL NO: HBN430220S/01

Check Position No/Part No or Replacement No

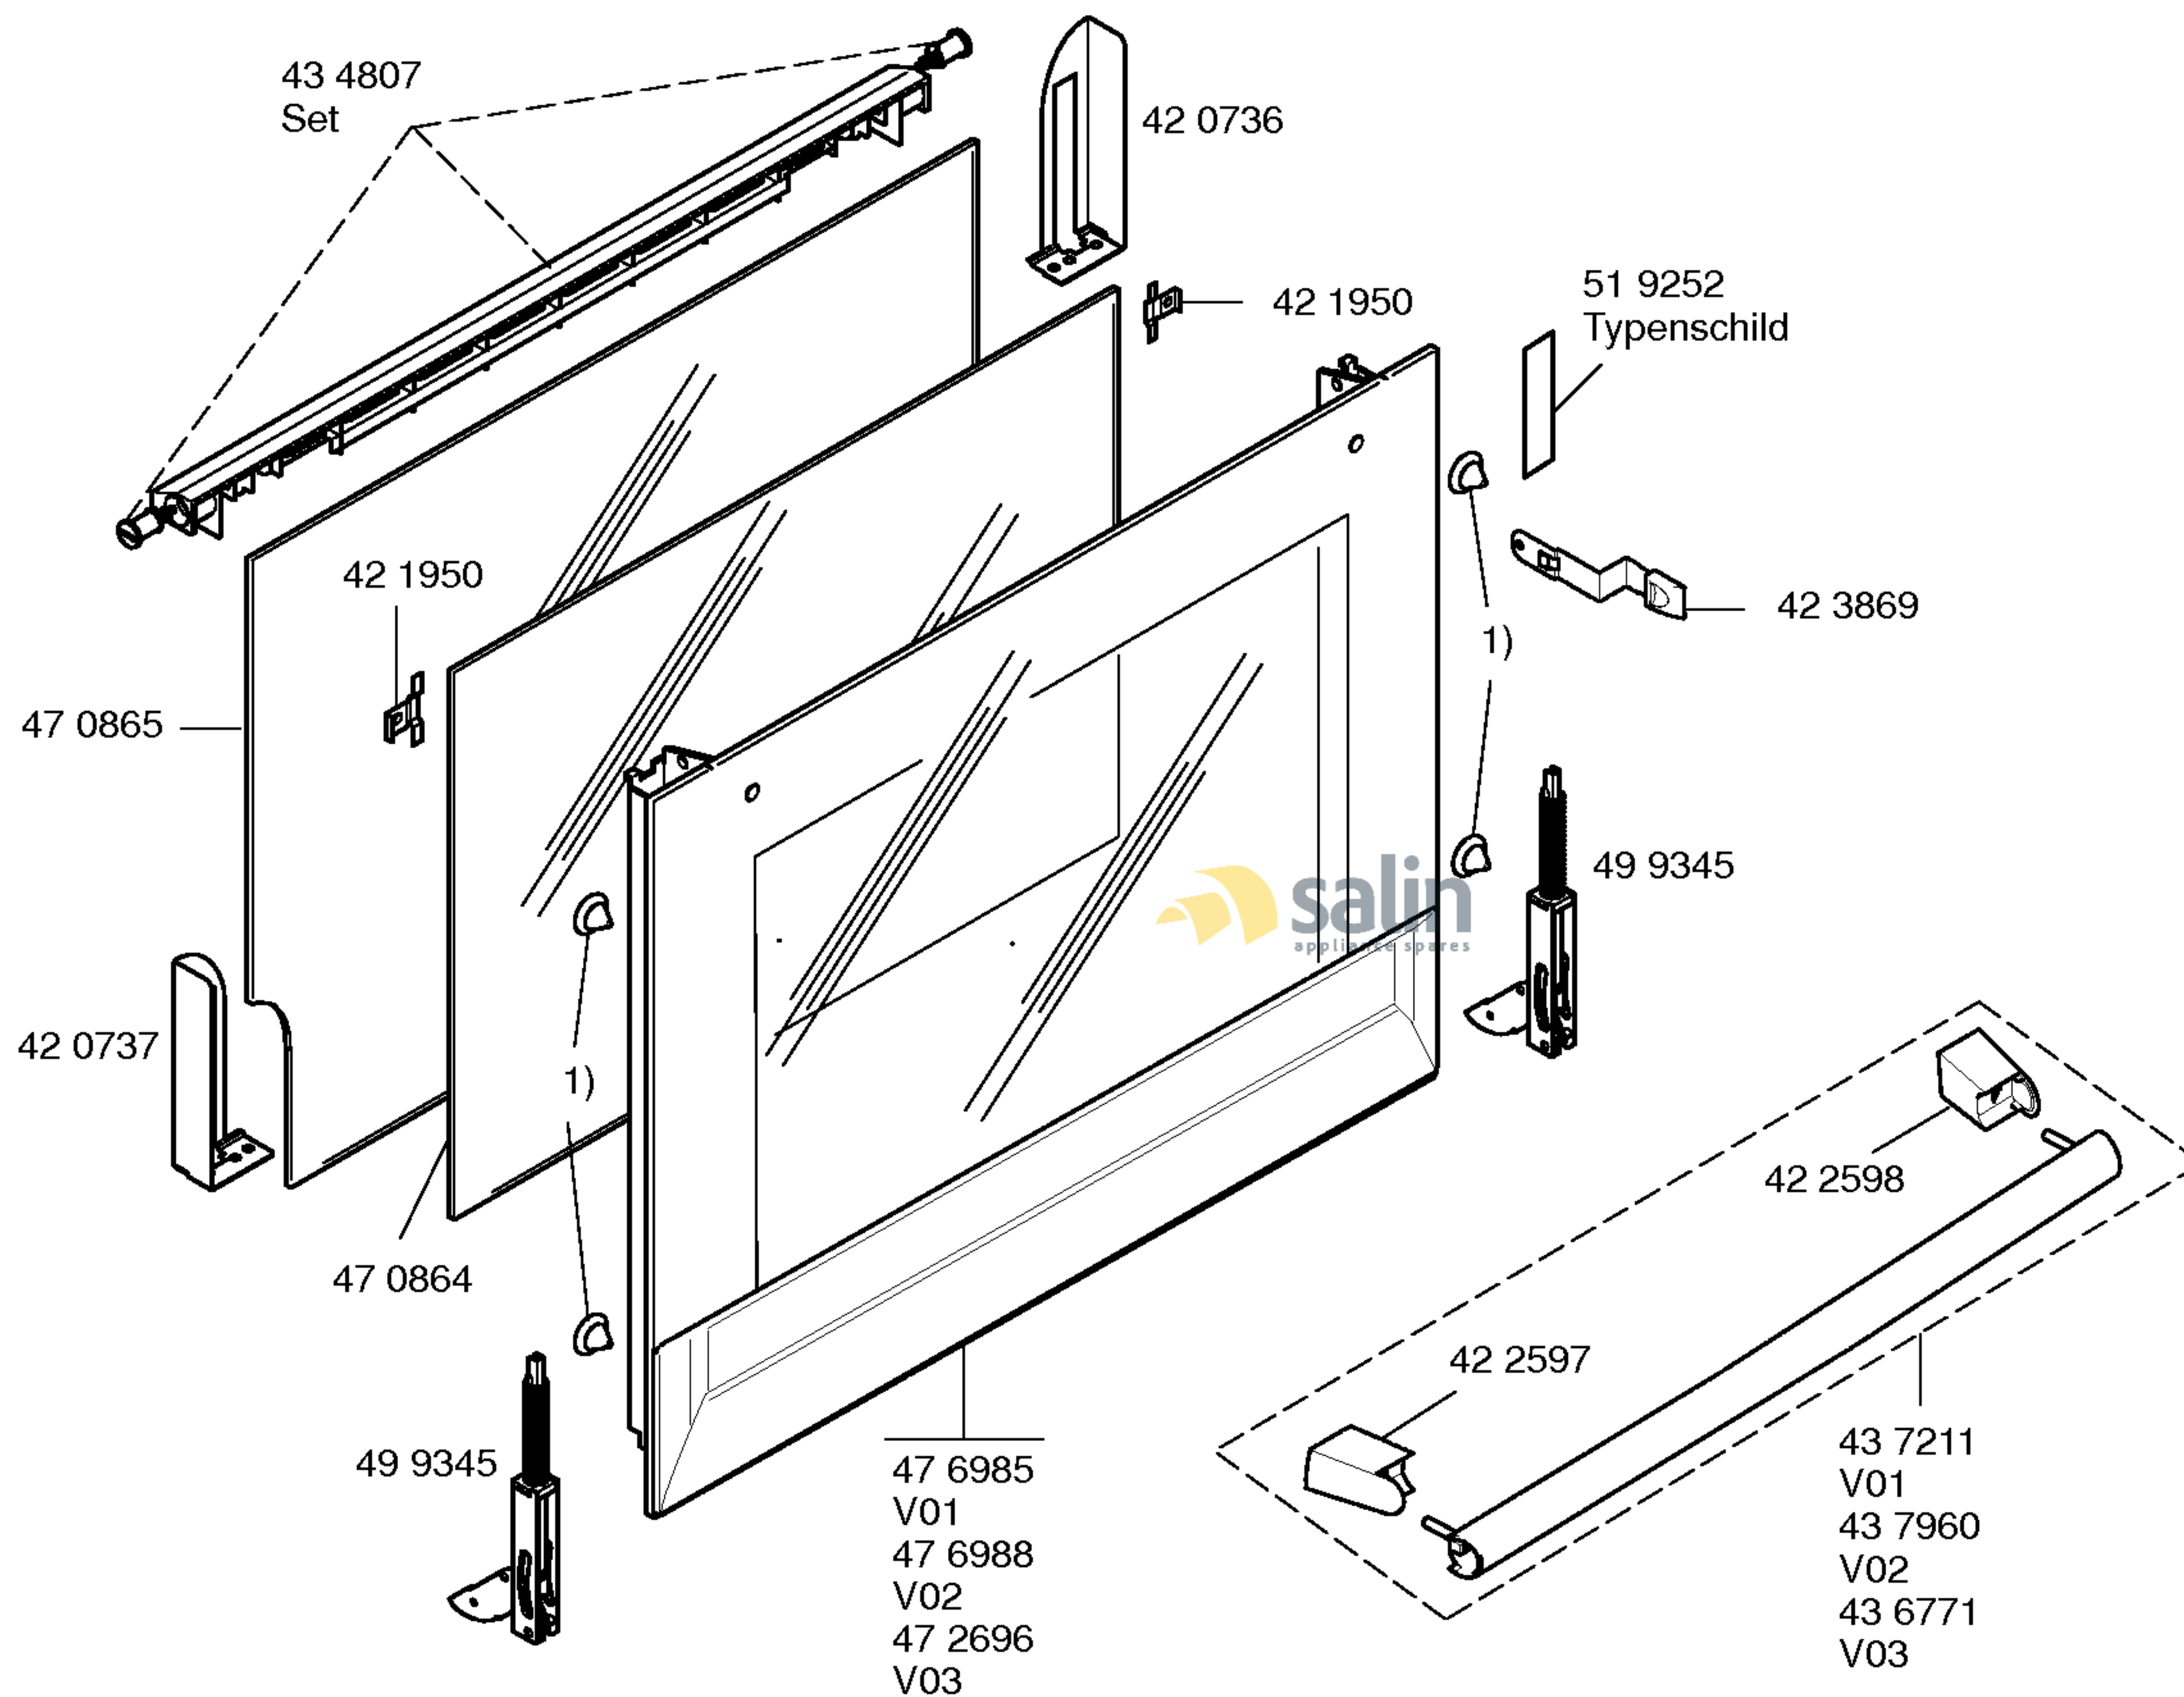

1) 42 0735

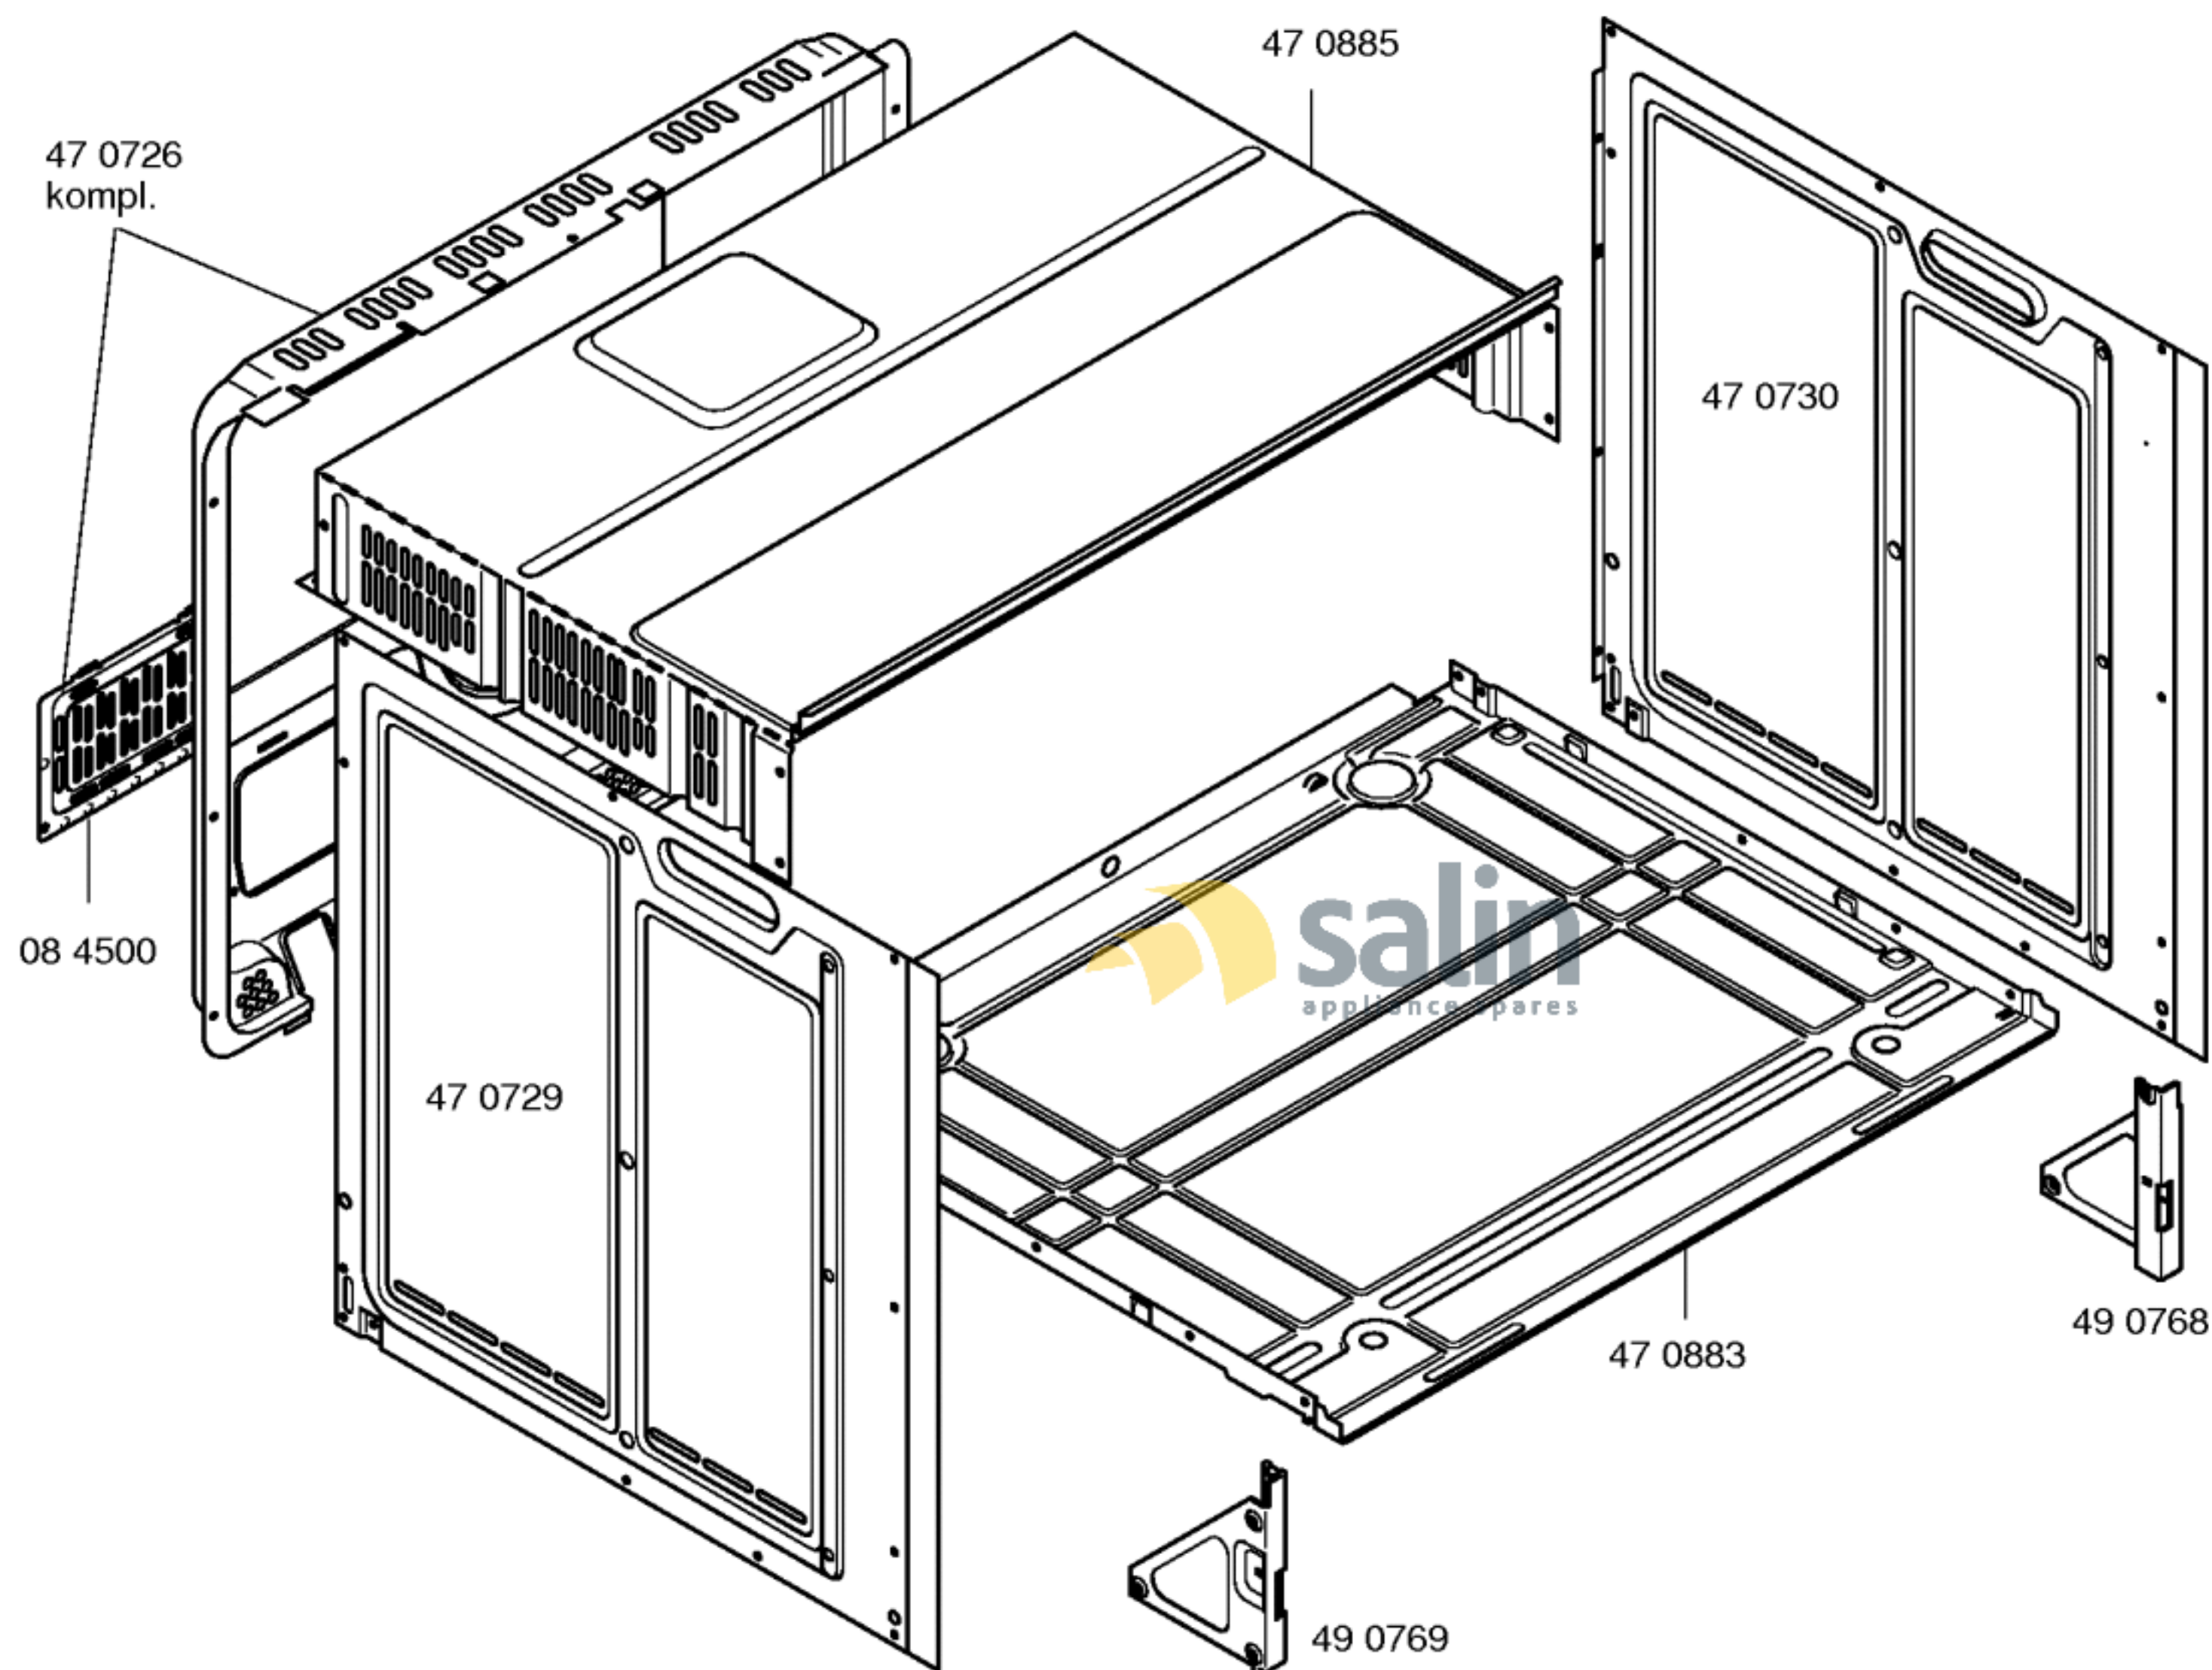


58300000074836_aet_000_d-6/5


FAMILY : HBN430220S
MODEL NO: HBN430220S/01
Check Position No/Part No or Replacement No

Mat. – Nr. – Konstante
3740

43 5152

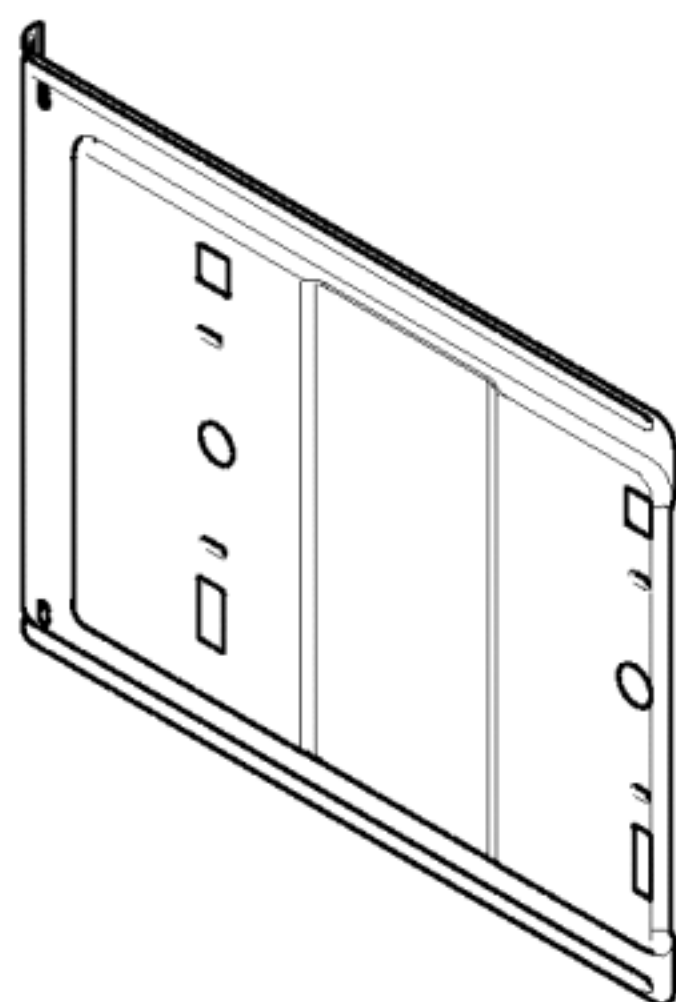


42 0673
Set

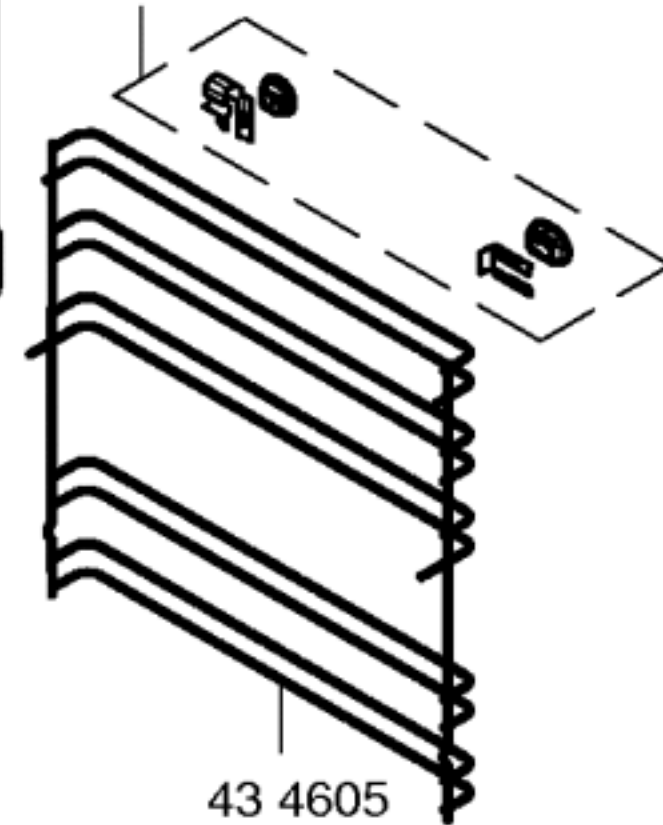

43 4605

43 5153

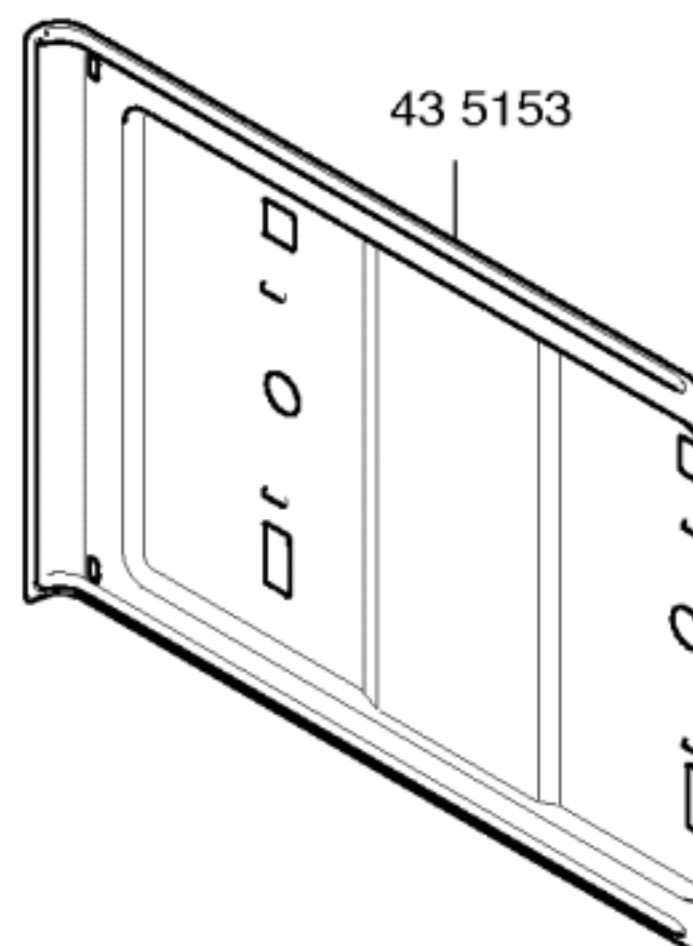


42 0673
Set



43 4605

43 4175

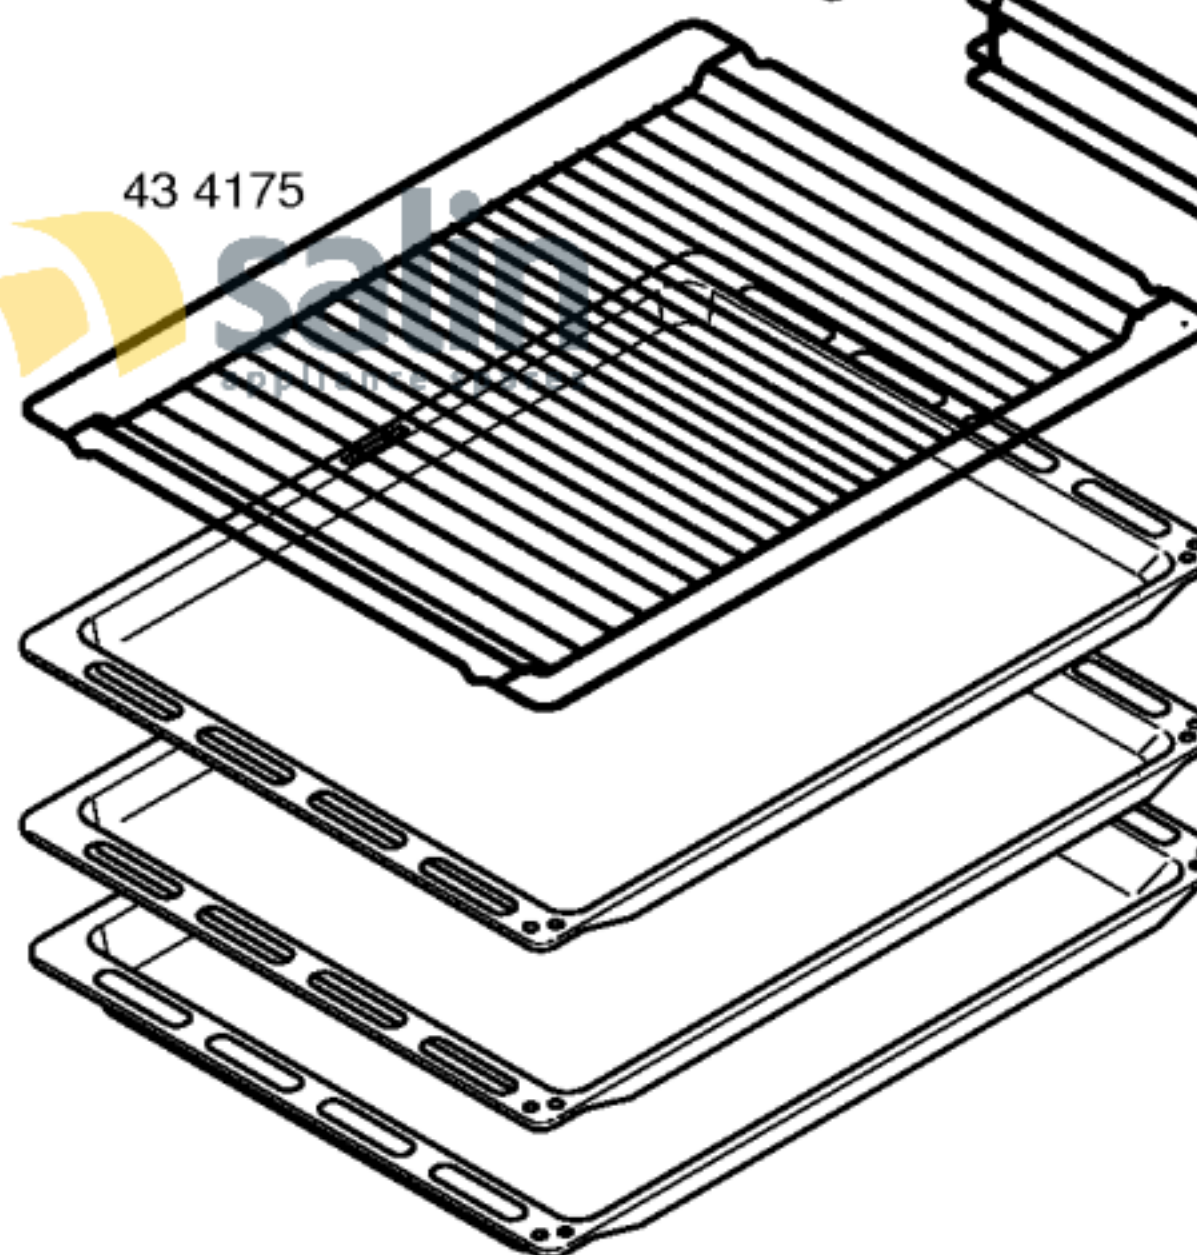

43 4176

43 4176

43 4178