


**BOSCH**

SMS2042EU/01–EU1, weiss
 SMS2042EU/08–EU2, weiss
 SMS2042EE/08–E1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident – Nummern – Konstante
 3740

51 4136
Gebrauchsanweisung
 (D,F,GB,I,NL)
 51 3779
Montageanweisung
 (D,F,GB,I,NL,DK,
 E,P,S,N,SF,GR,TR)

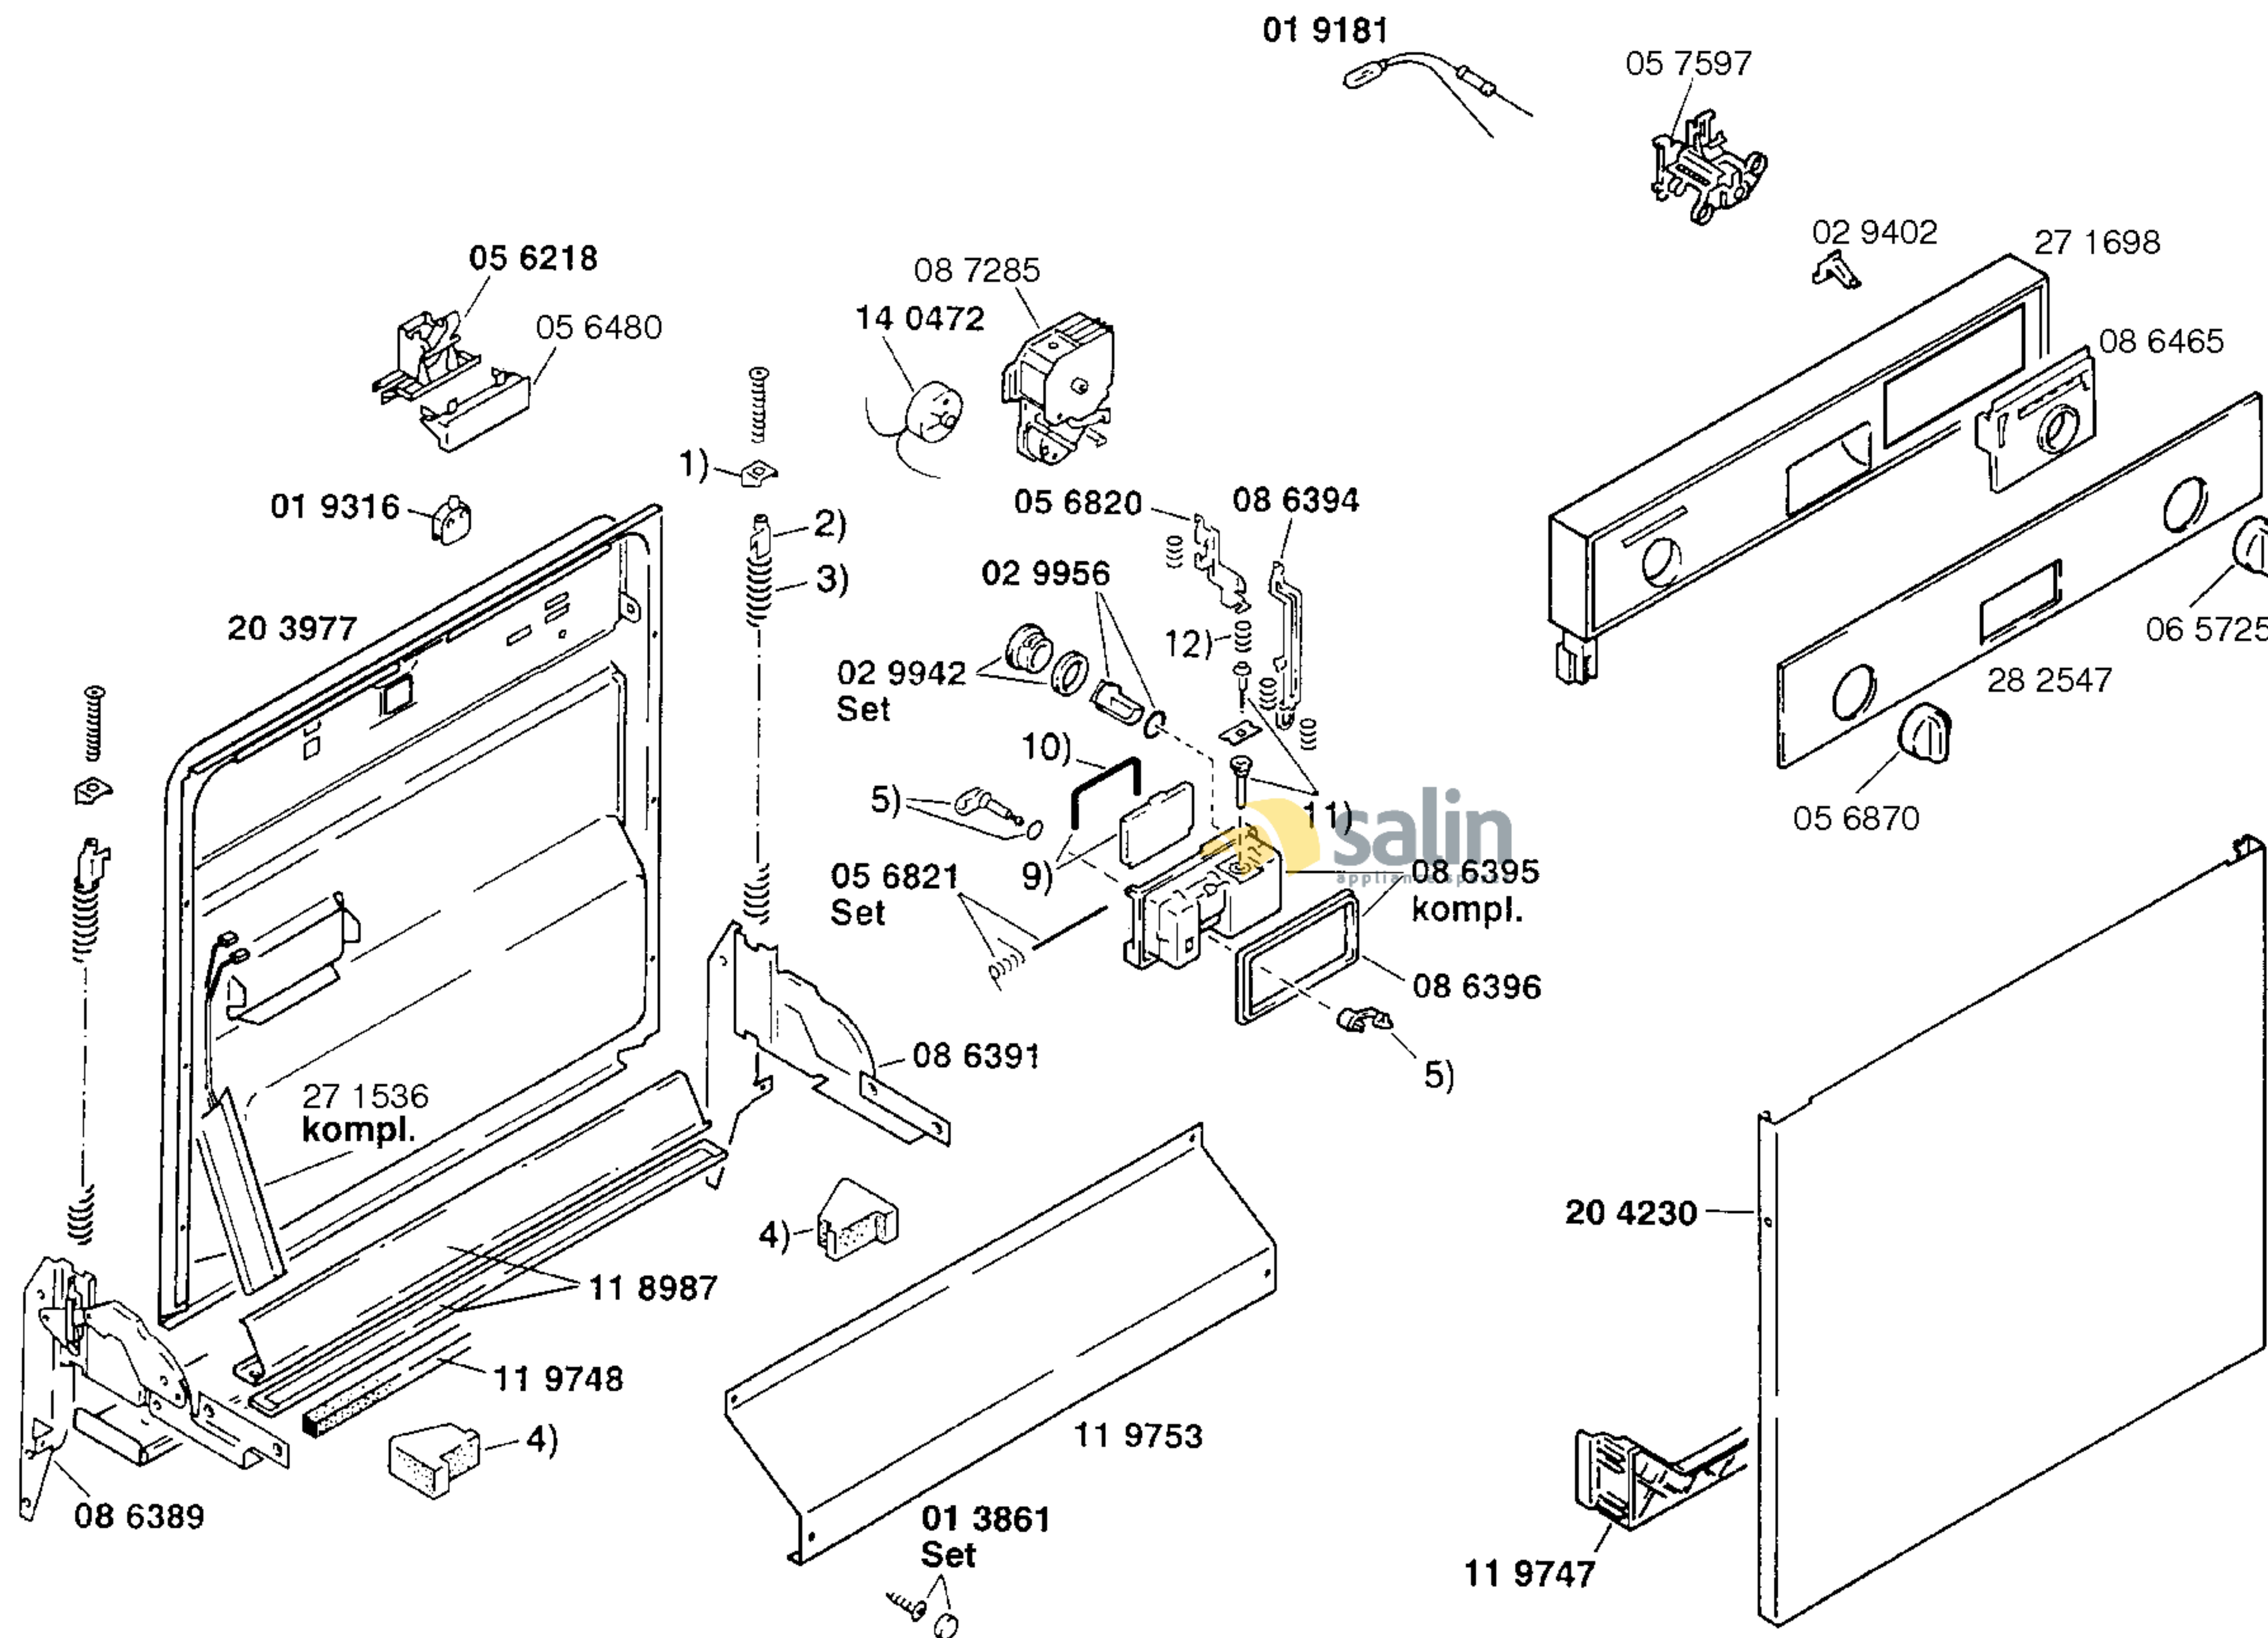

- 1) 02 9941
- 2) 02 9029
- 3) 11 9795
- 4) 05 6860
- 5) 02 9944 Set
- 6) —
- 7) —
- 8) —
- 9) 05 6822
- 10) 02 9943
- 11) 02 9945 Set
- 12) 02 9002 Set


E161339–4/1

FAMILY : SMS2042EE
 MODEL NO: SMS2042EE/08
 Check Position No/Part No or Replacement No

**BOSCH**

SMS2042EU/01-EU1, weiss
 SMS2042EU/08-EU2, weiss
 SMS2042EE/08-E1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

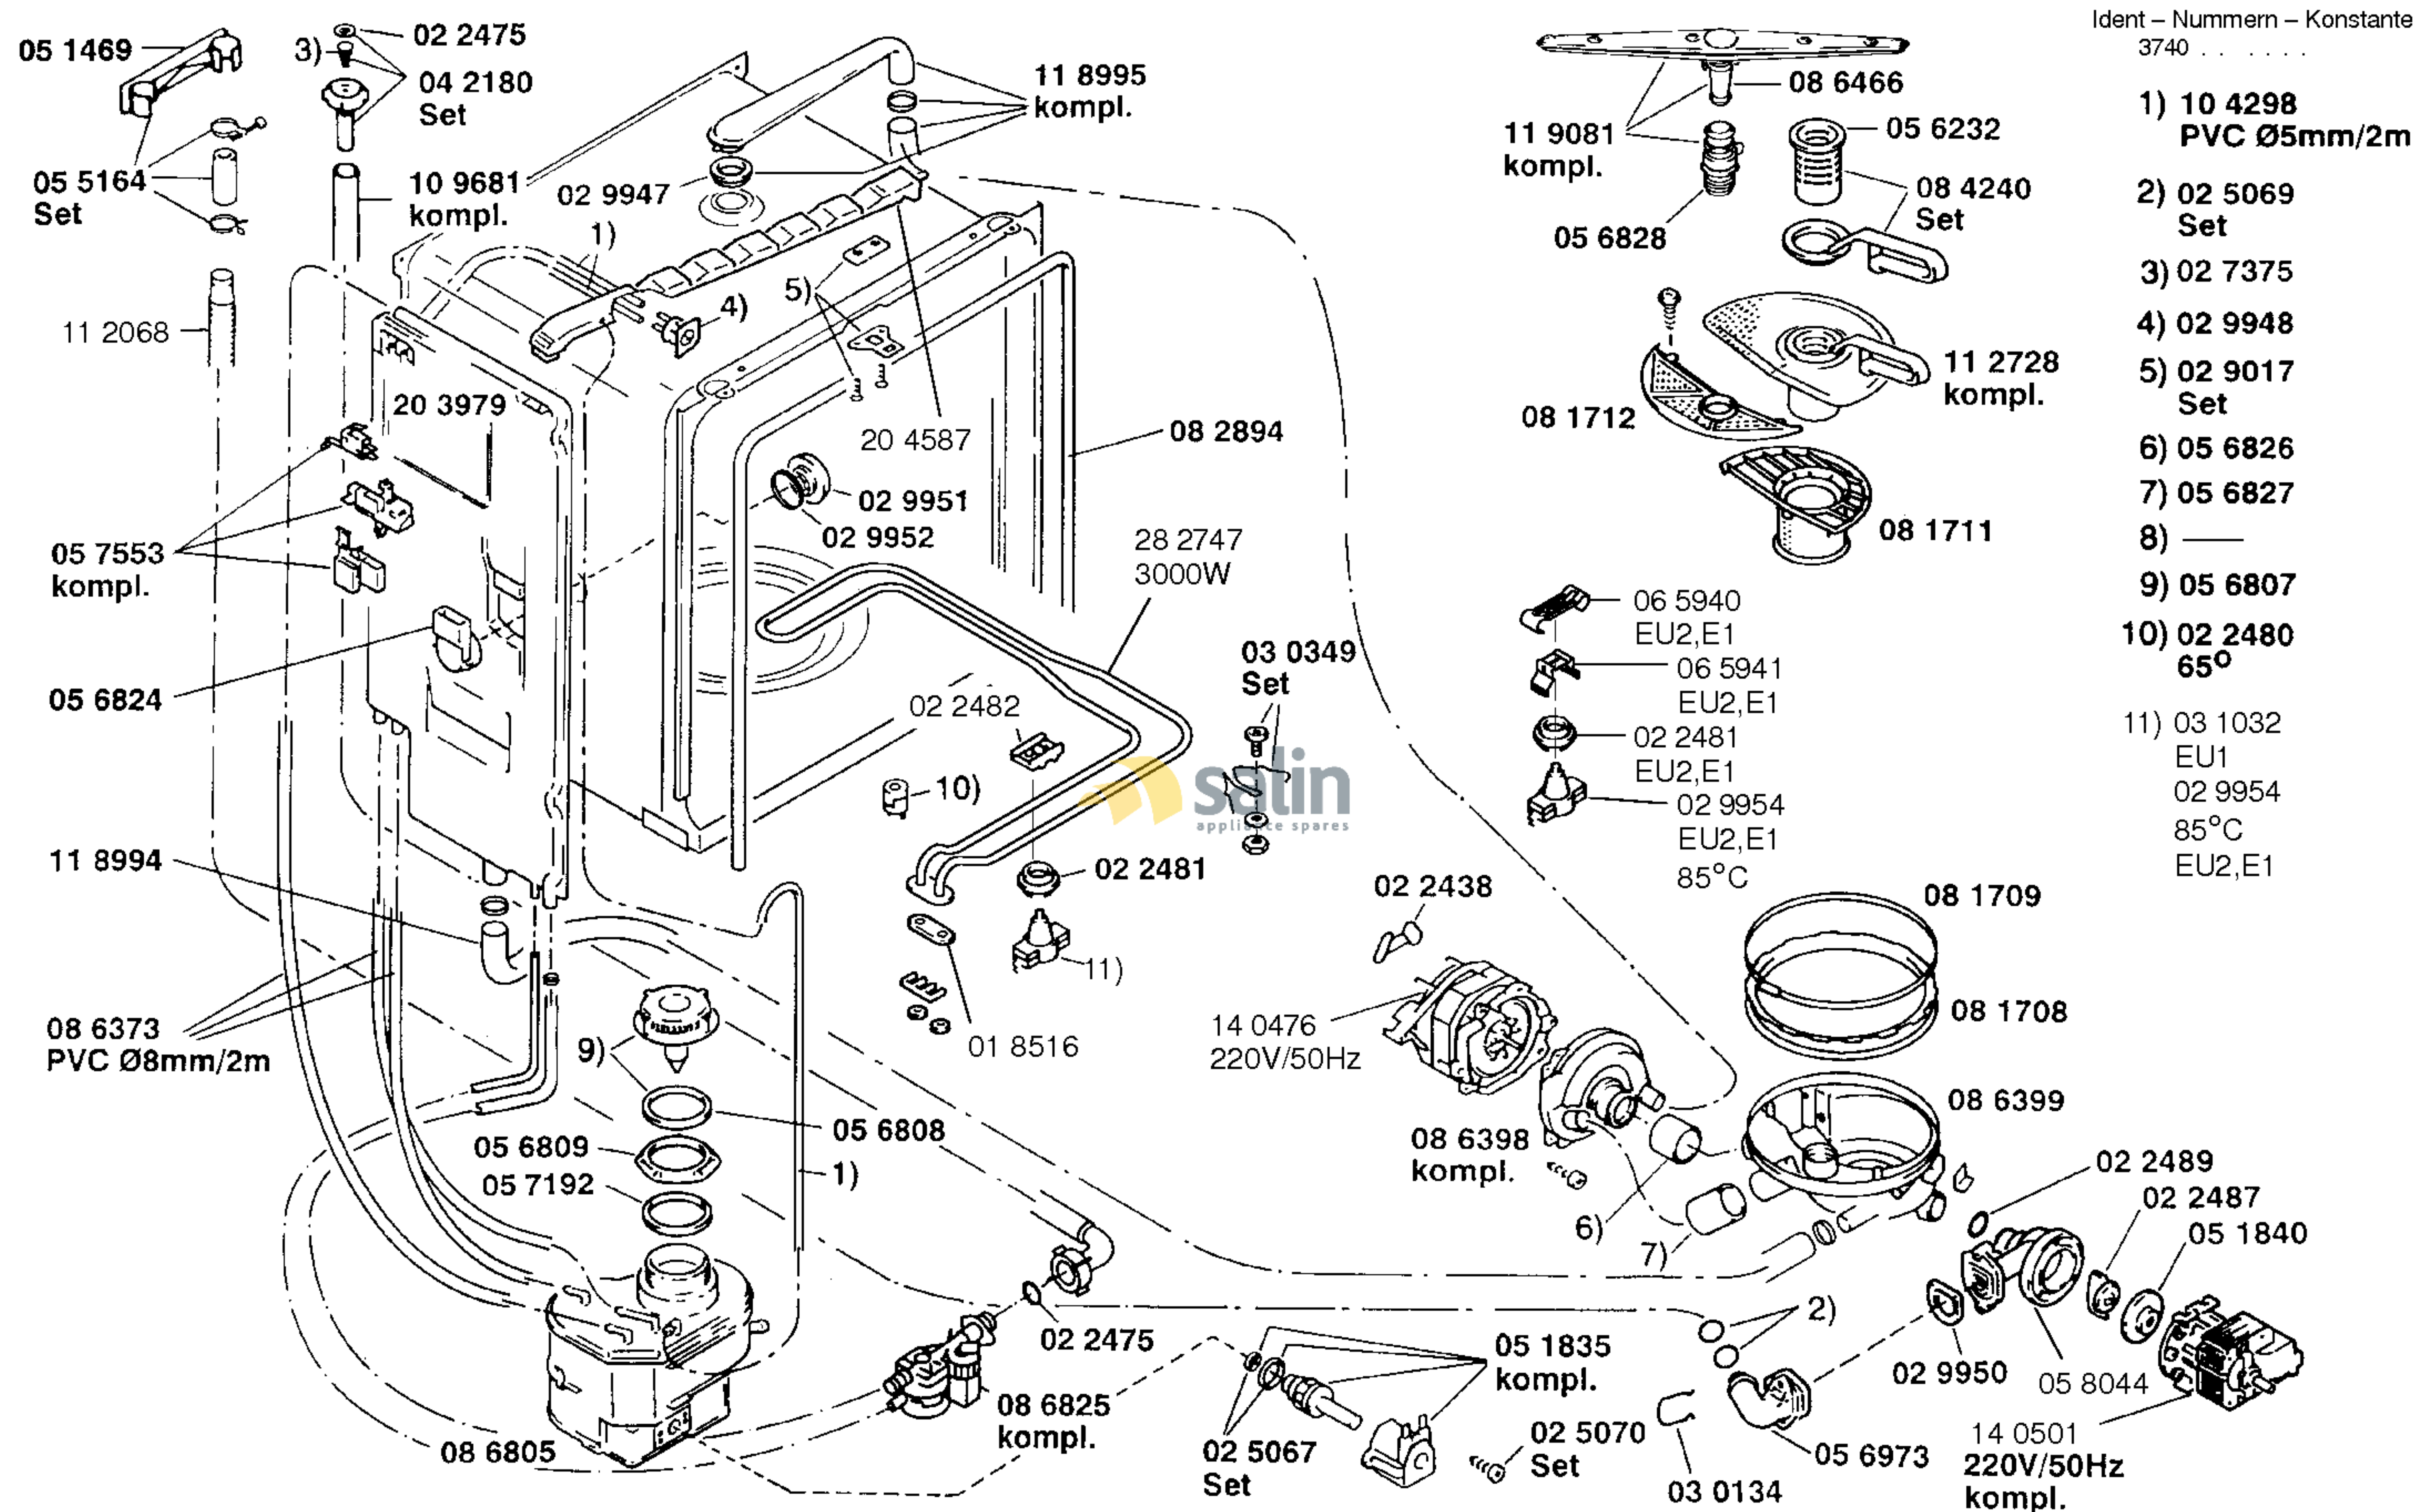

E161339-4/2

FAMILY : SMS2042EE

MODEL NO: SMS2042EE/08

Check Position No/Part No or Replacement No




BOSCH

SMS2042EU/01–EU1, weiss
SMS2042EU/08–EU2, weiss
SMS2042EE/08–E1, weiss

GESCHIRRSPÜLGERÄTE
Standgeräte

Ident – Nummern – Konstante
3740

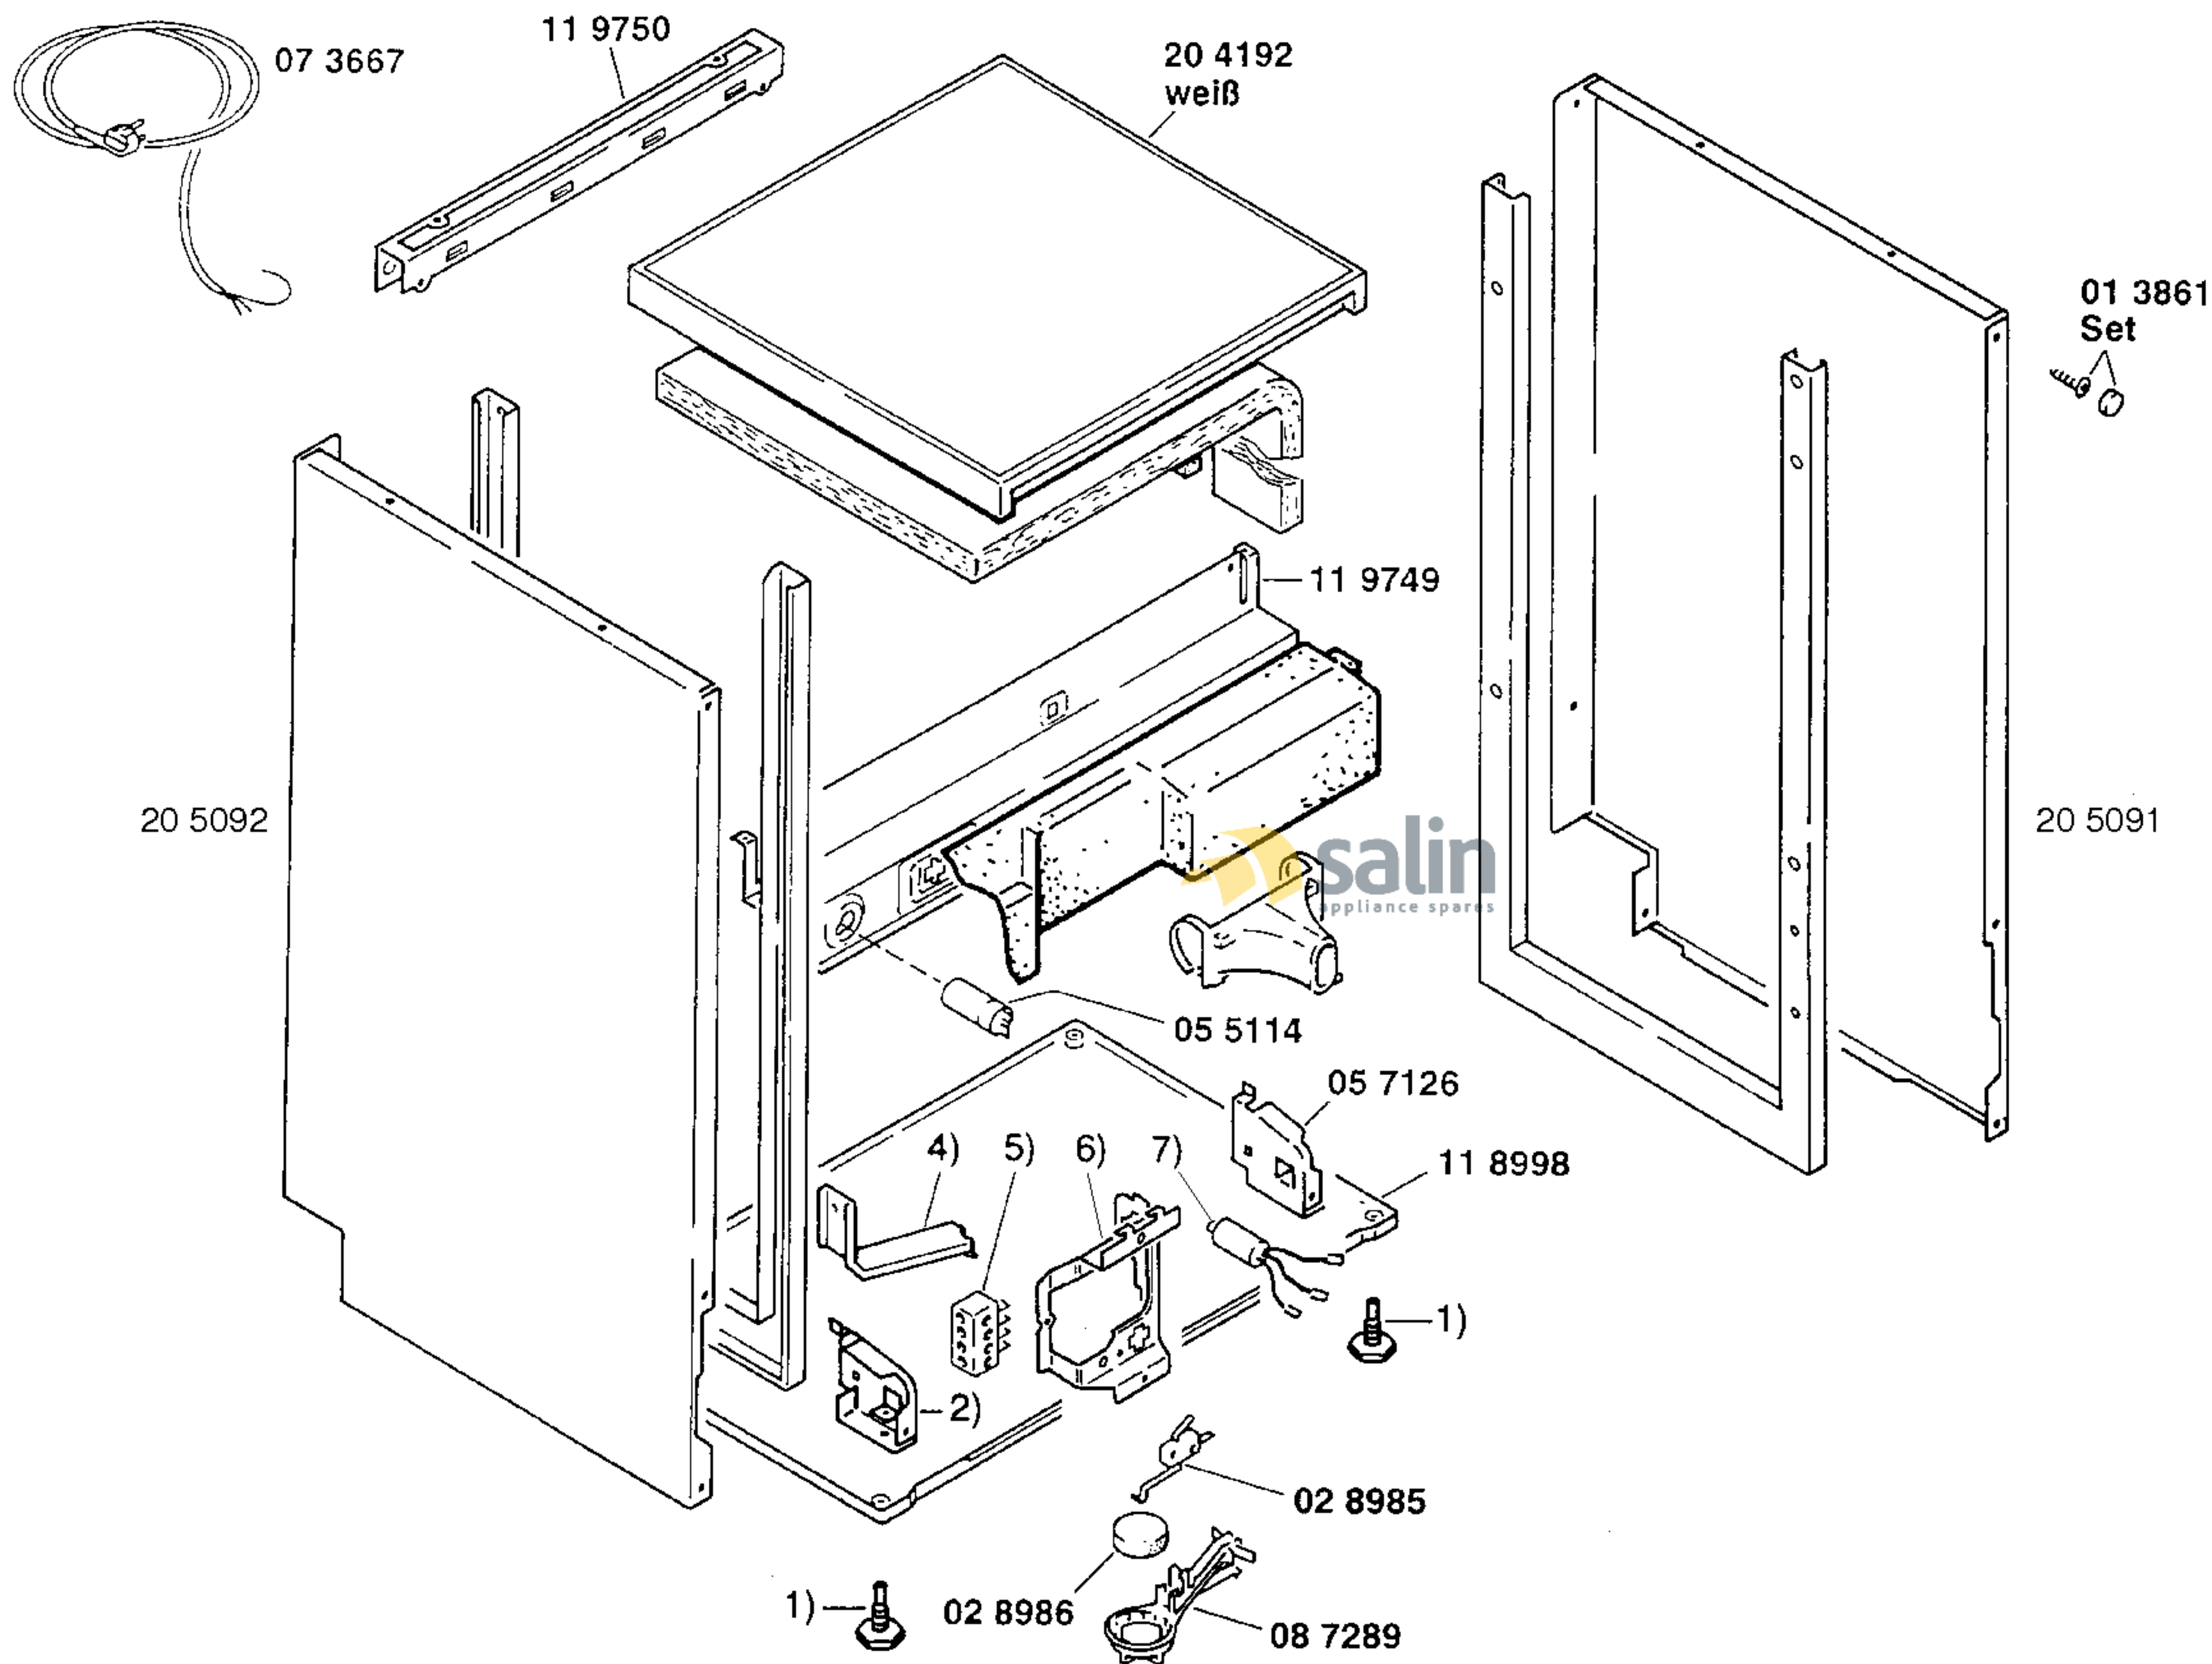

- 1) 02 9020
- 2) 05 7127
- 3) —
- 4) 08 6400
- 5) 02 7385
- 6) 08 6970
- 7) 04 3889


**BOSCH**

SMS2042EU/01–EU1, weiss
 SMS2042EU/08–EU2, weiss
 SMS2042EE/08–E1, weiss

GESCHIRRSPÜLGERÄTE
 Standgeräte

Ident – Nummern – Konstante
 3740

- 1) 01 9202
- 2) 11 0668
- 3) 05 6247

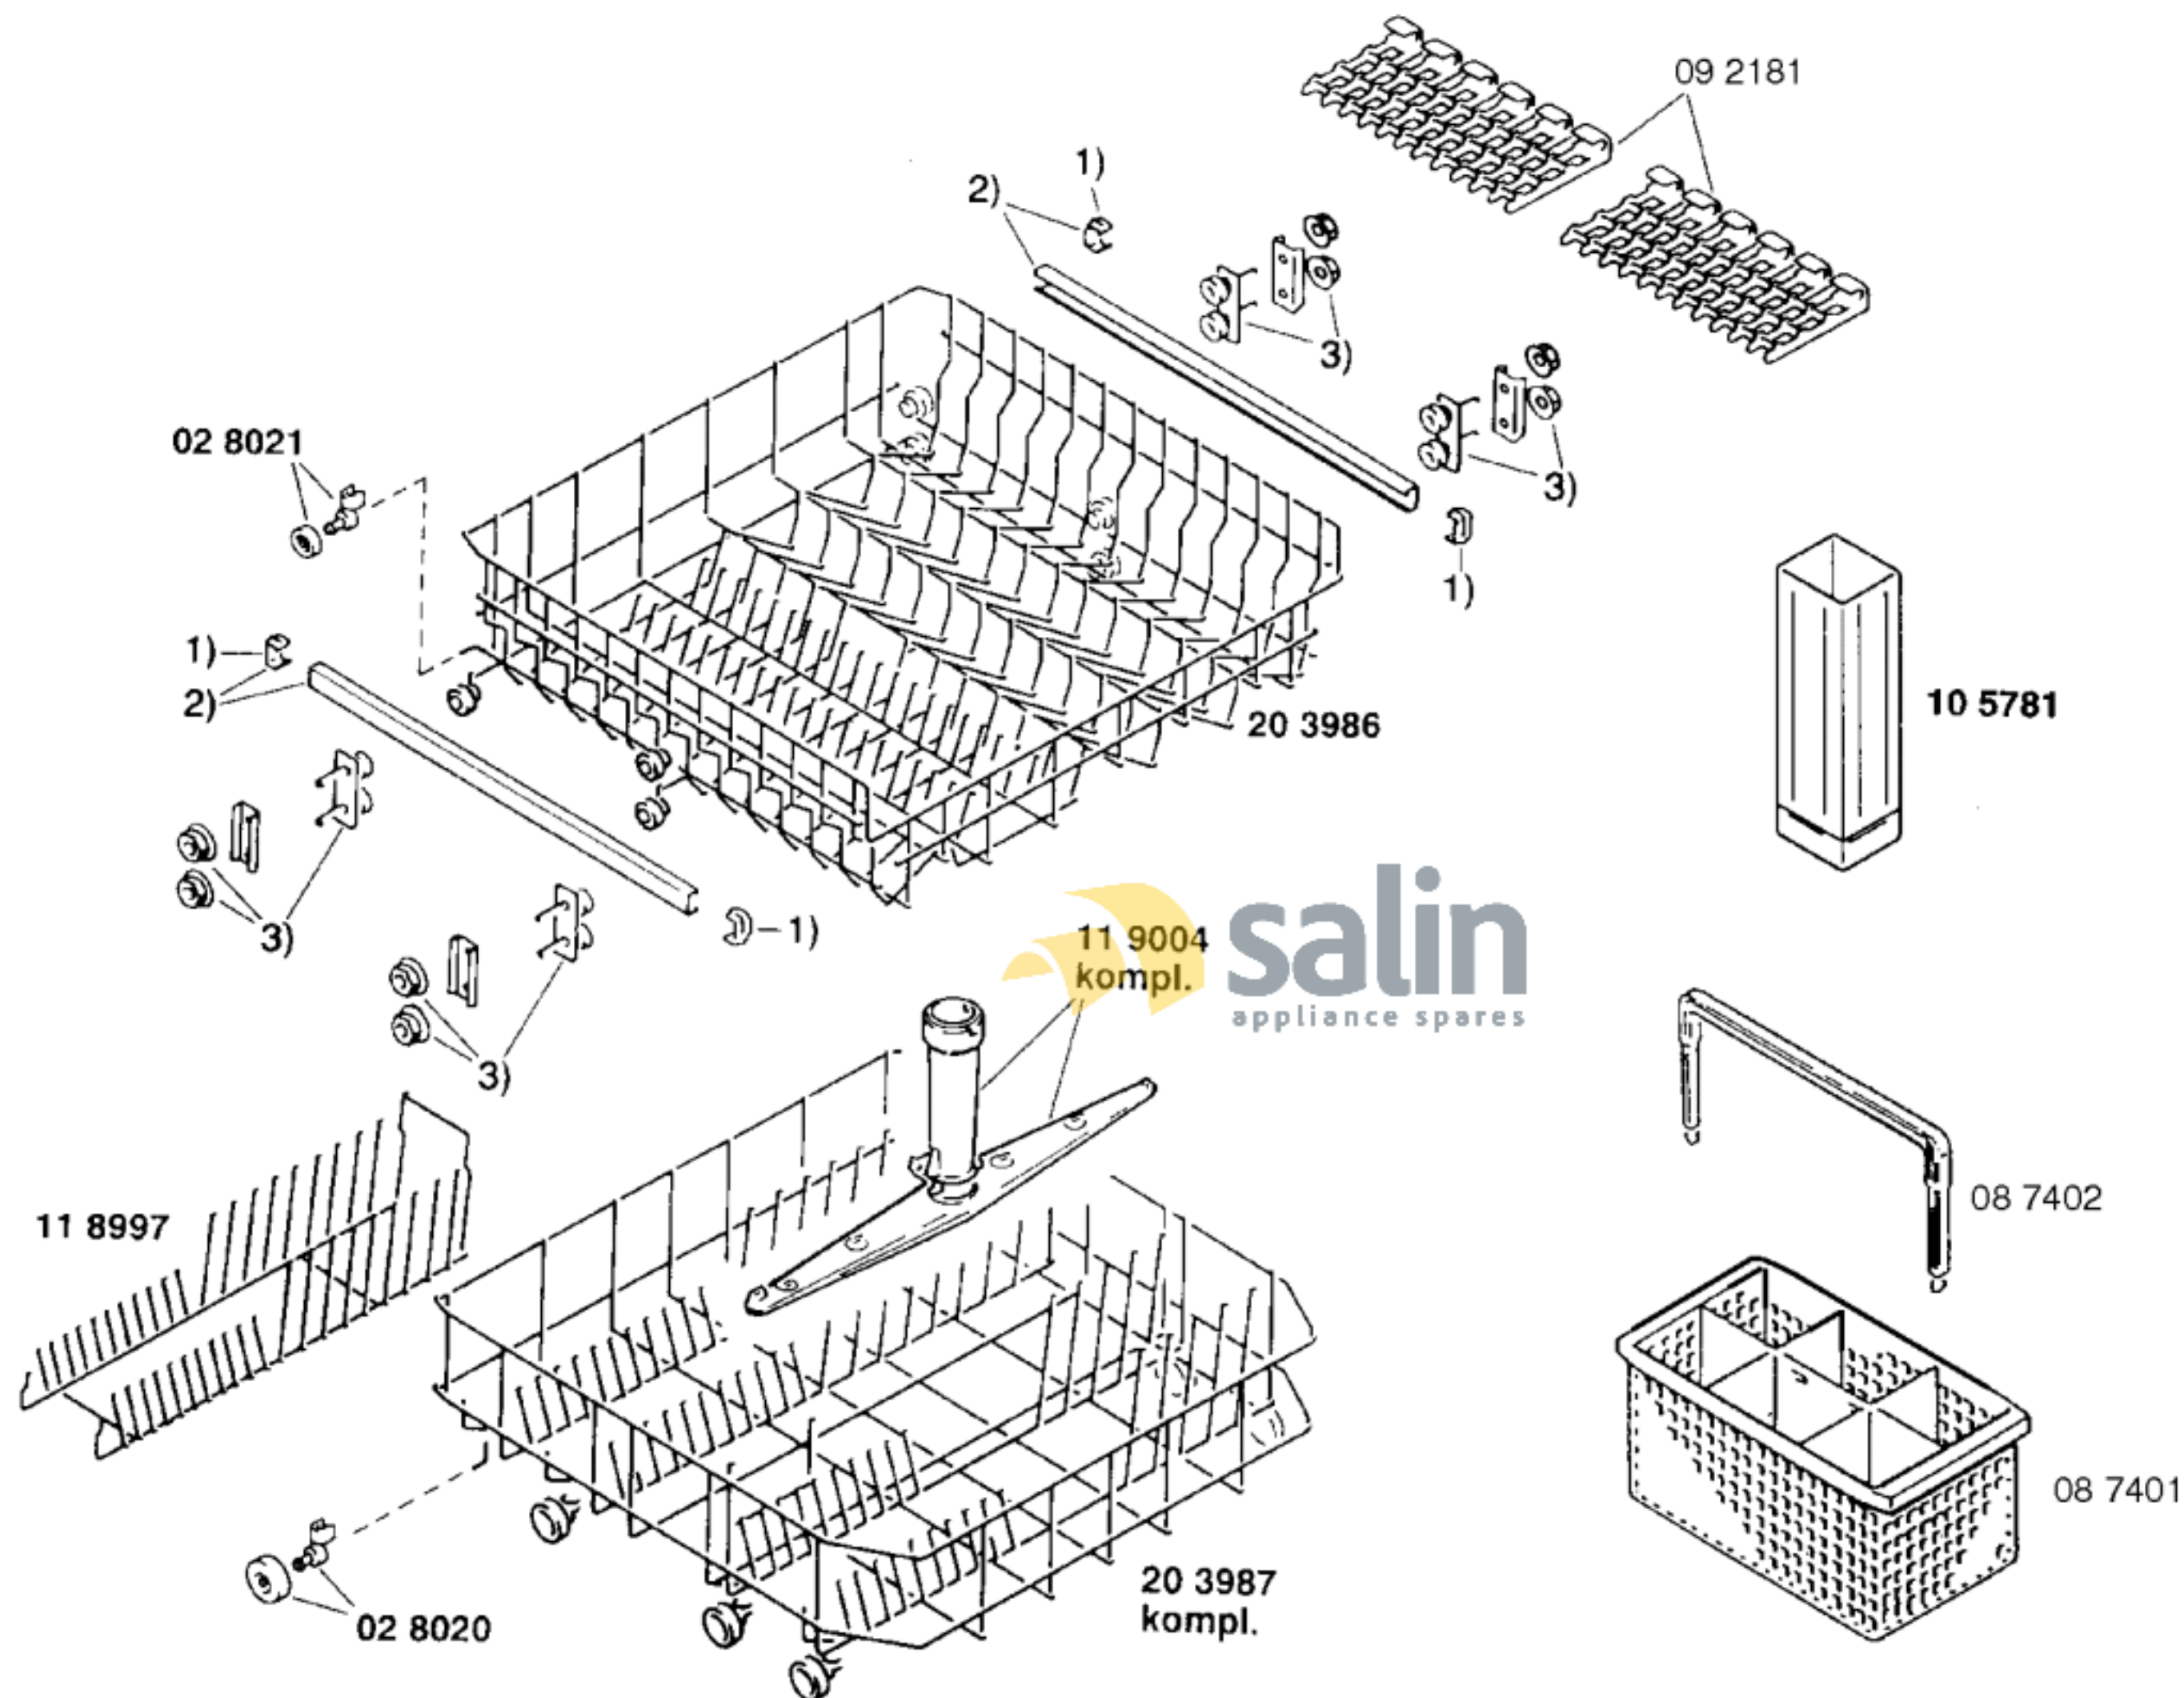

E161339–4/4

FAMILY : SMS2042EE

MODEL NO: SMS2042EE/08

Check Position No/Part No or Replacement No