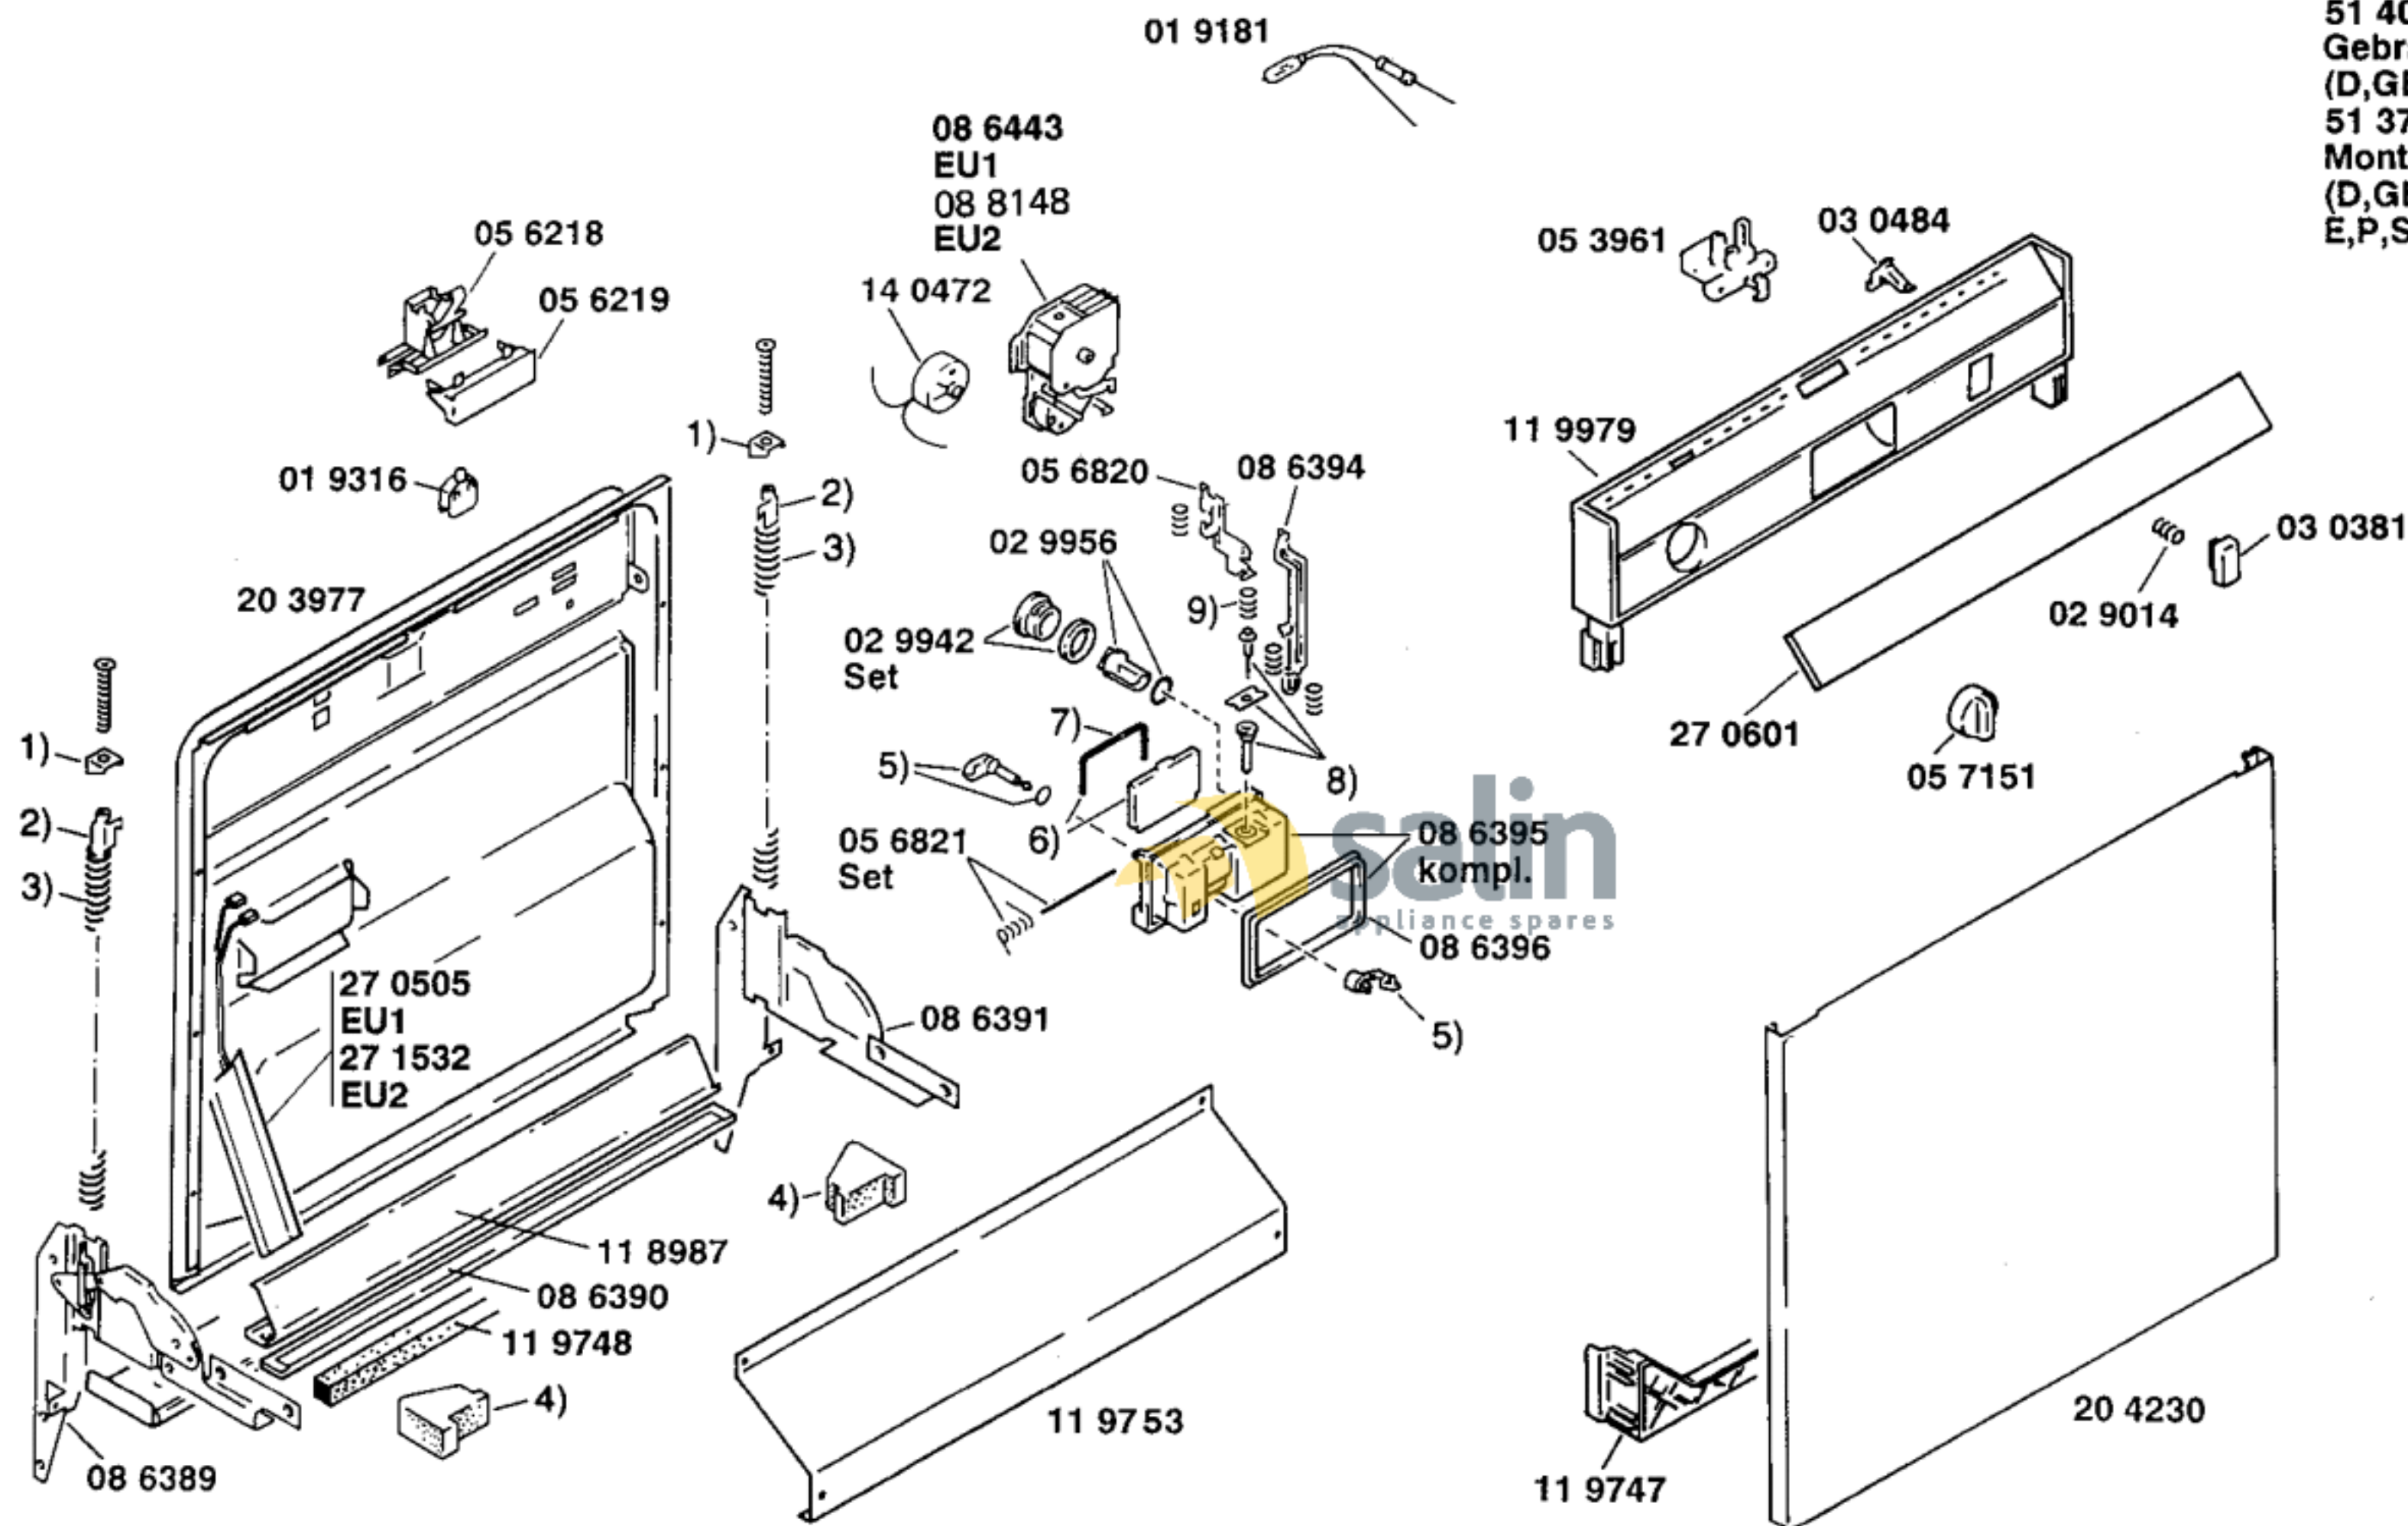


**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent - Nummern - Konstante
3740

51 4010
Gebrauchsanweisung
 (D,GB,F,I,NL,E,P)
51 3779
Montageanweisung
 (D,GB,F,I,NL,DK,
 E,P,S,N,SF,GR,TR)

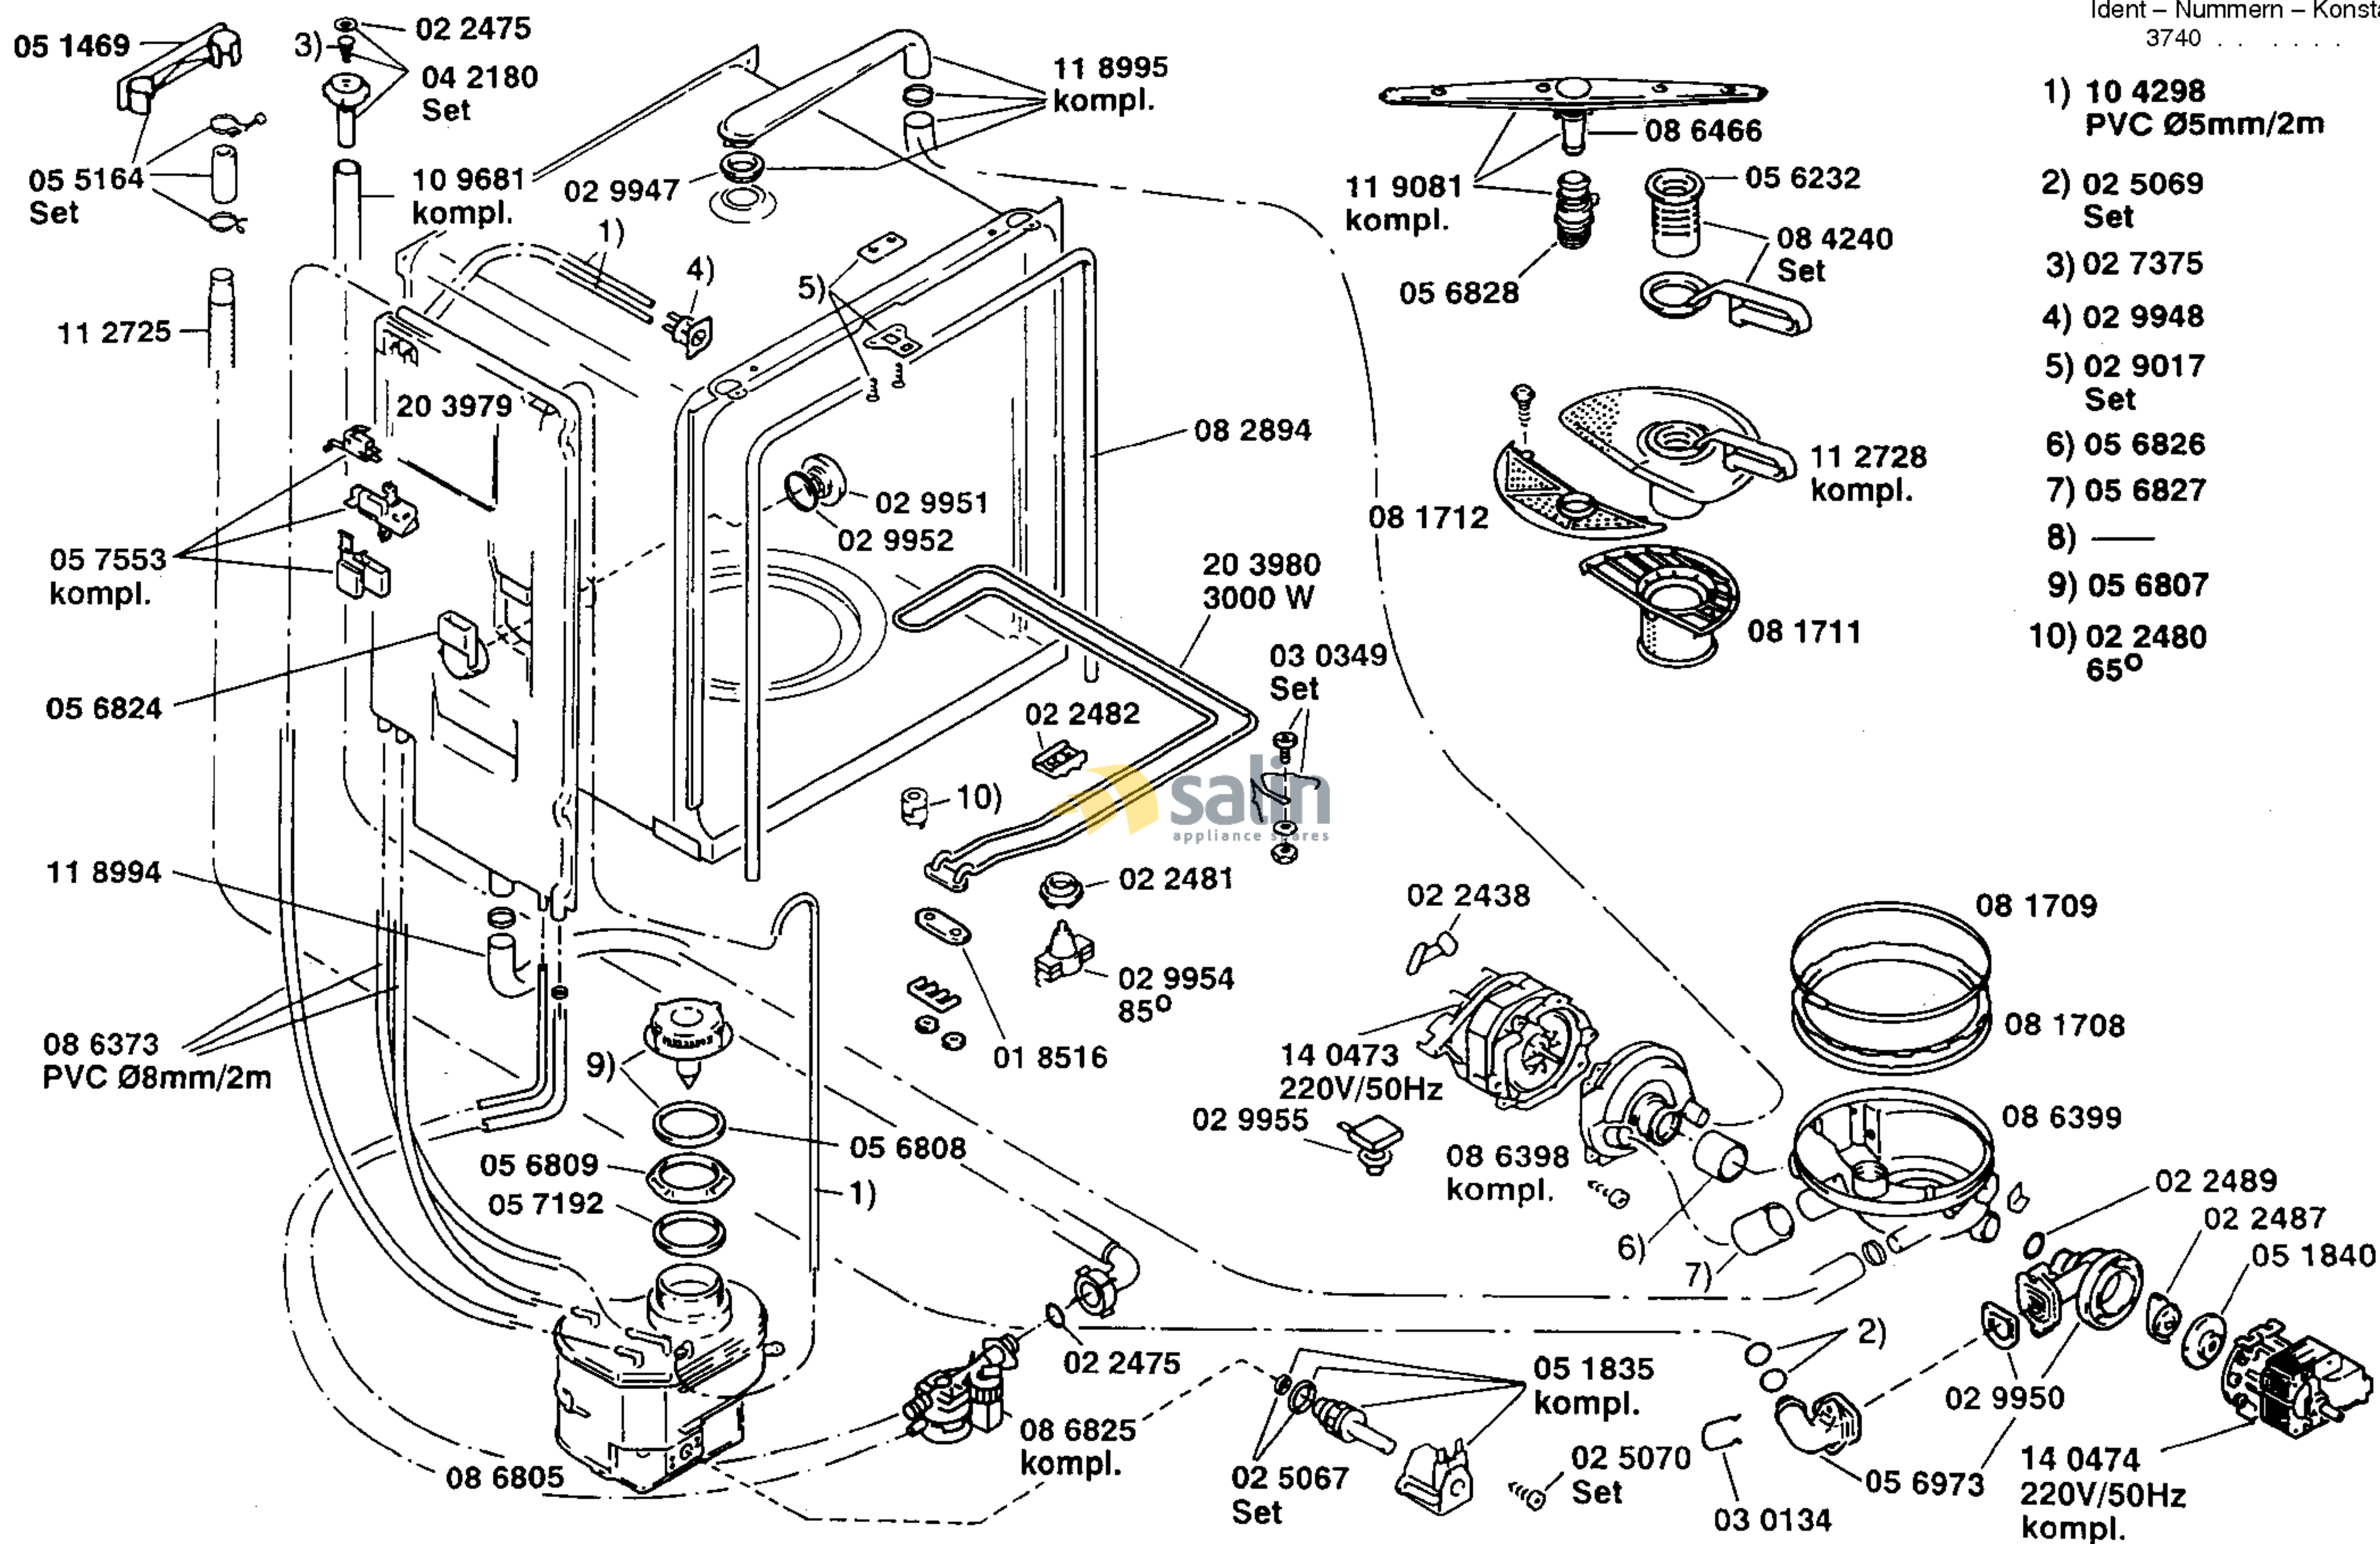
- 1) 02 9941
- 2) 02 9029
- 3) 11 9795
- 4) 05 6860
- 5) 02 9944 Set
- 6) 05 6822
- 7) 02 9943
- 8) 02 9945 Set
- 9) 02 9002 Set

160793-4/1

FAMILY : SMS1012

MODEL NO: SMS1012/03

Check Position No/Part No or Replacement No

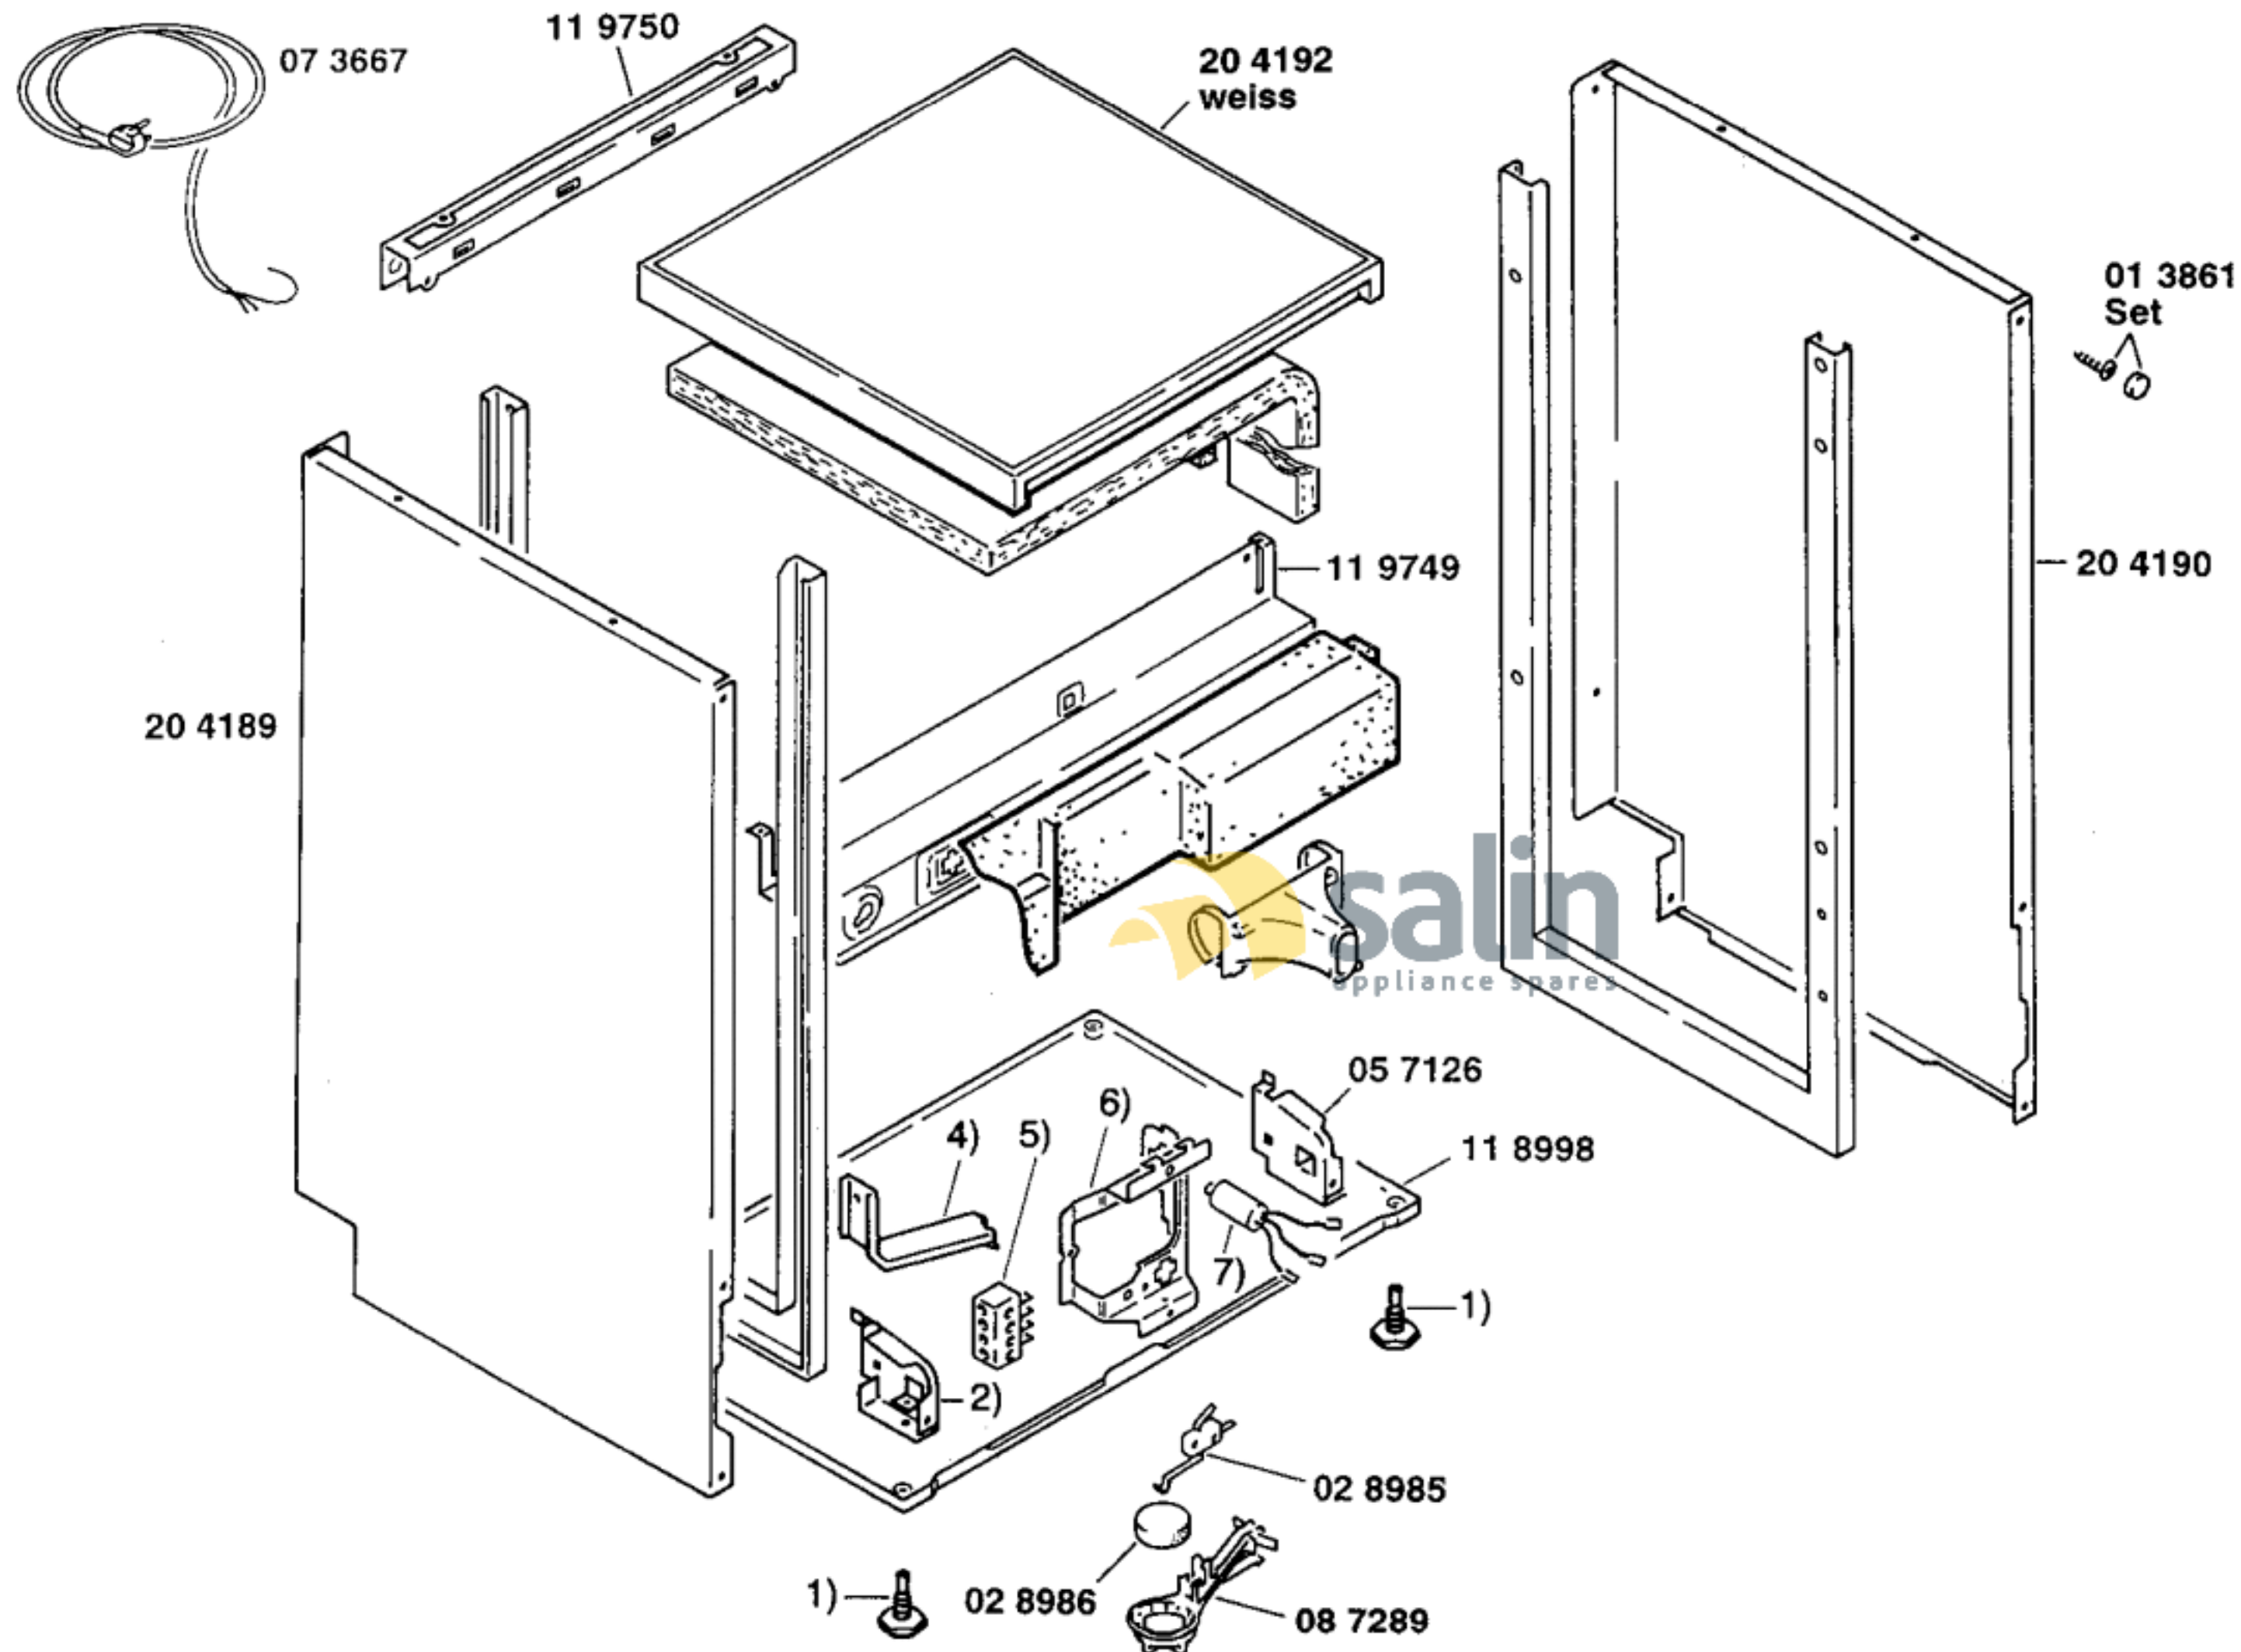
**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent – Nummern – Konstante
3740

160793-4/2

FAMILY : SMS1012

MODEL NO: SMS1012/03

Check Position No/Part No or Replacement No

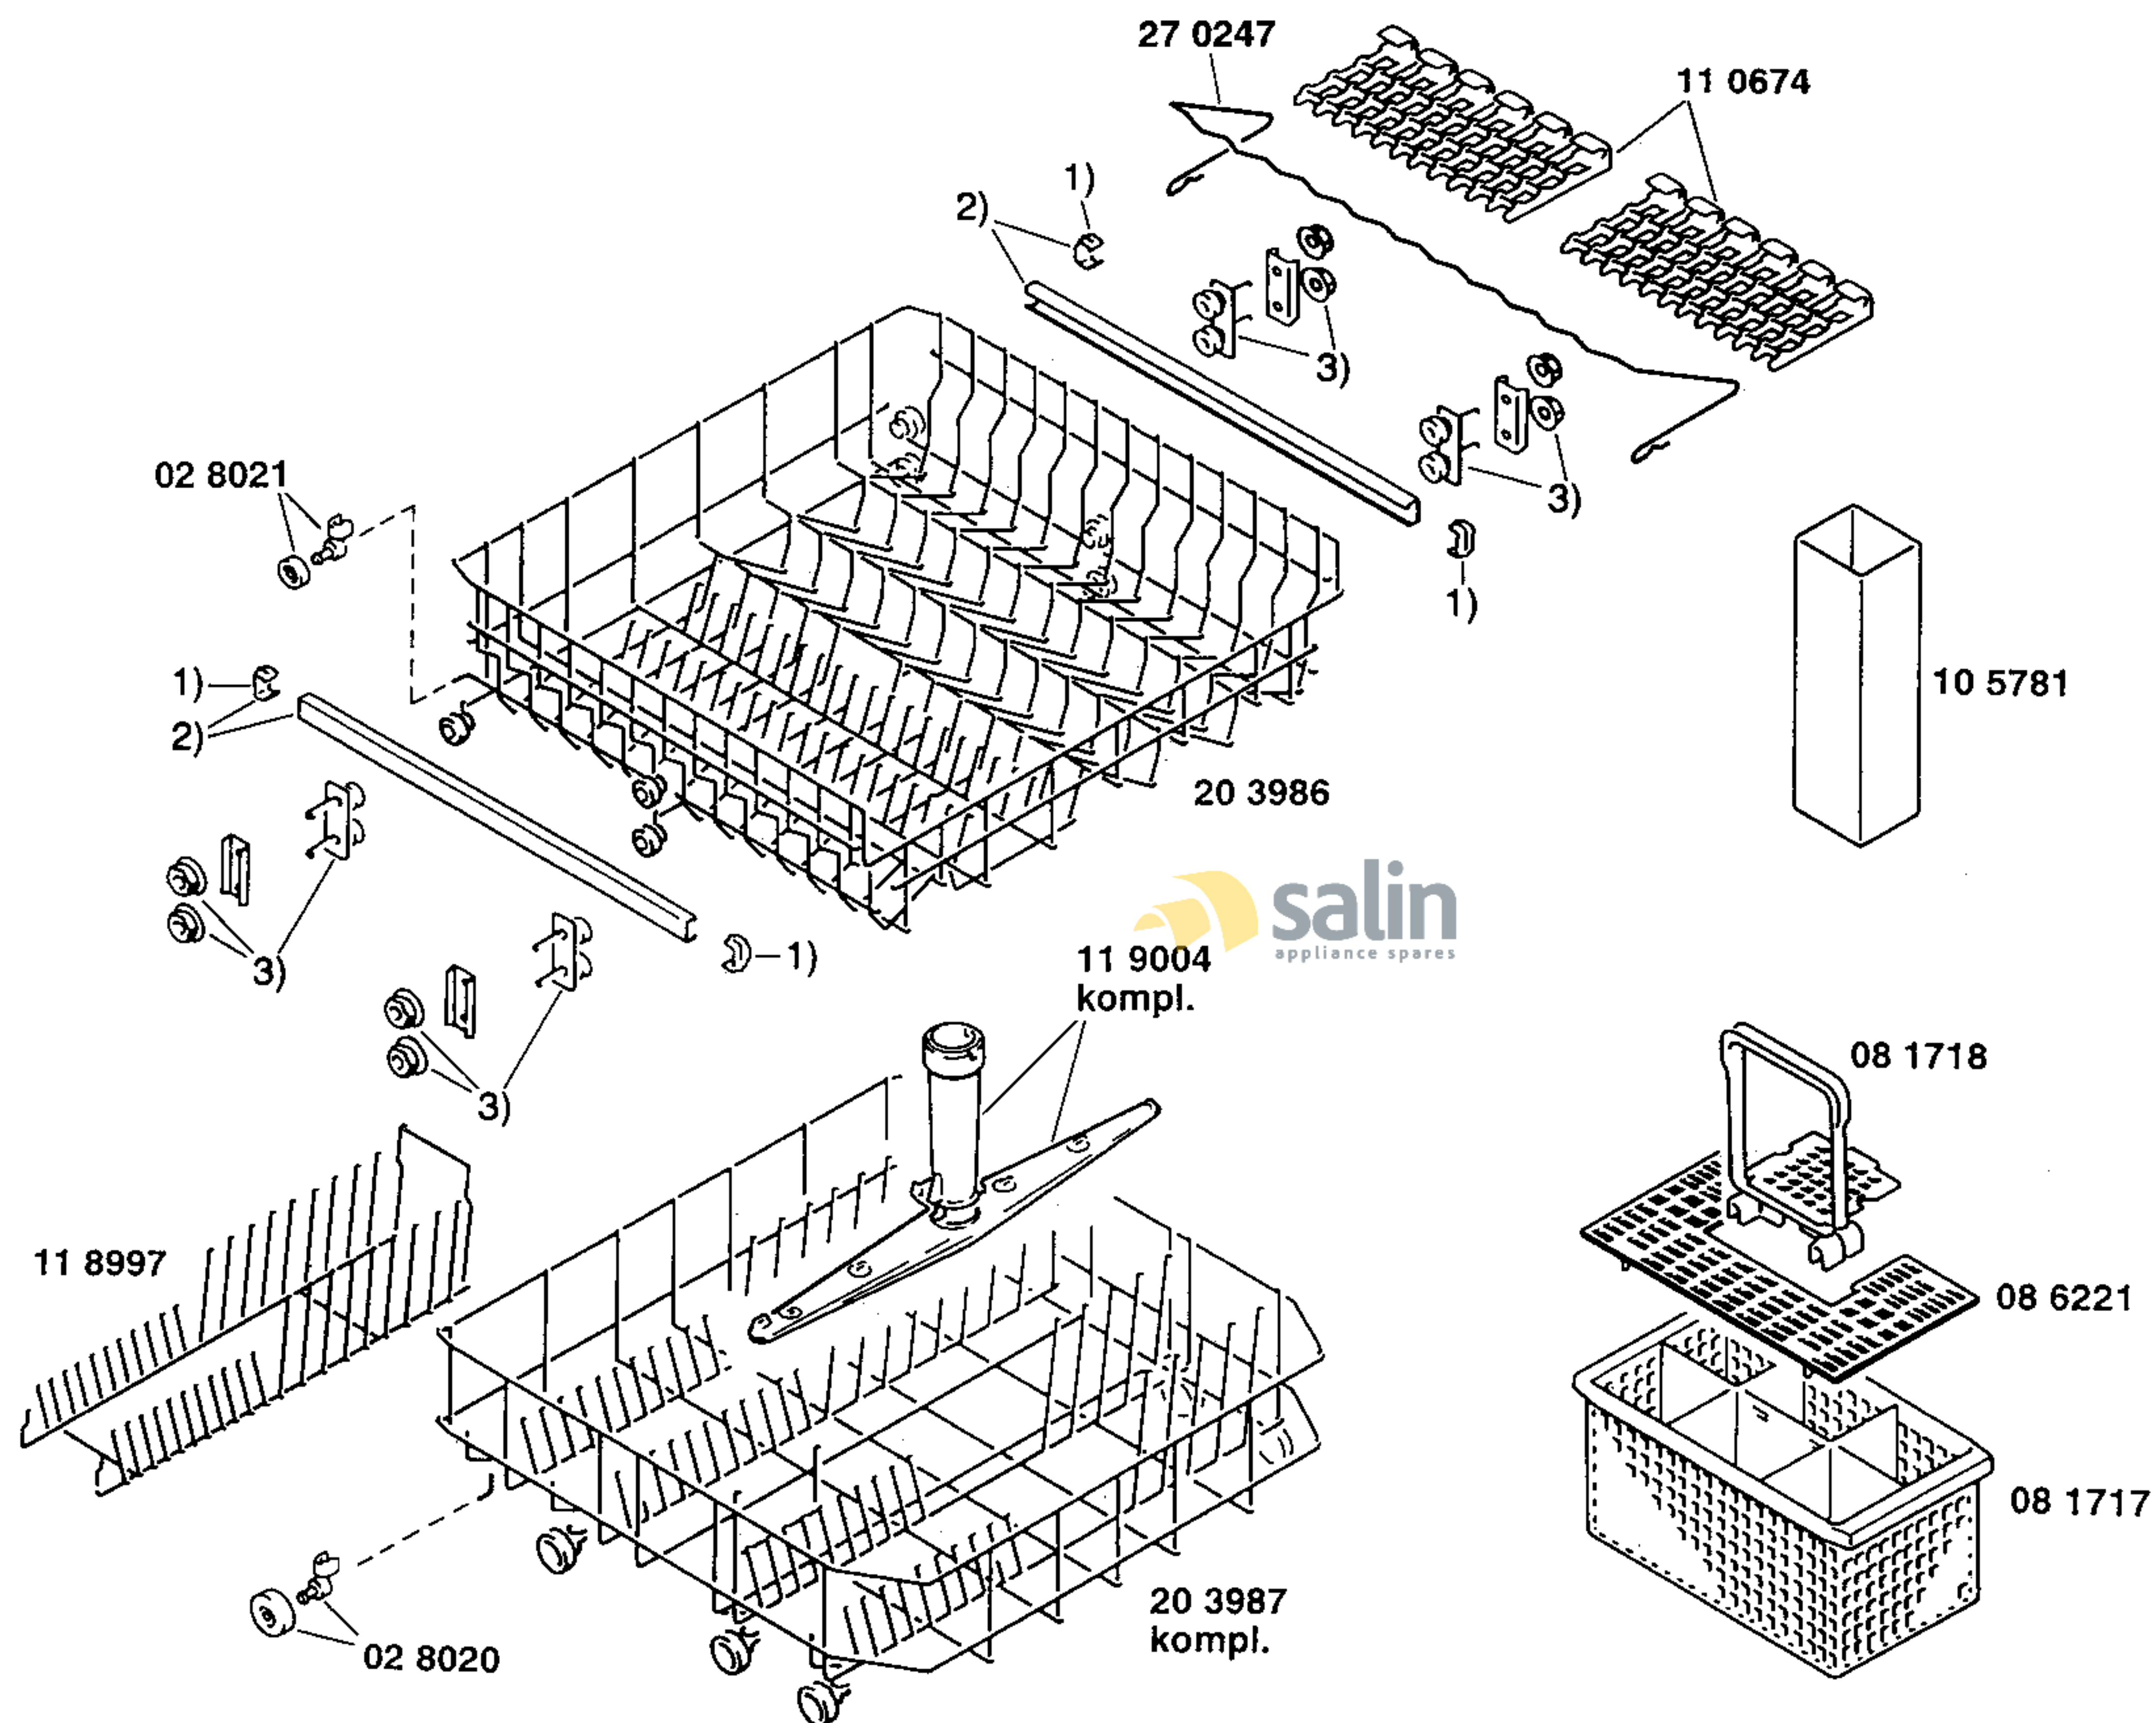
**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent - Nummern - Konstante
3740

160793-4/3

FAMILY : SMS1012

MODEL NO: SMS1012/03

Check Position No/Part No or Replacement No

**BOSCH**SMS1012/01-EU1
SMS1012/03-EU2GESCHIRRSPÜLGERÄTE
StandgeräteIdent – Nummern – Konstante
3740

- 1) 01 9202
- 2) 11 0668
- 3) 05 6247