


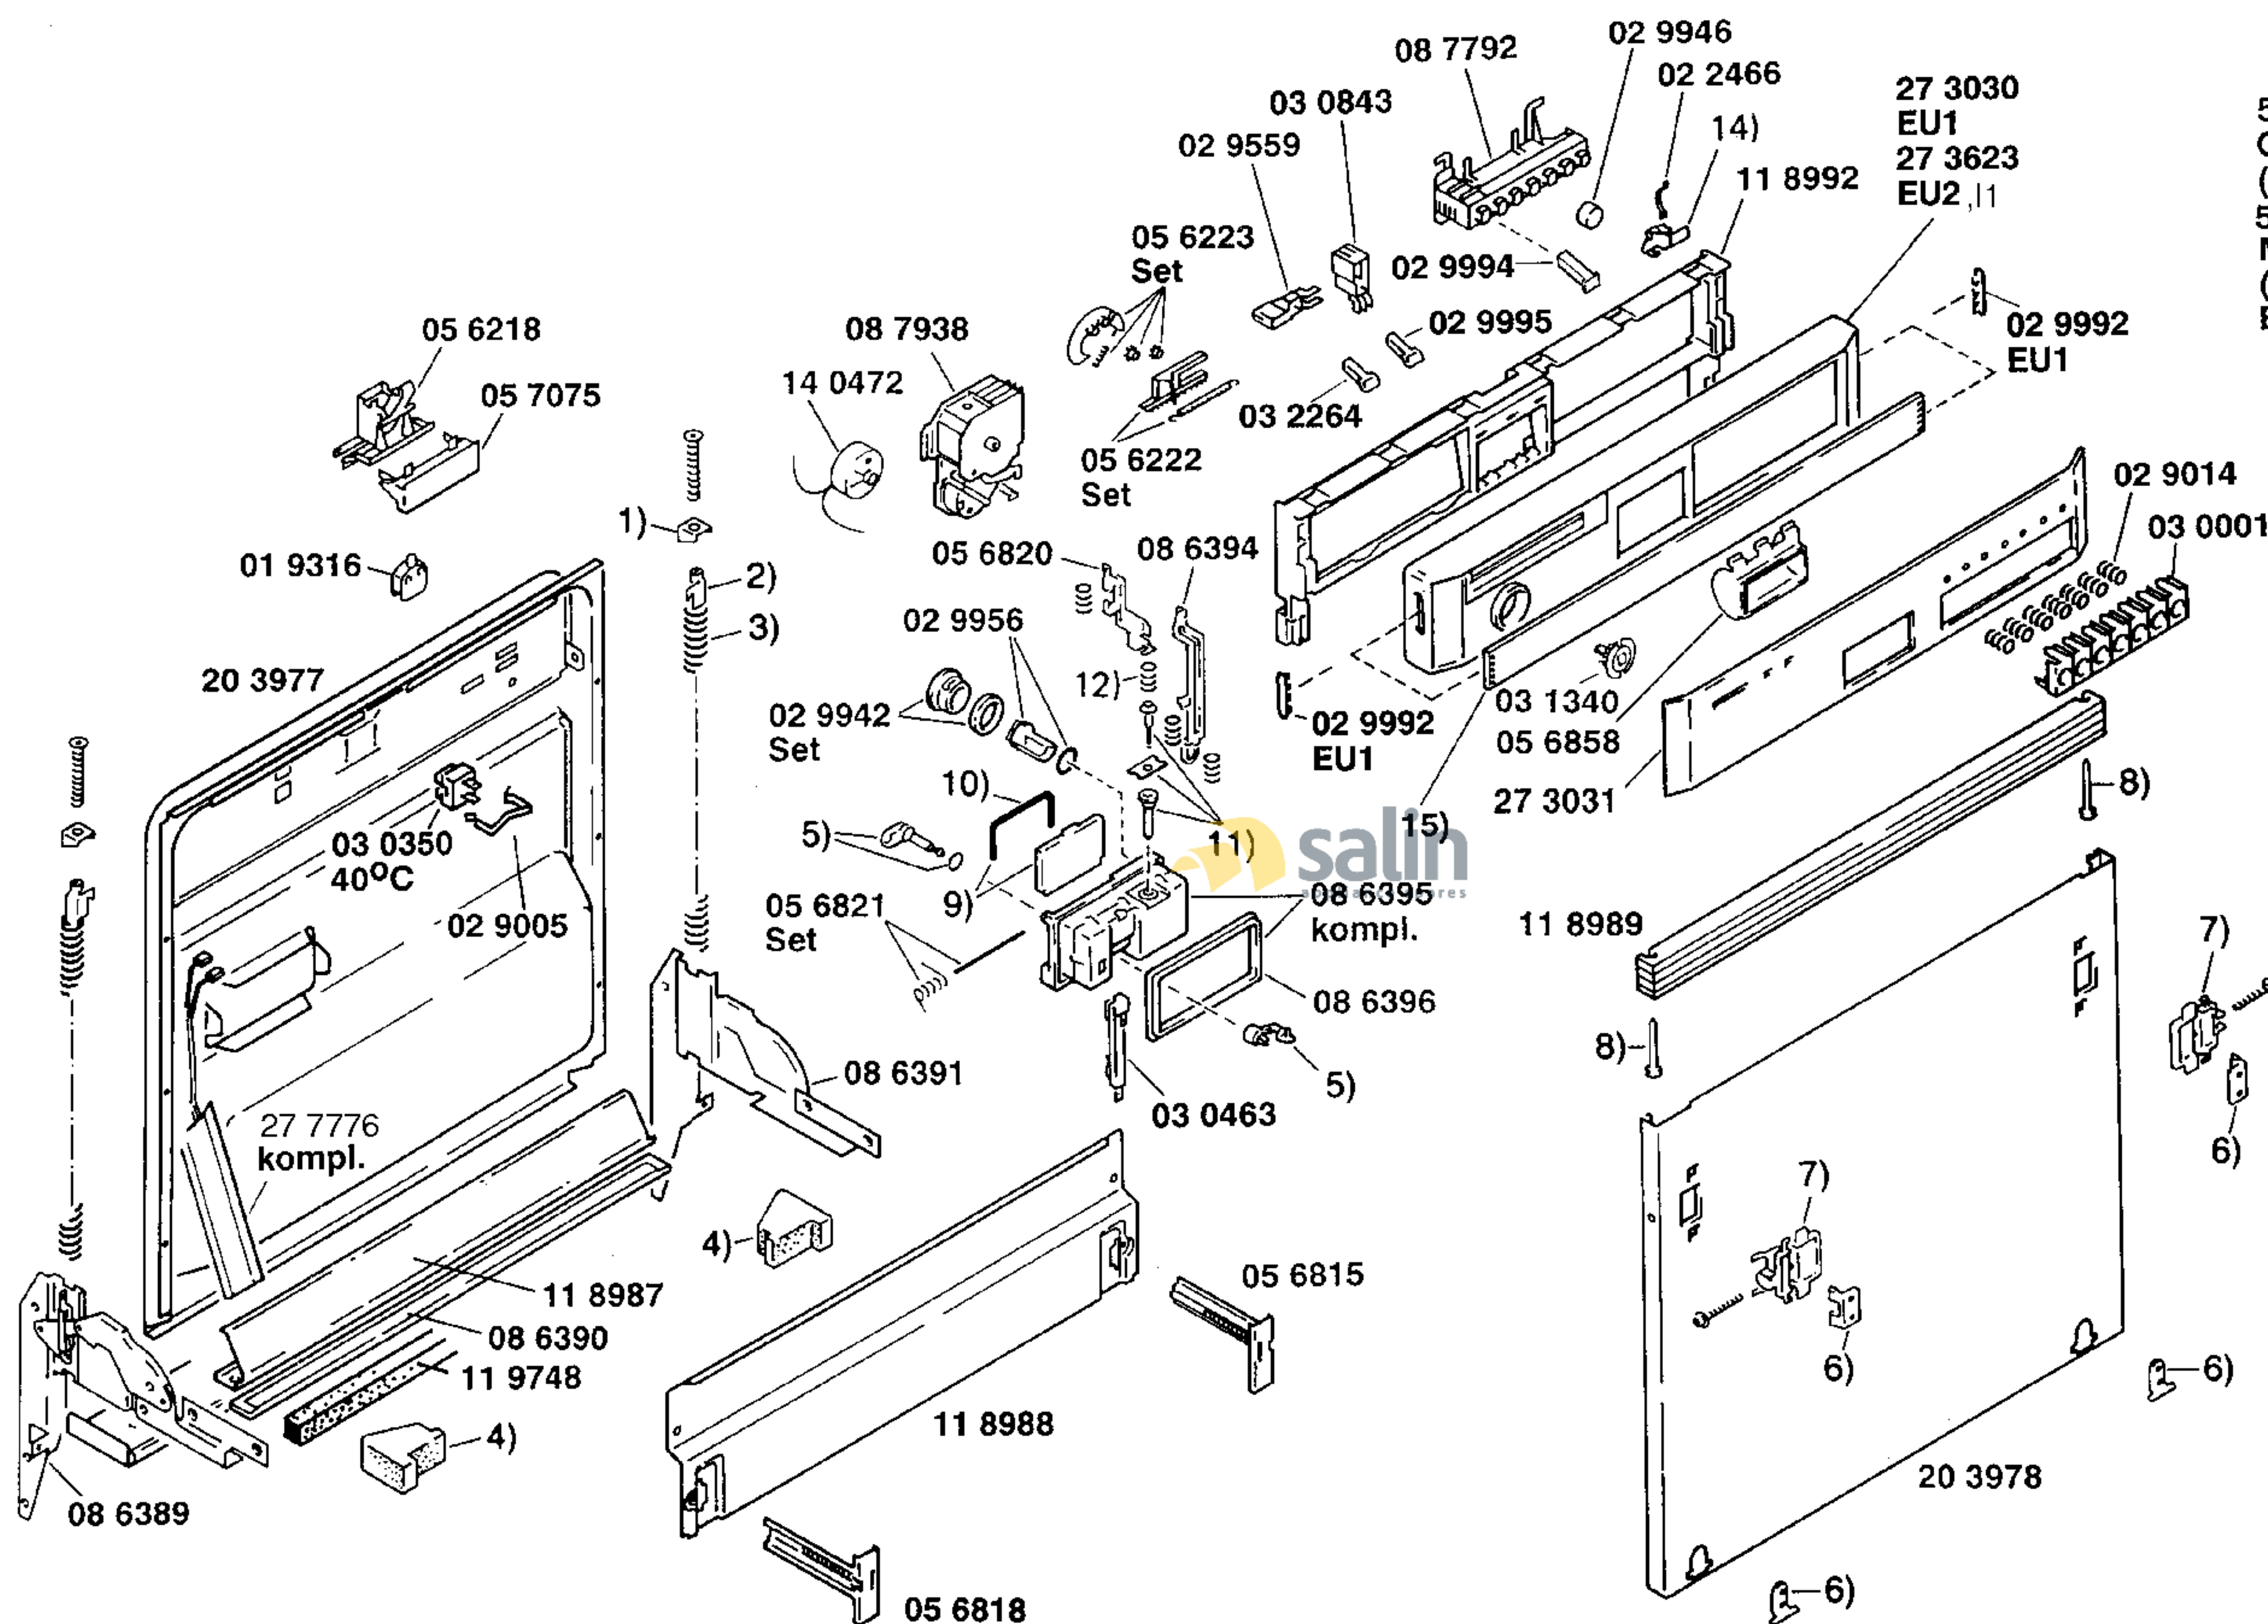

51 4733
Gebrauchsanweisung
(D,F,GB,I,NL)
51 3842
Montageanweisung
(D,F,GB,I,NL,DK,
E,P,S,N,SF,GR,TR)


- 1) 02 9941
- 2) 02 9029
- 3) 11 9996
- 4) 05 6860
- 5) 02 9944
Set
- 6) 05 6823
Set
- 7) 02 9673
- 8) 02 7091
- 9) 05 6822
- 10) 02 9943
- 11) 02 9945
Set
- 12) 02 9002
Set
- 13) 02 9992
- 14) 02 9056
rot
02 9055
grün
- 15) 27 3032
EU1
27 3626
EU2

**BOSCH**

SMI7061/01-EU1, braun
SMI7061/02-EU2, braun
SMI7061II/02-I1, braun

GESCHIRRSPÜLGERÄTE
Unterbaugeräte

Ident - Nummern - Konstante
3740

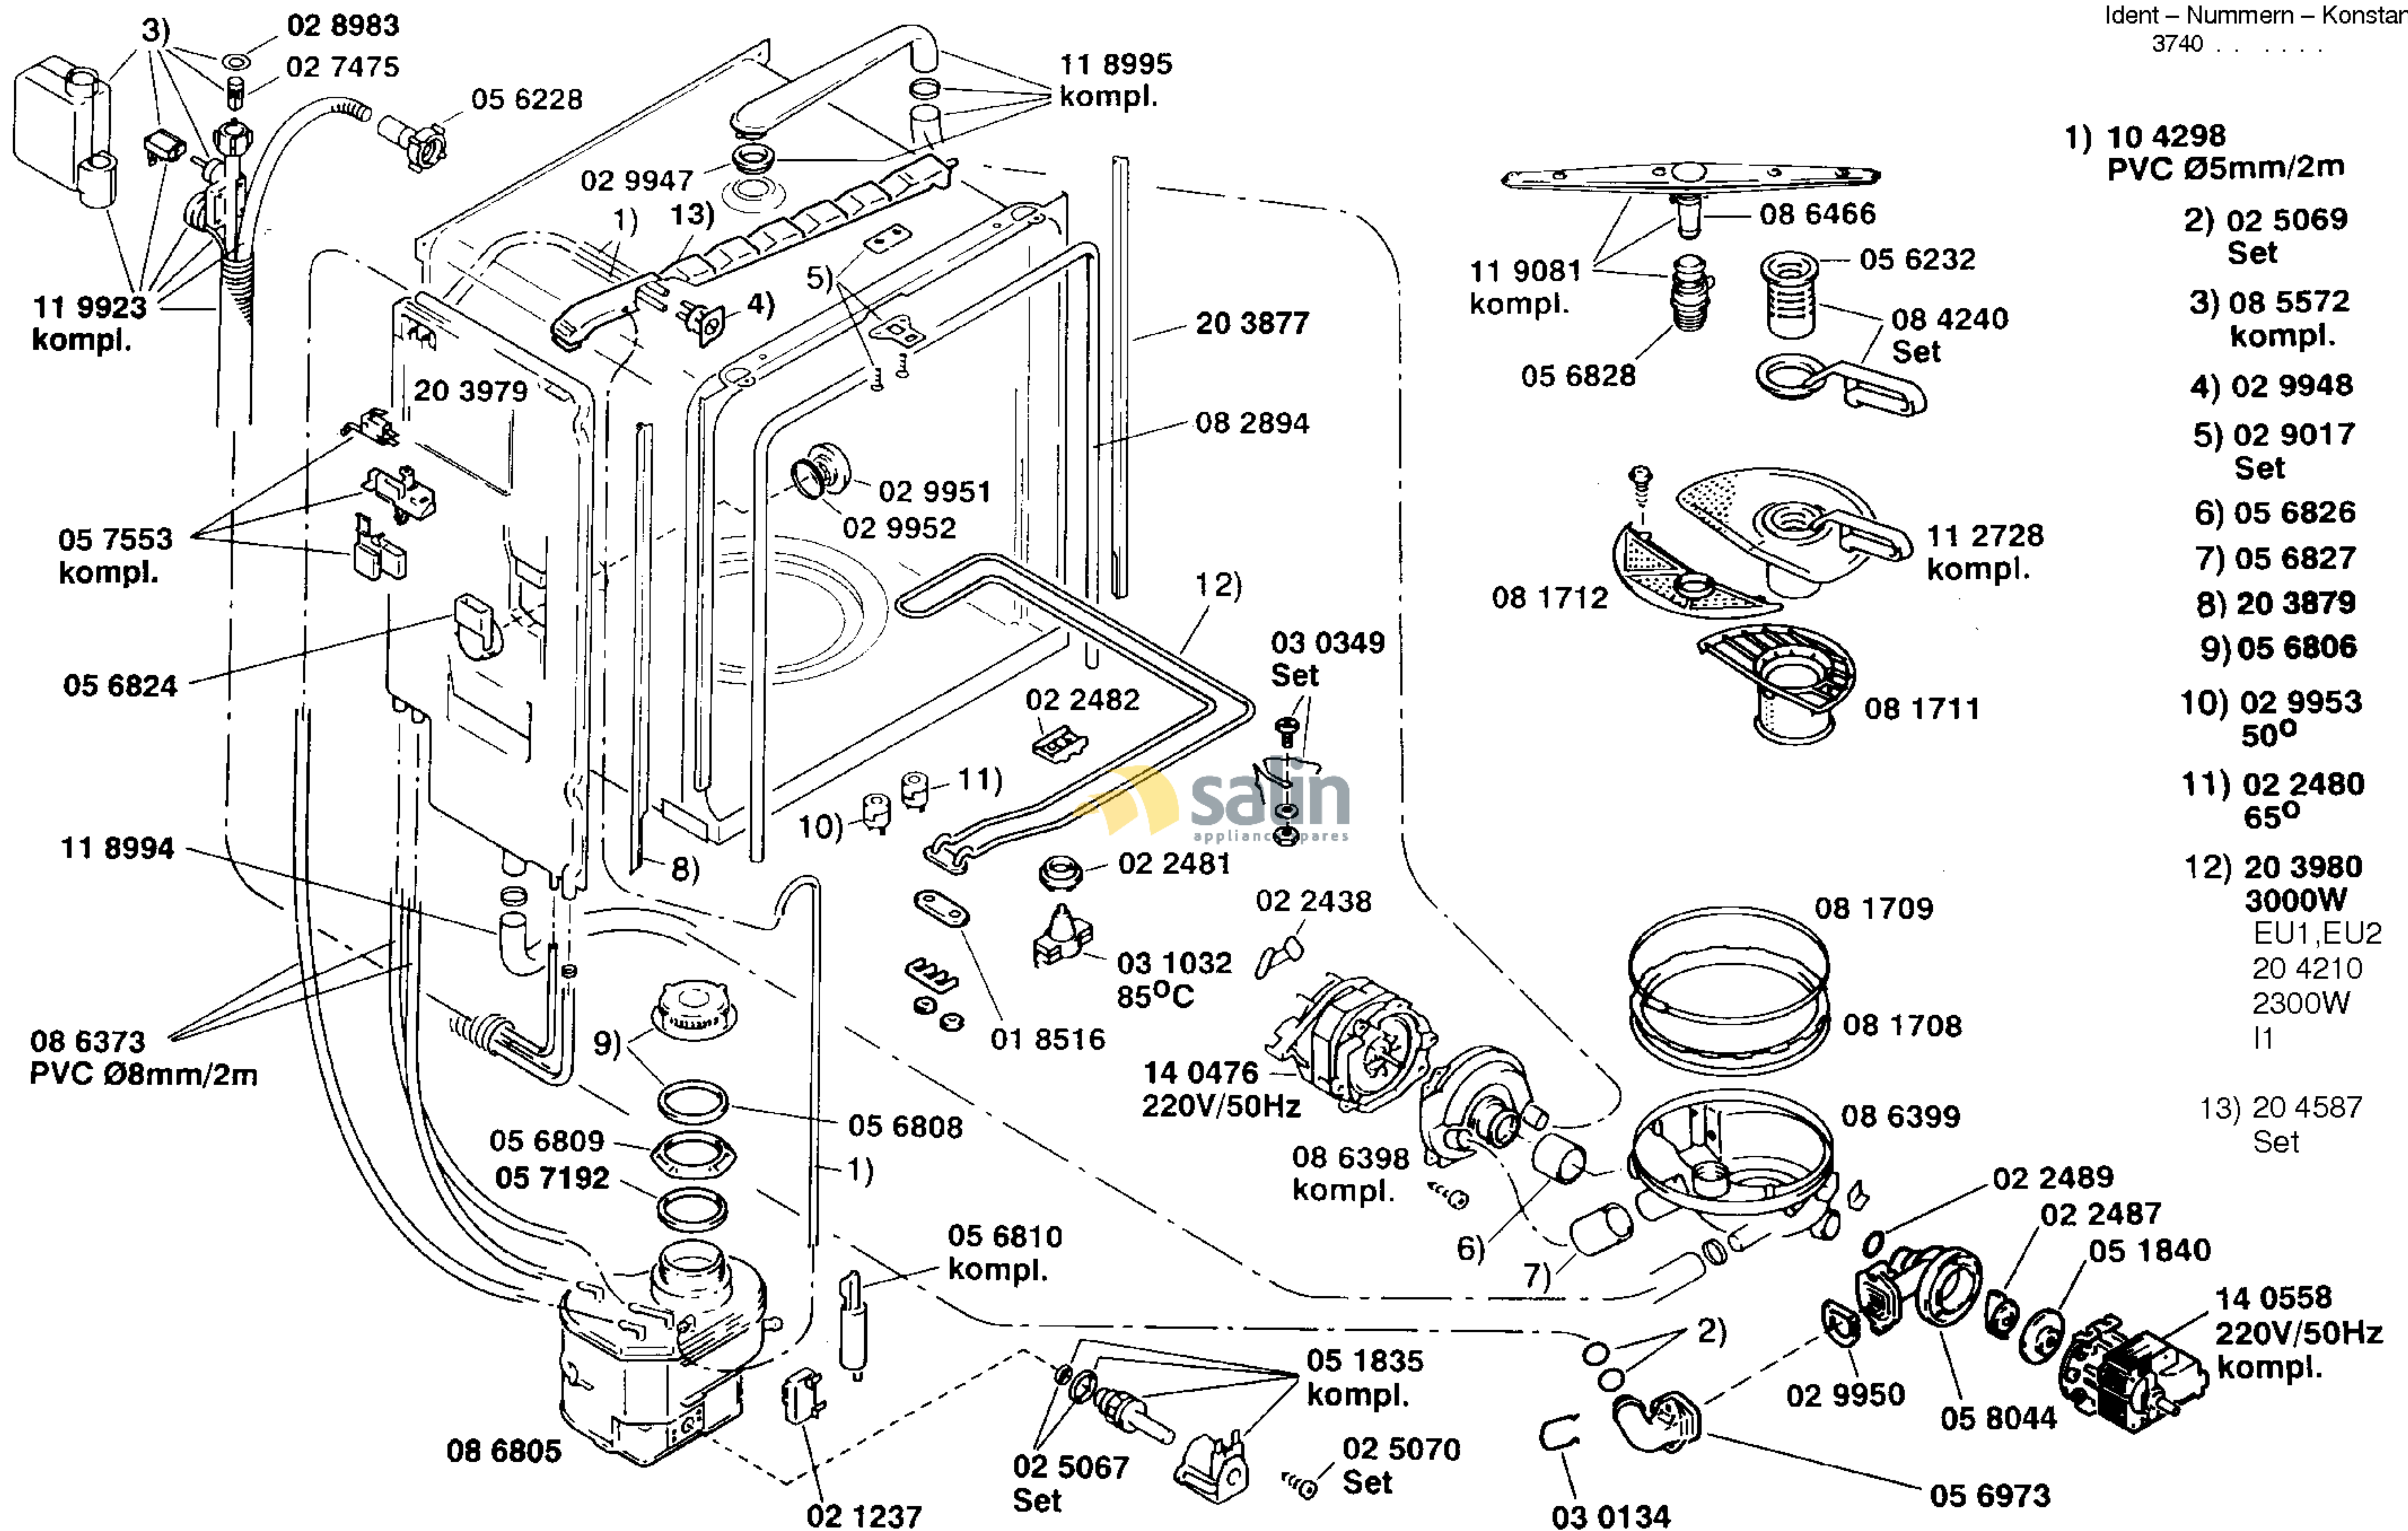

161072-4/2

FAMILY : SMI7061

MODEL NO: SMI7061/02


Check Position No/Part No or Replacement No

**BOSCH**

SMI7061/01-EU1, braun

SMI7061/02-EU2, braun

SMI7061II/02-I1, braun

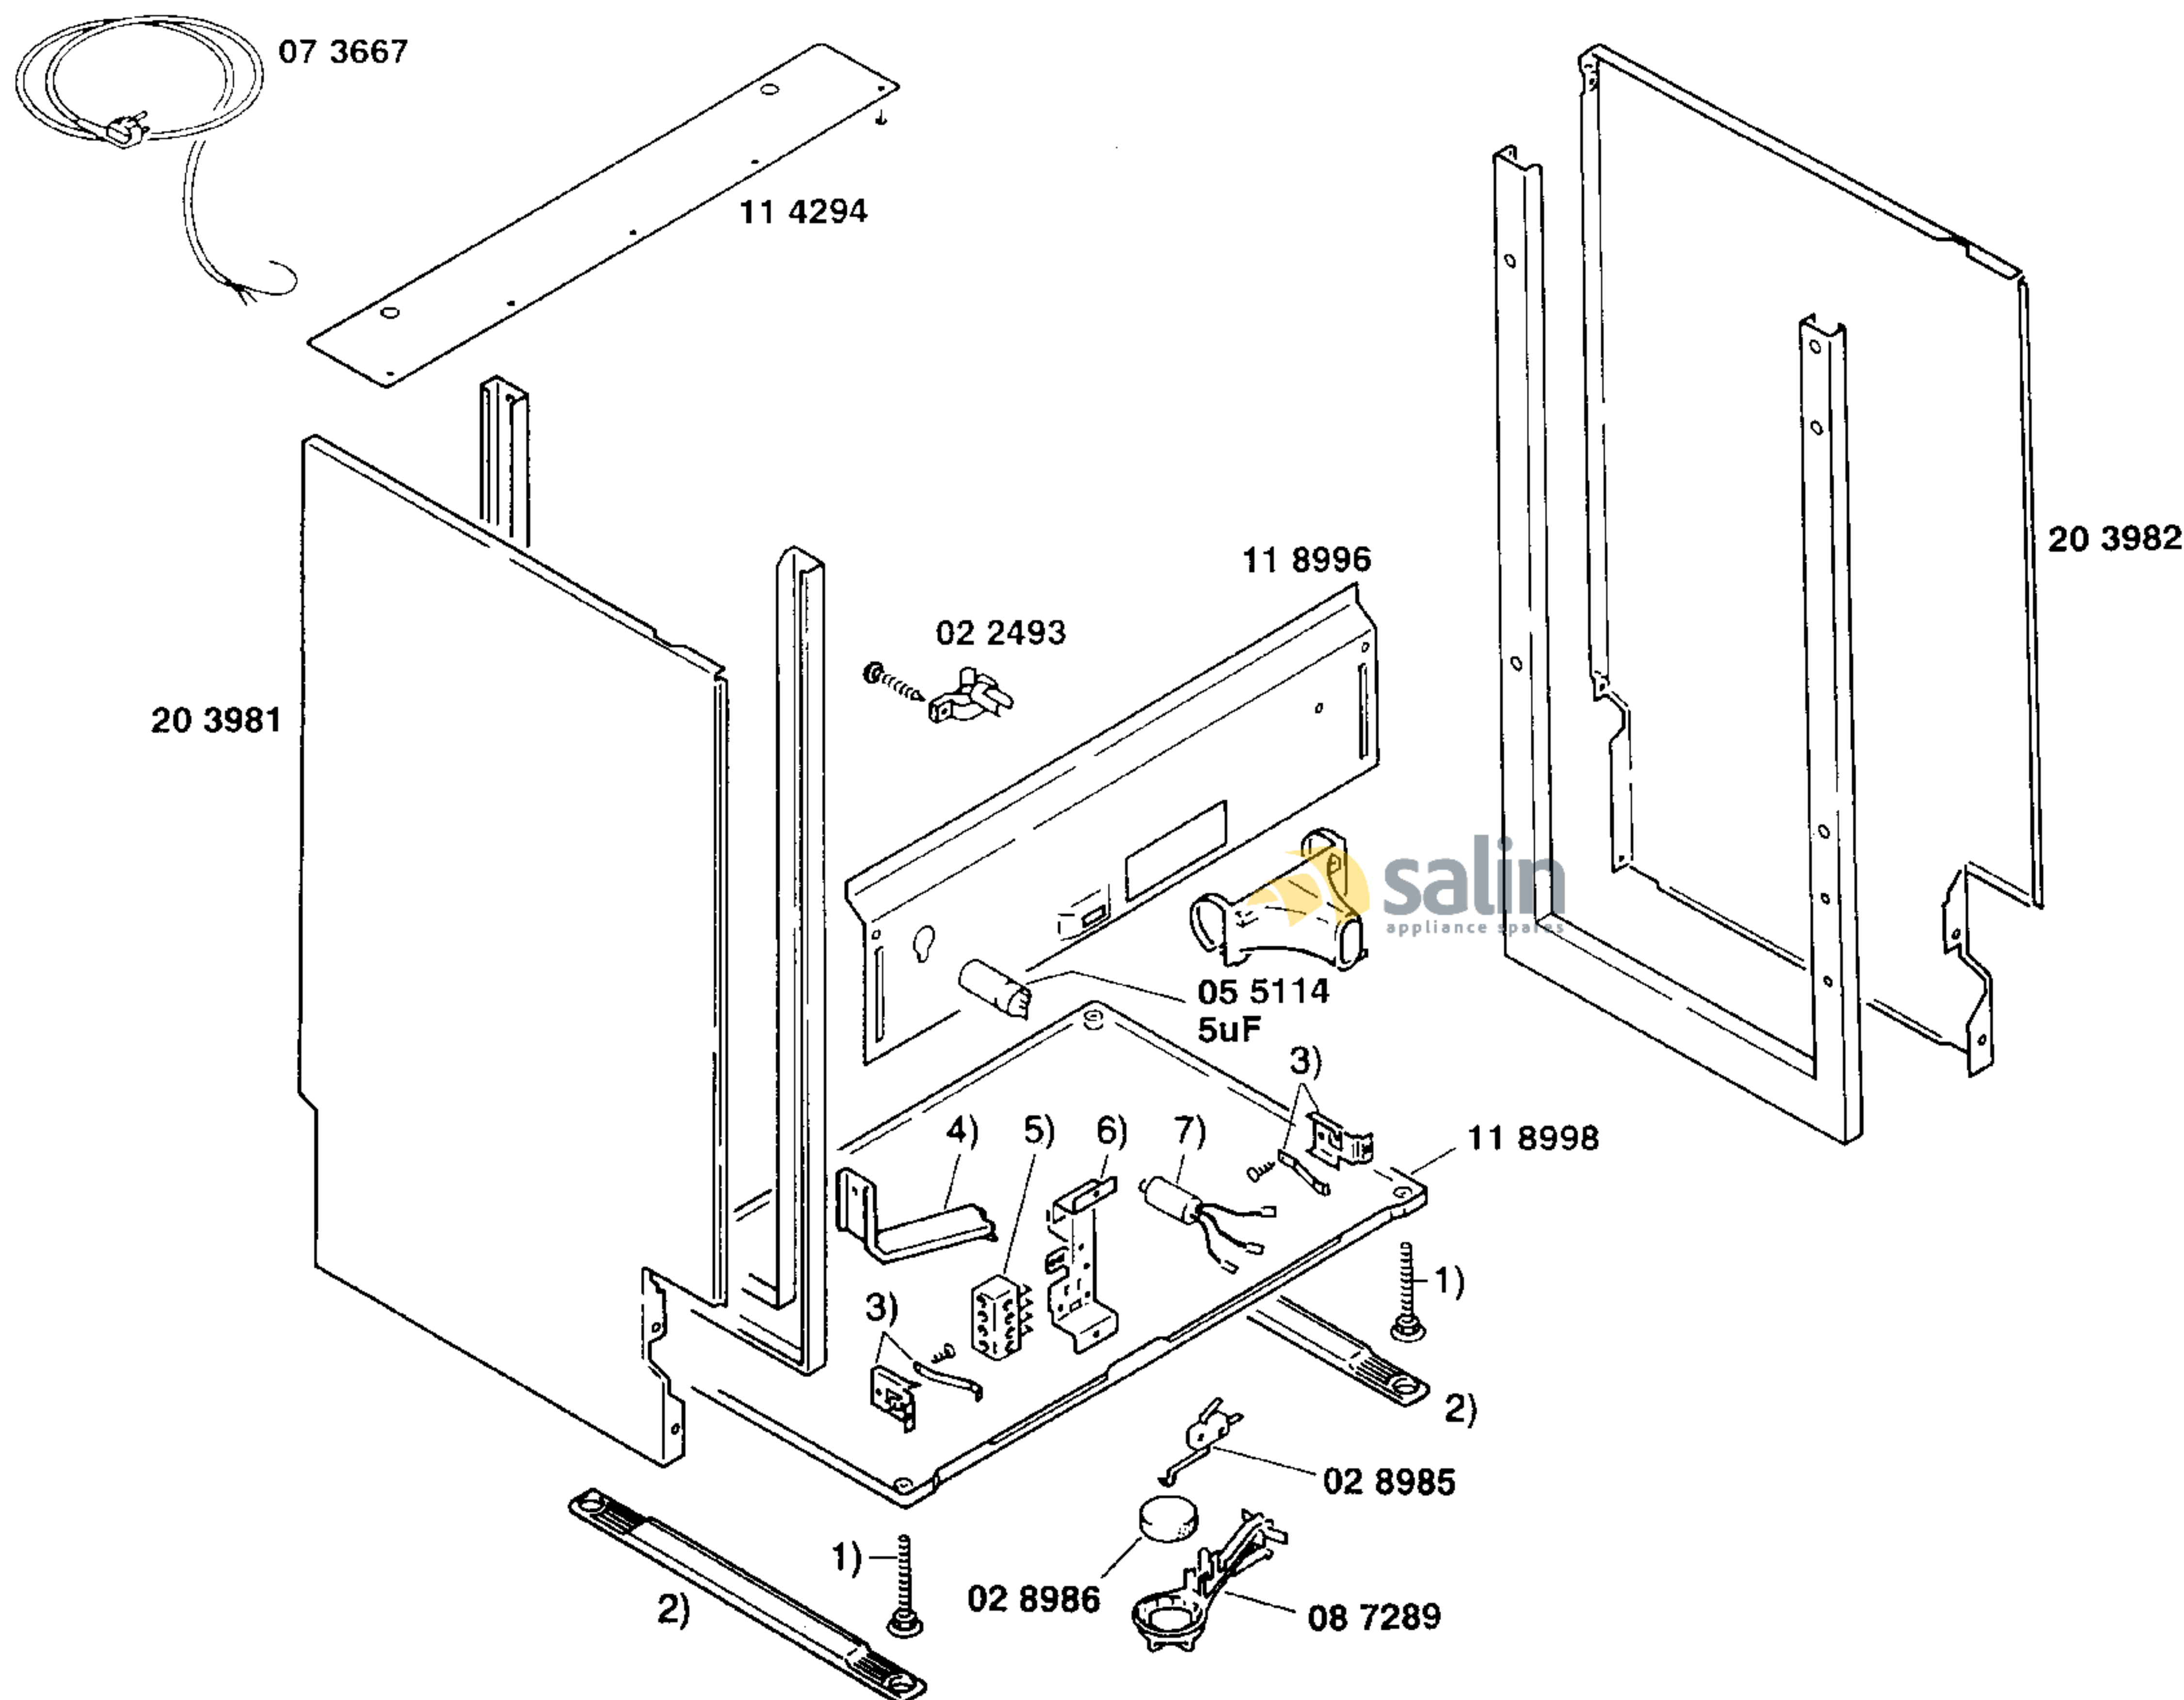GESCHIRRSPÜLGERÄTE
UnterbaugeräteIdent – Nummern – Konstante
3740


**BOSCH**

SMI7061/01-EU1, braun
SMI7061/02-EU2, braun
SMI7061II/02-I1, braun

GESCHIRRSPÜLGERÄTE
Unterbaugeräte

Ident - Nummern - Konstante
3740

- 1) 01 9202
- 2) 11 0668
- 3) 05 6247

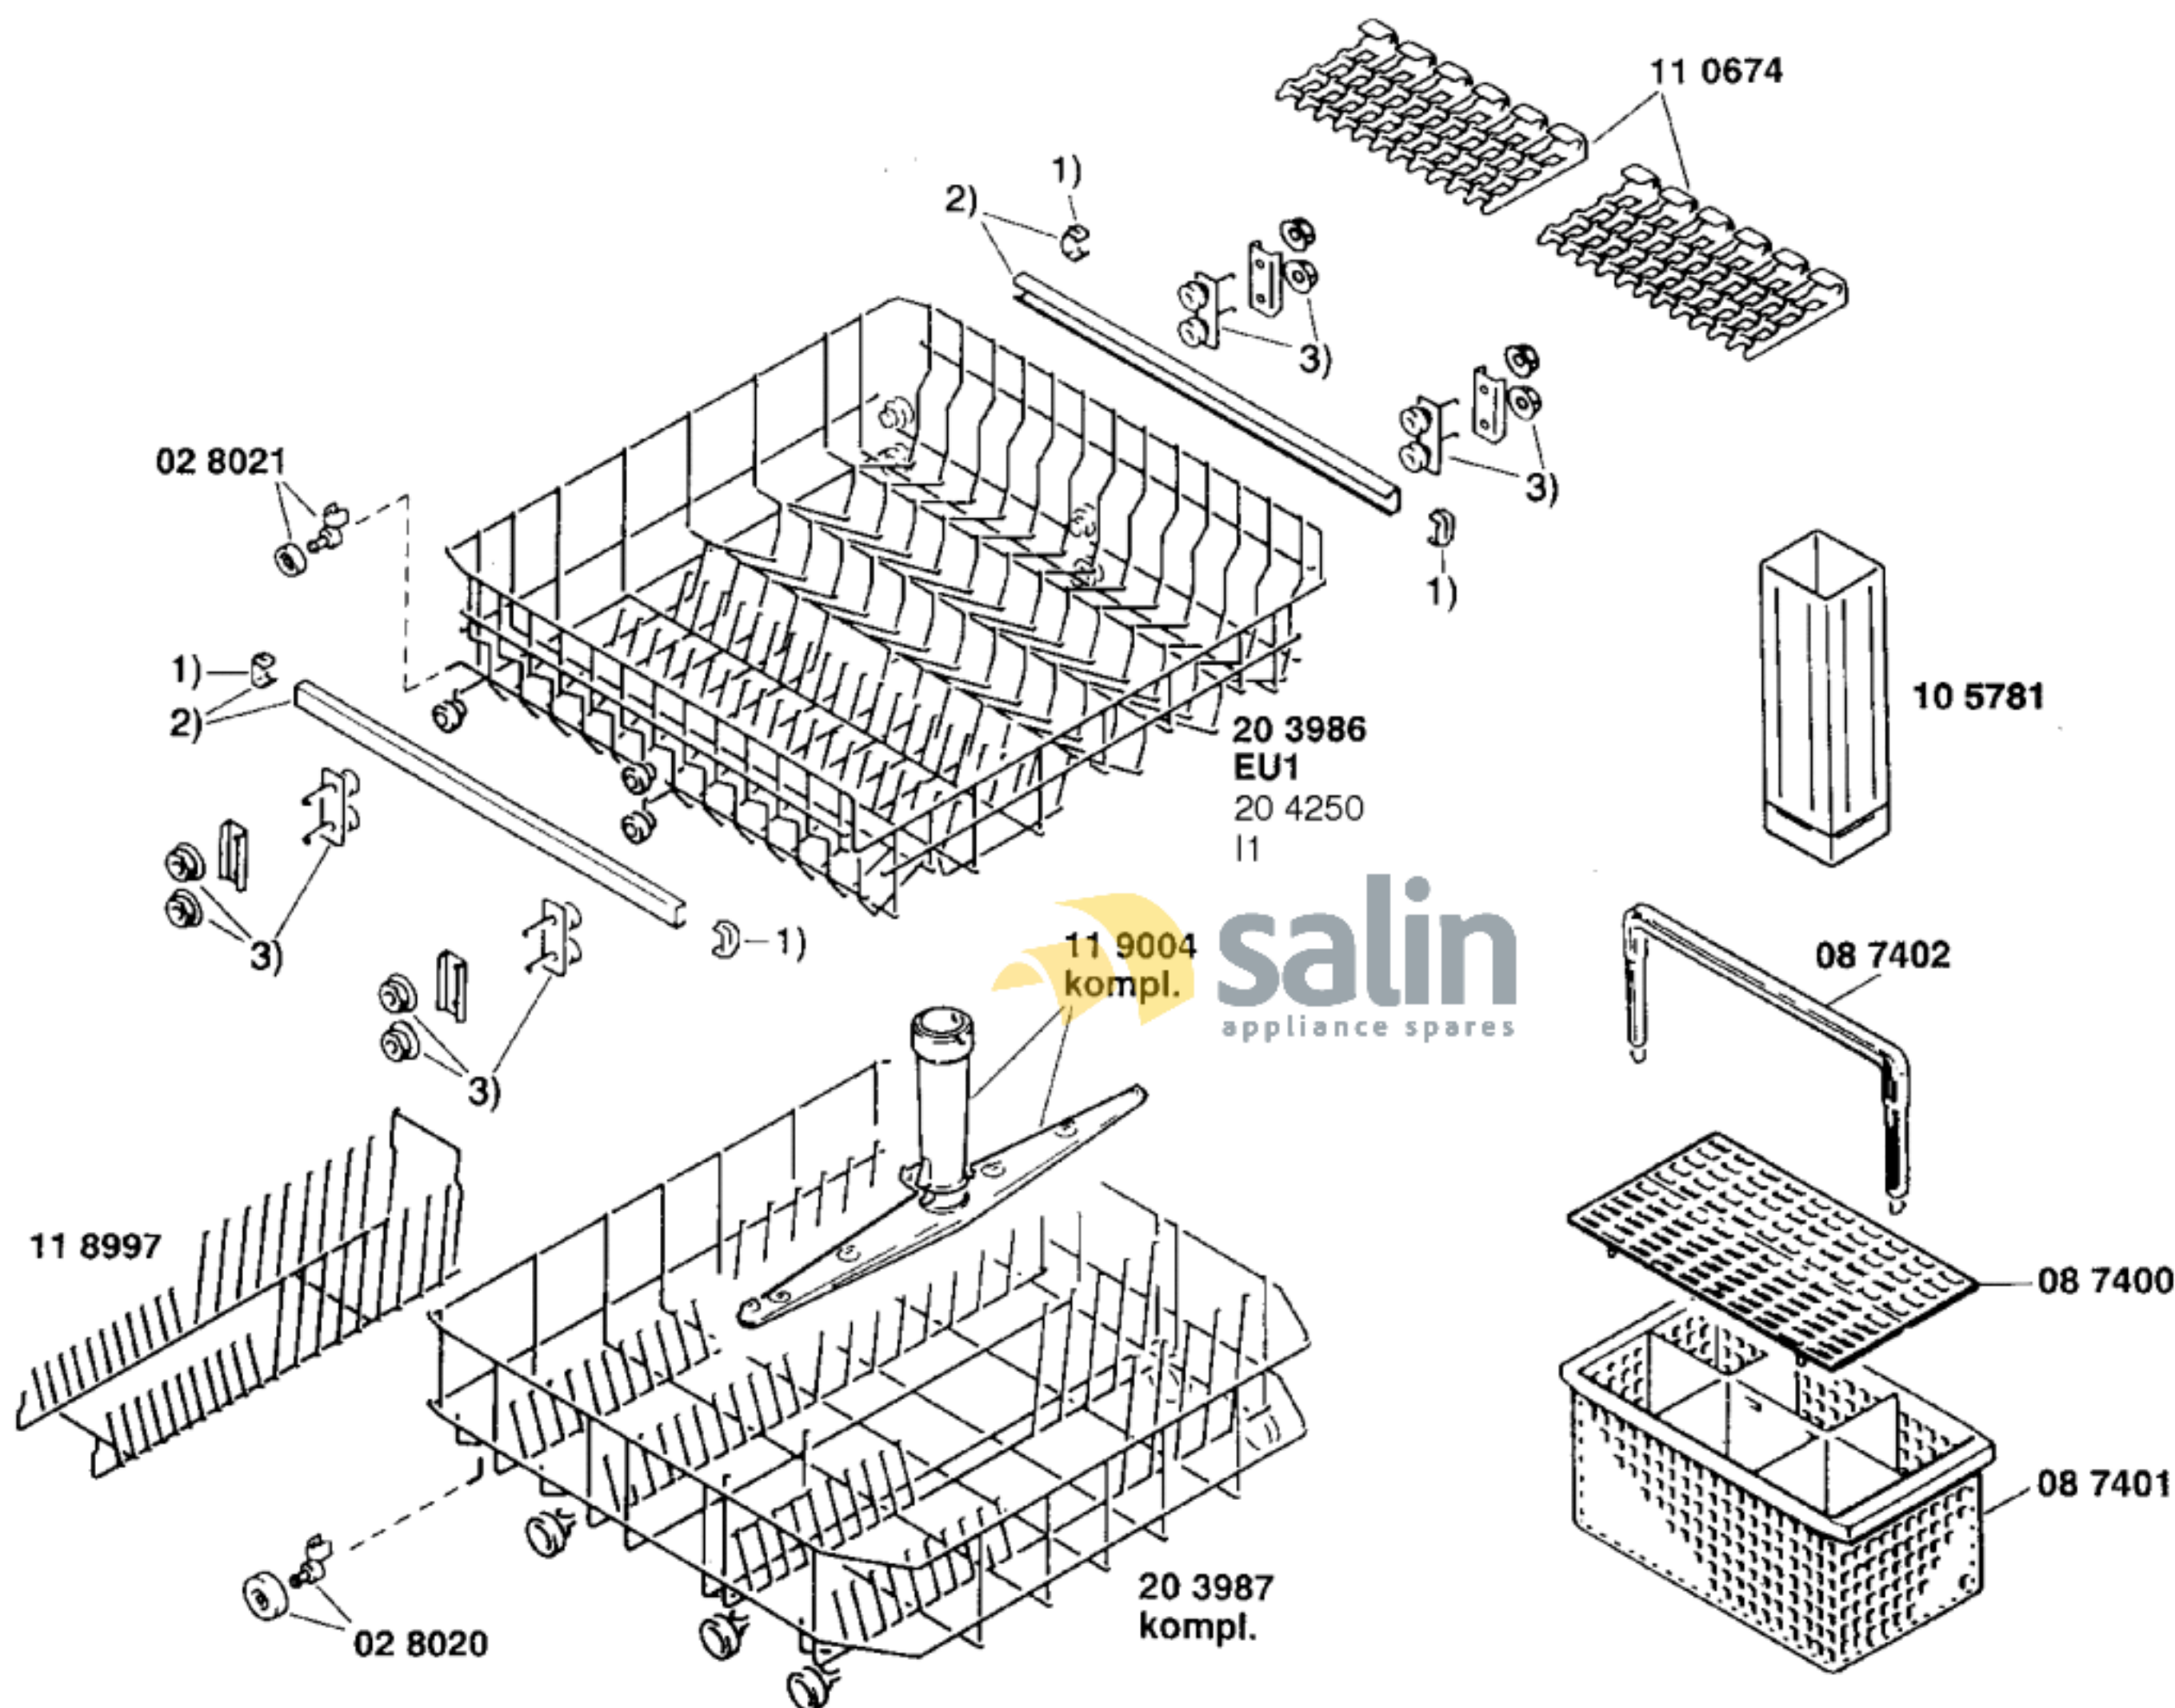

161072-4/4

FAMILY : SMI7061

MODEL NO: SMI7061/02

Check Position No/Part No or Replacement No