

**BOSCH**


SMI7062/01-EU1, weiss

SMI7062/02-EU2, weiss

SMI7062II/02-I1, weiss

GESCHIRRSPÜLGERÄTE

Unterbaugeräte

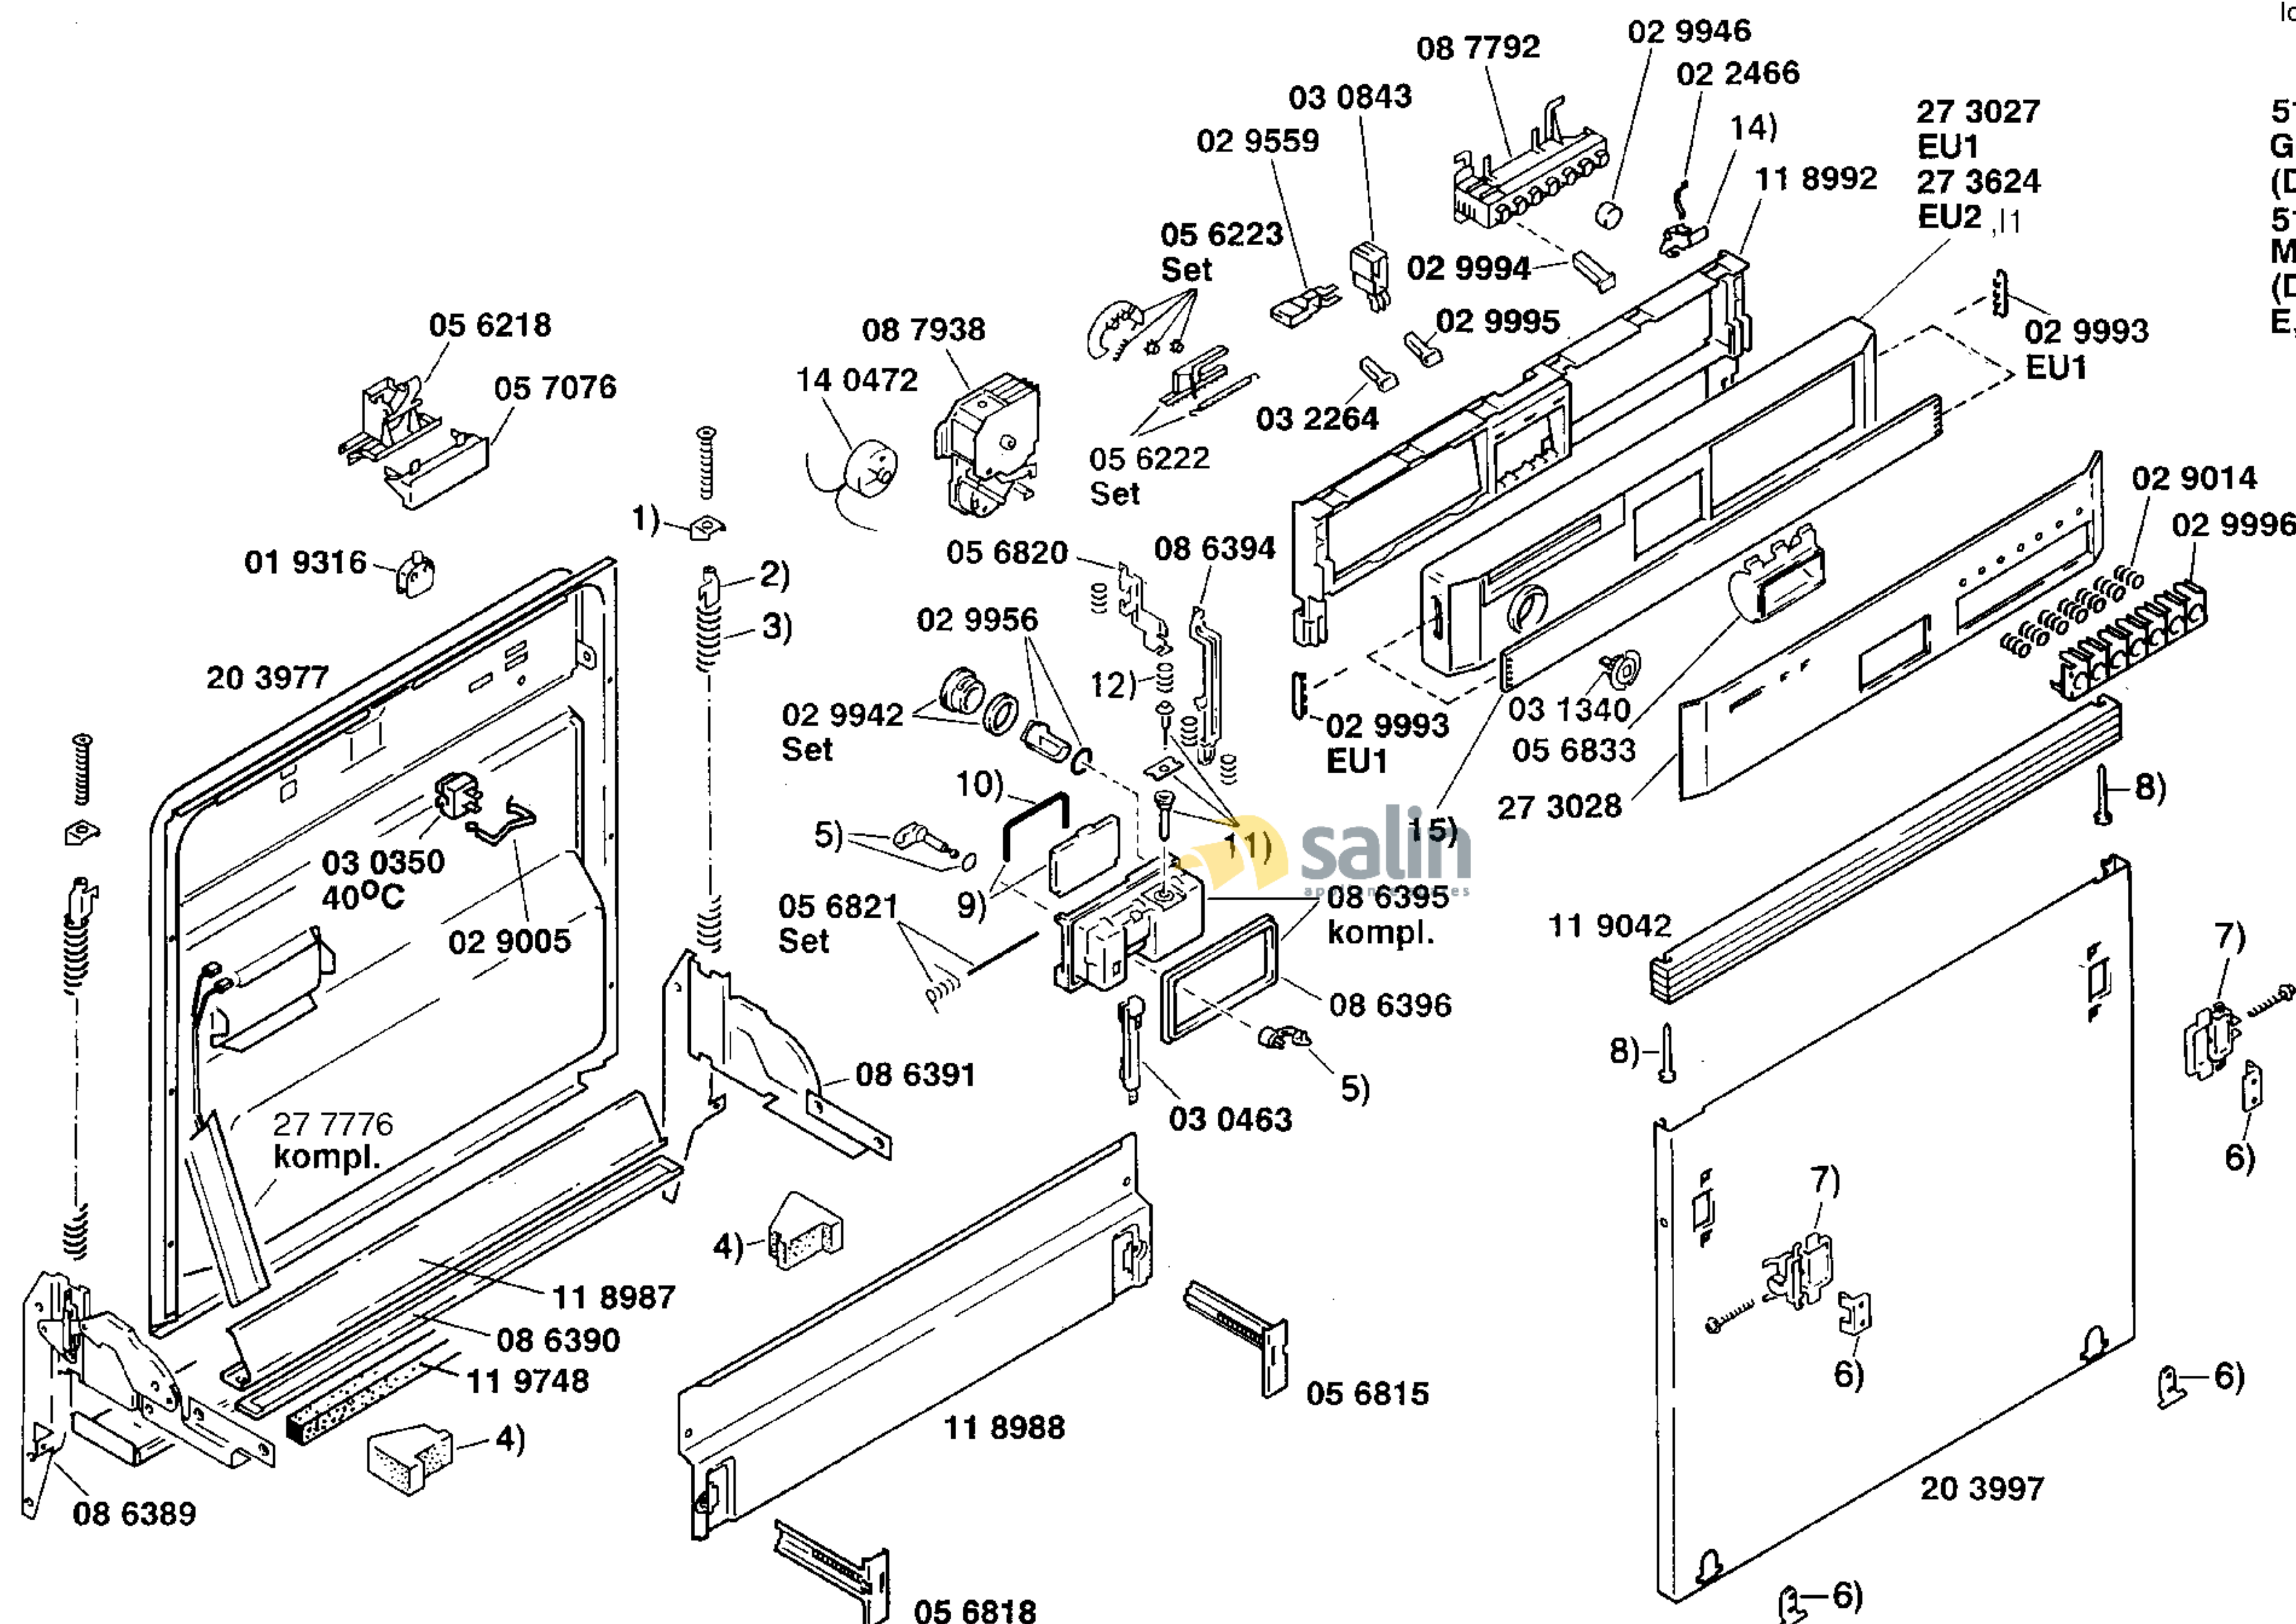Ident - Nummern - Konstante
3740

51 4733
Gebrauchsanweisung
(D,F,GB,I,NL)
51 3842
Montageanweisung
(D,F,GB,I,NL,DK,
E,P,S,N,SF,GR,TR)

- 1) 02 9941
- 2) 02 9029
- 3) 11 9996
- 4) 05 6860
- 5) 02 9944 Set
- 6) 05 6823 Set
- 7) 02 9673
- 8) 02 7091
- 9) 05 6822
- 10) 02 9943
- 11) 02 9945 Set
- 12) 02 9002 Set
- 13) —
- 14) 02 9056 rot
02 9055 grün
- 15) 27 3029 EU1
27 3627 EU2, I1

161074-4/1

FAMILY : SMI7062

MODEL NO: SMI7062/01


Check Position No/Part No or Replacement No

**BOSCH**

SMI7062/01-EU1, weiss
SMI7062/02-EU2, weiss
SMI7062II/02-I1, weiss

GESCHIRRSPÜLGERÄTE
Unterbaugeräte

Ident – Nummern – Konstante
3740

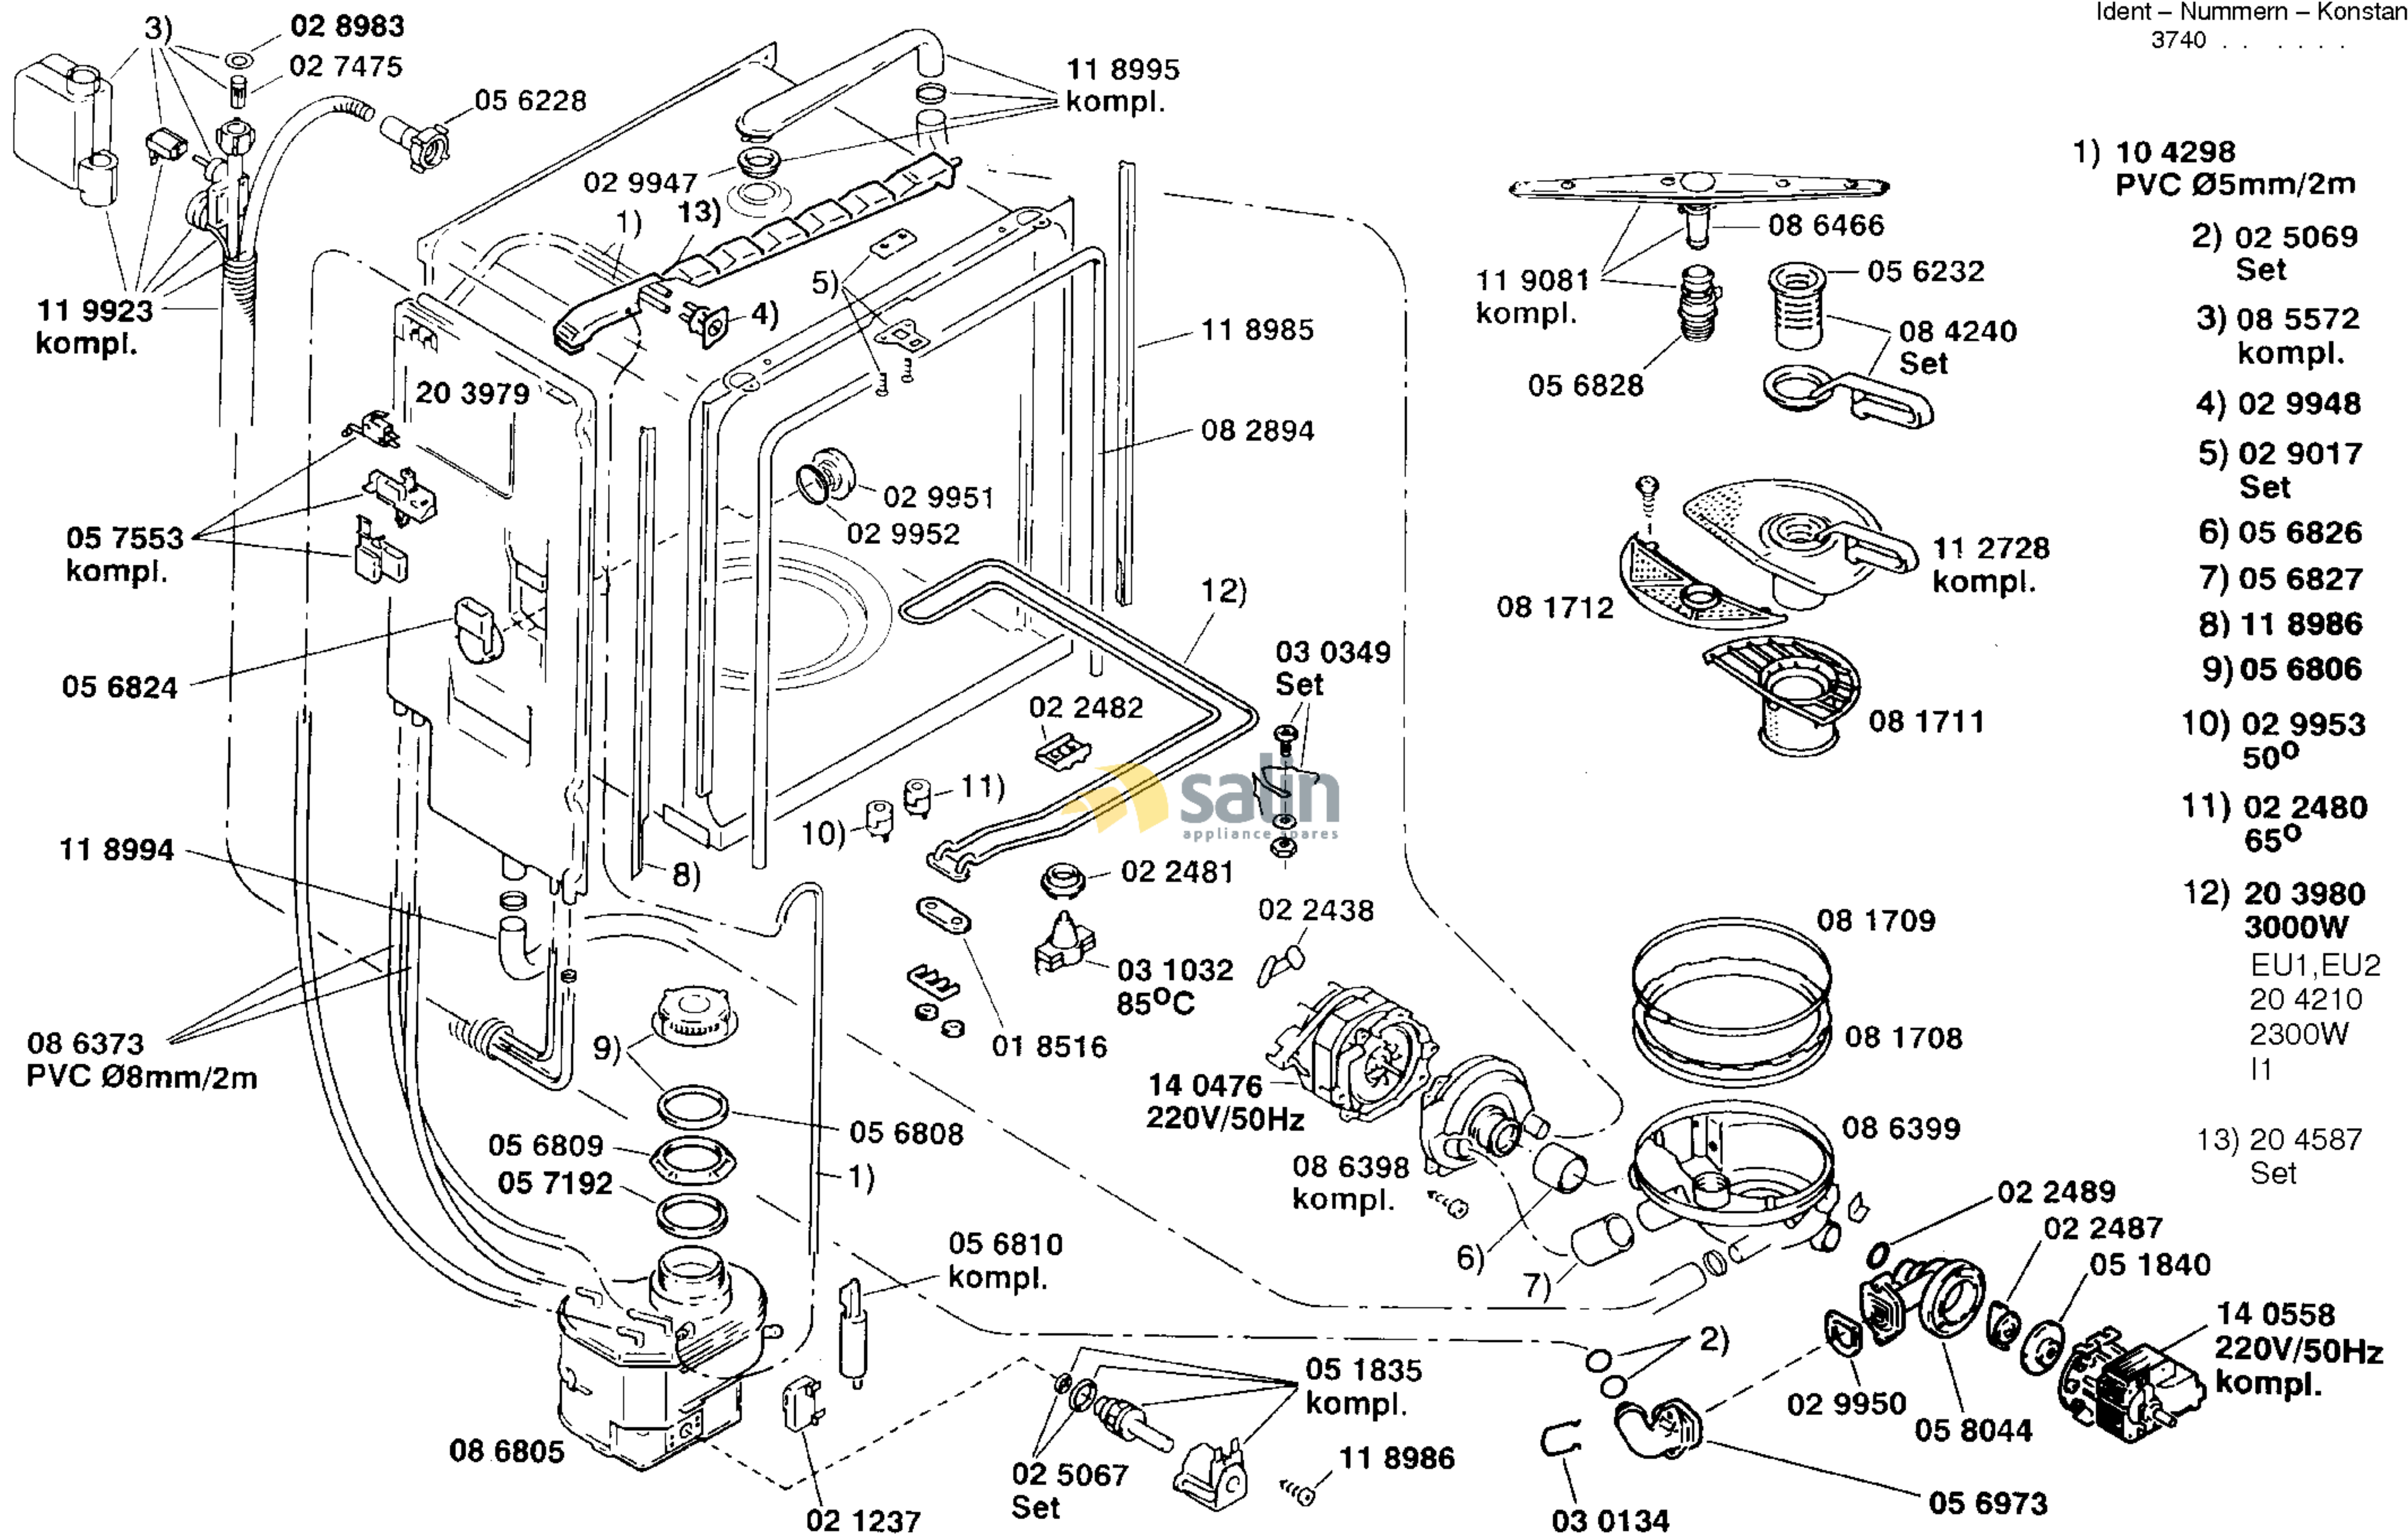


161074-4/2

FAMILY : SMI7062

MODEL NO: SMI7062/01

Check Position No/Part No or Replacement No

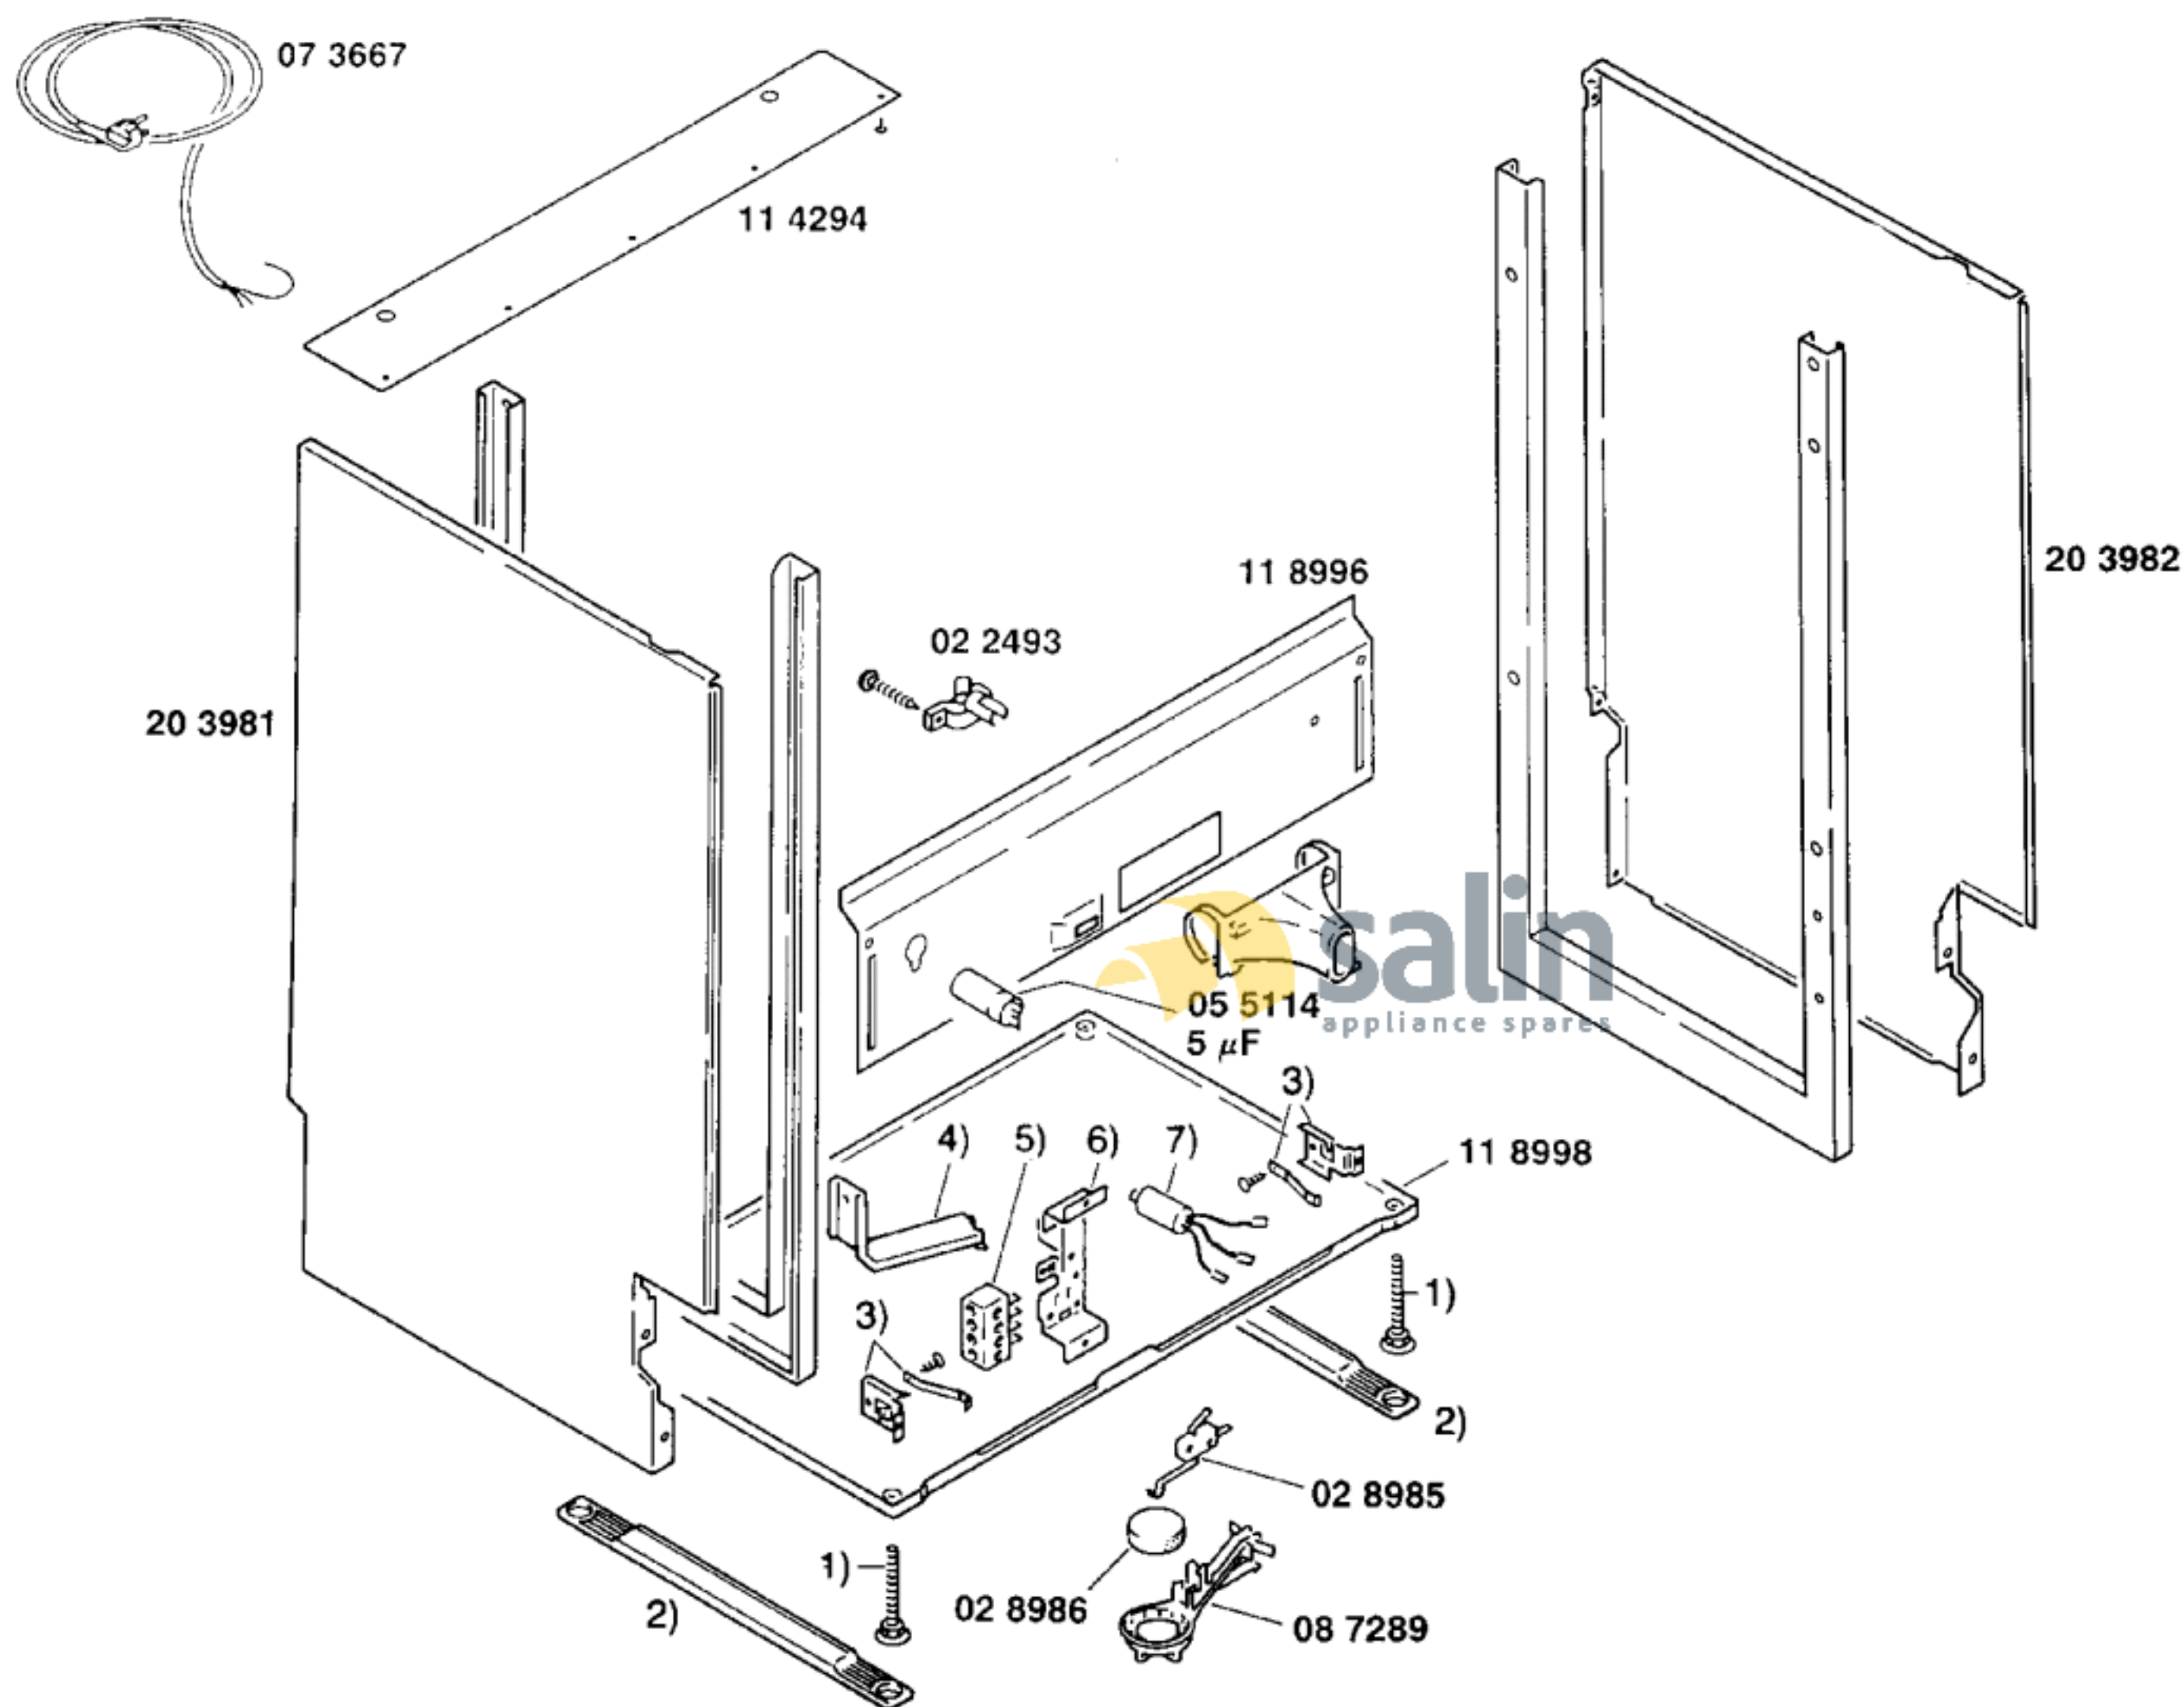

- 1) 05 4927
- 2) 11 9082
- 3) 05 6829
- 4) 08 6400
- 5) 02 7385
- 6) 08 6401
- 7) 04 3889

