
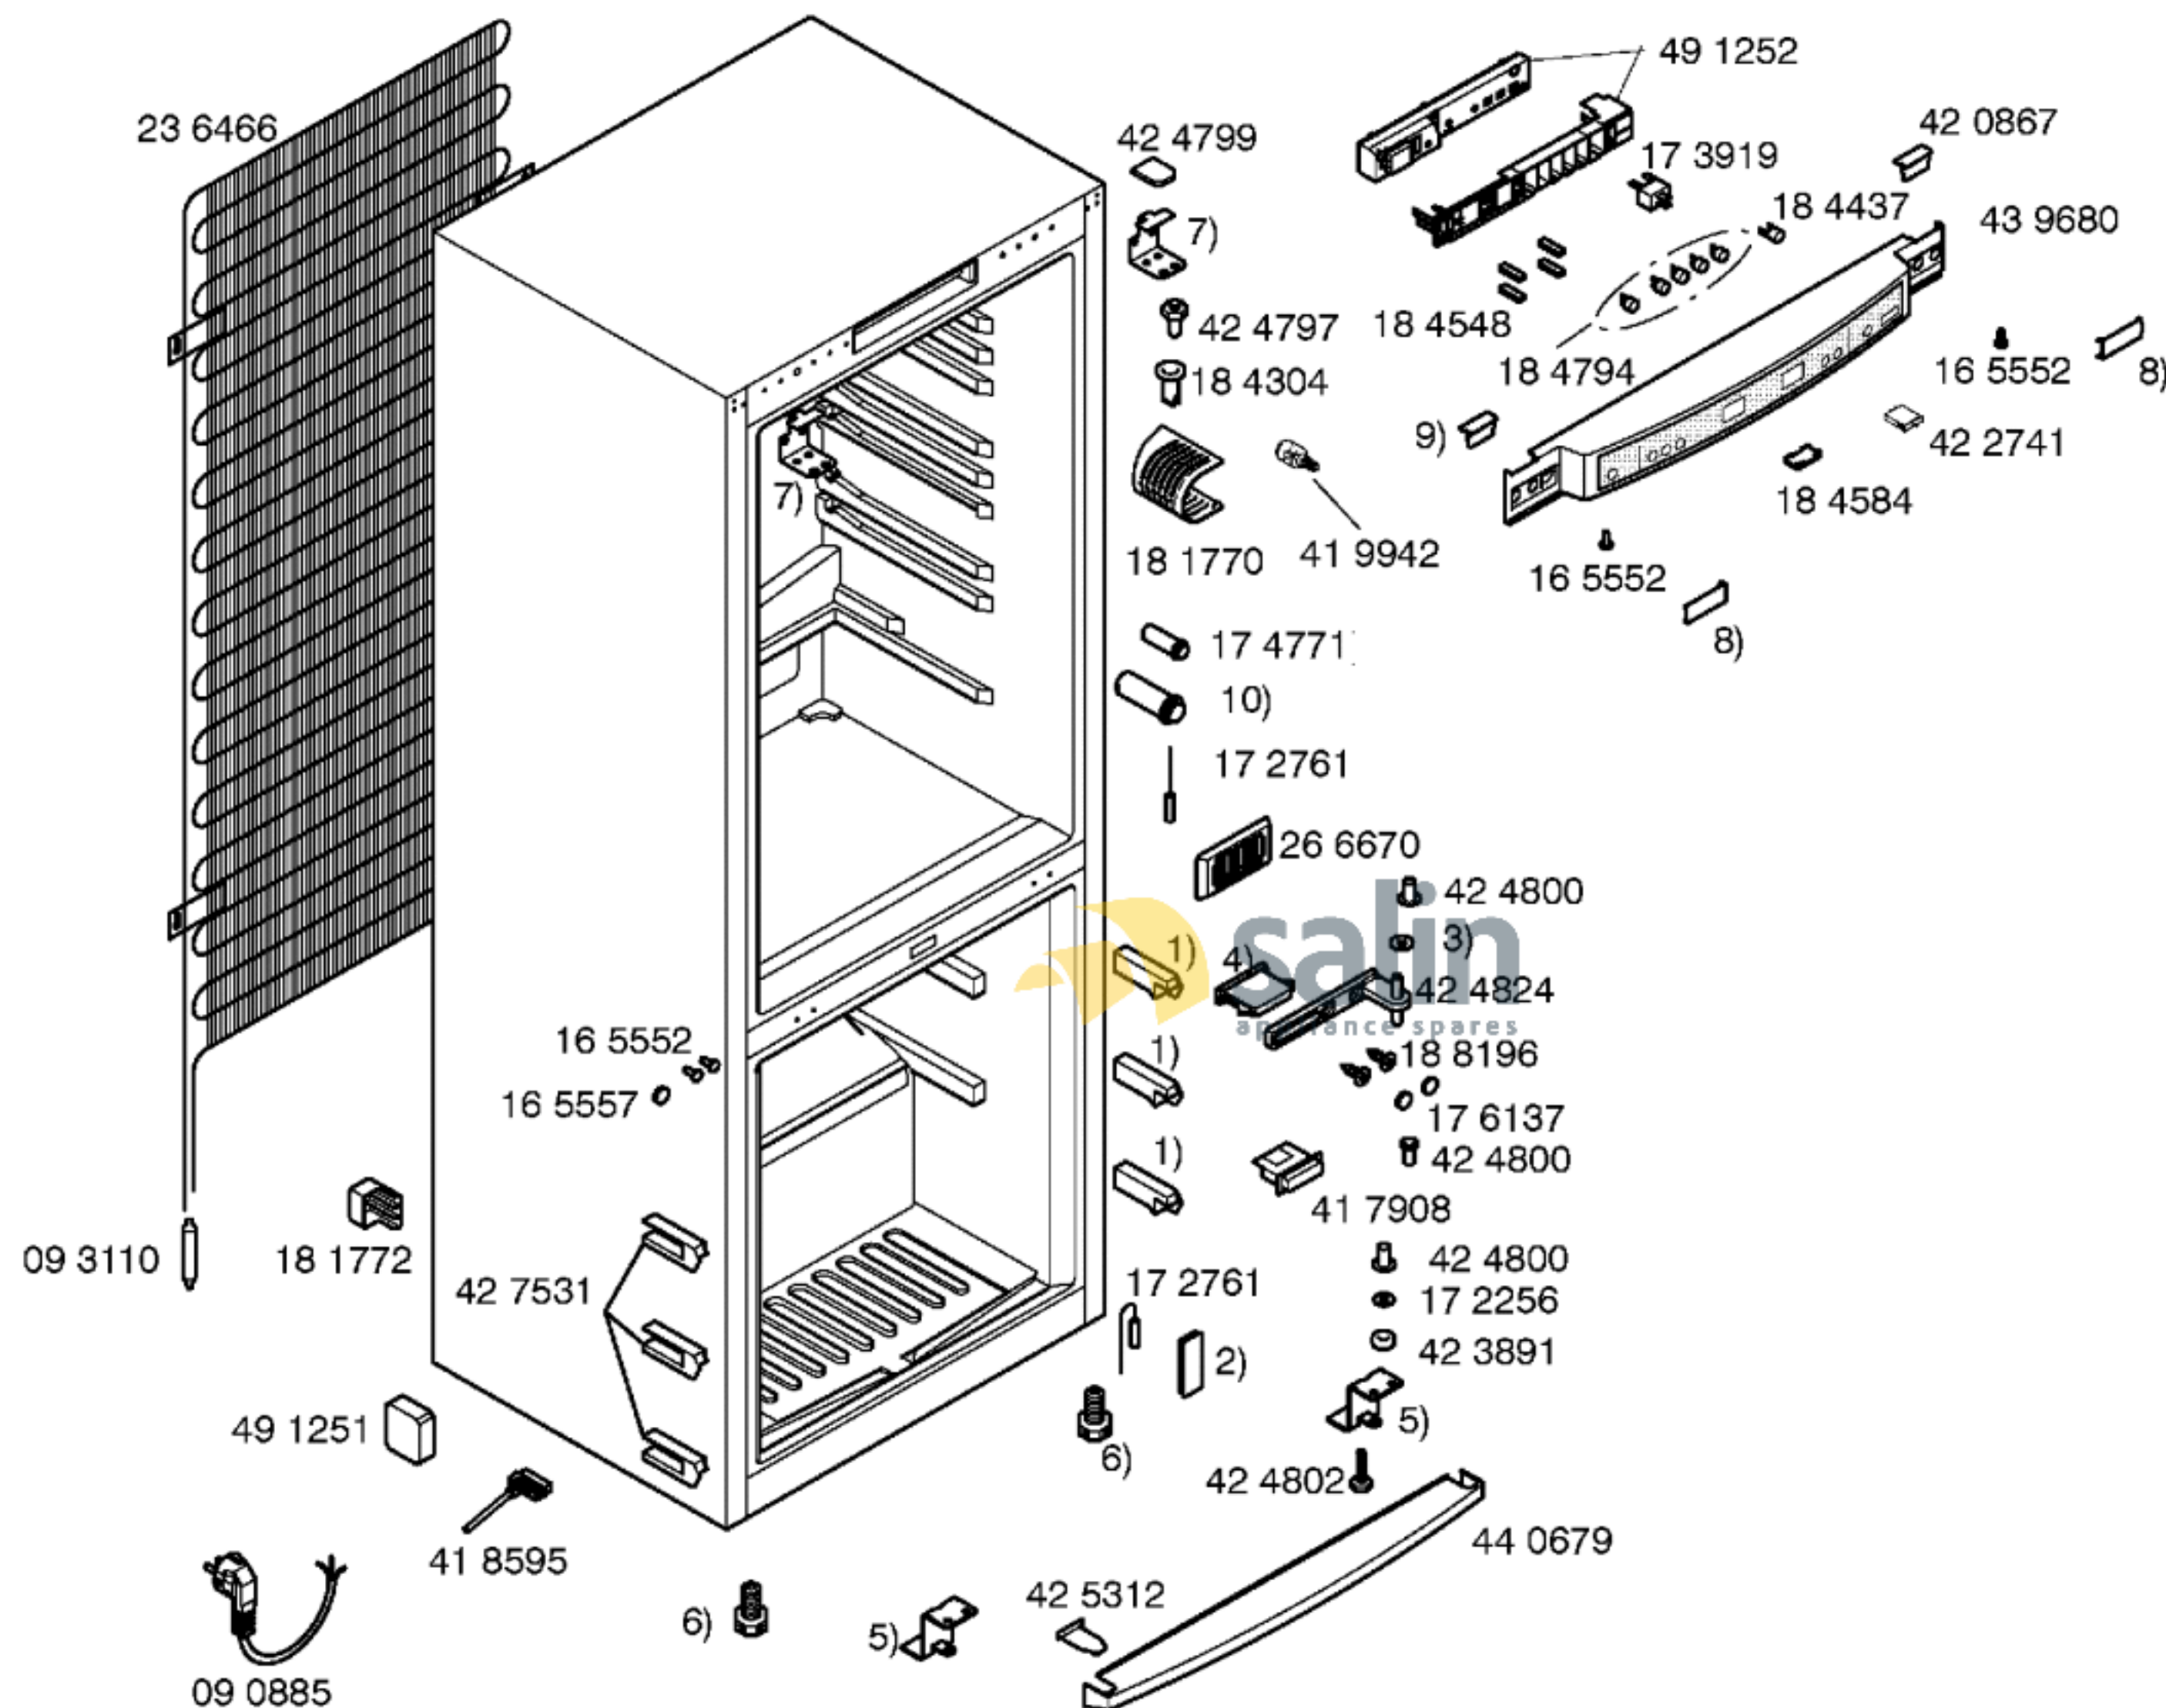


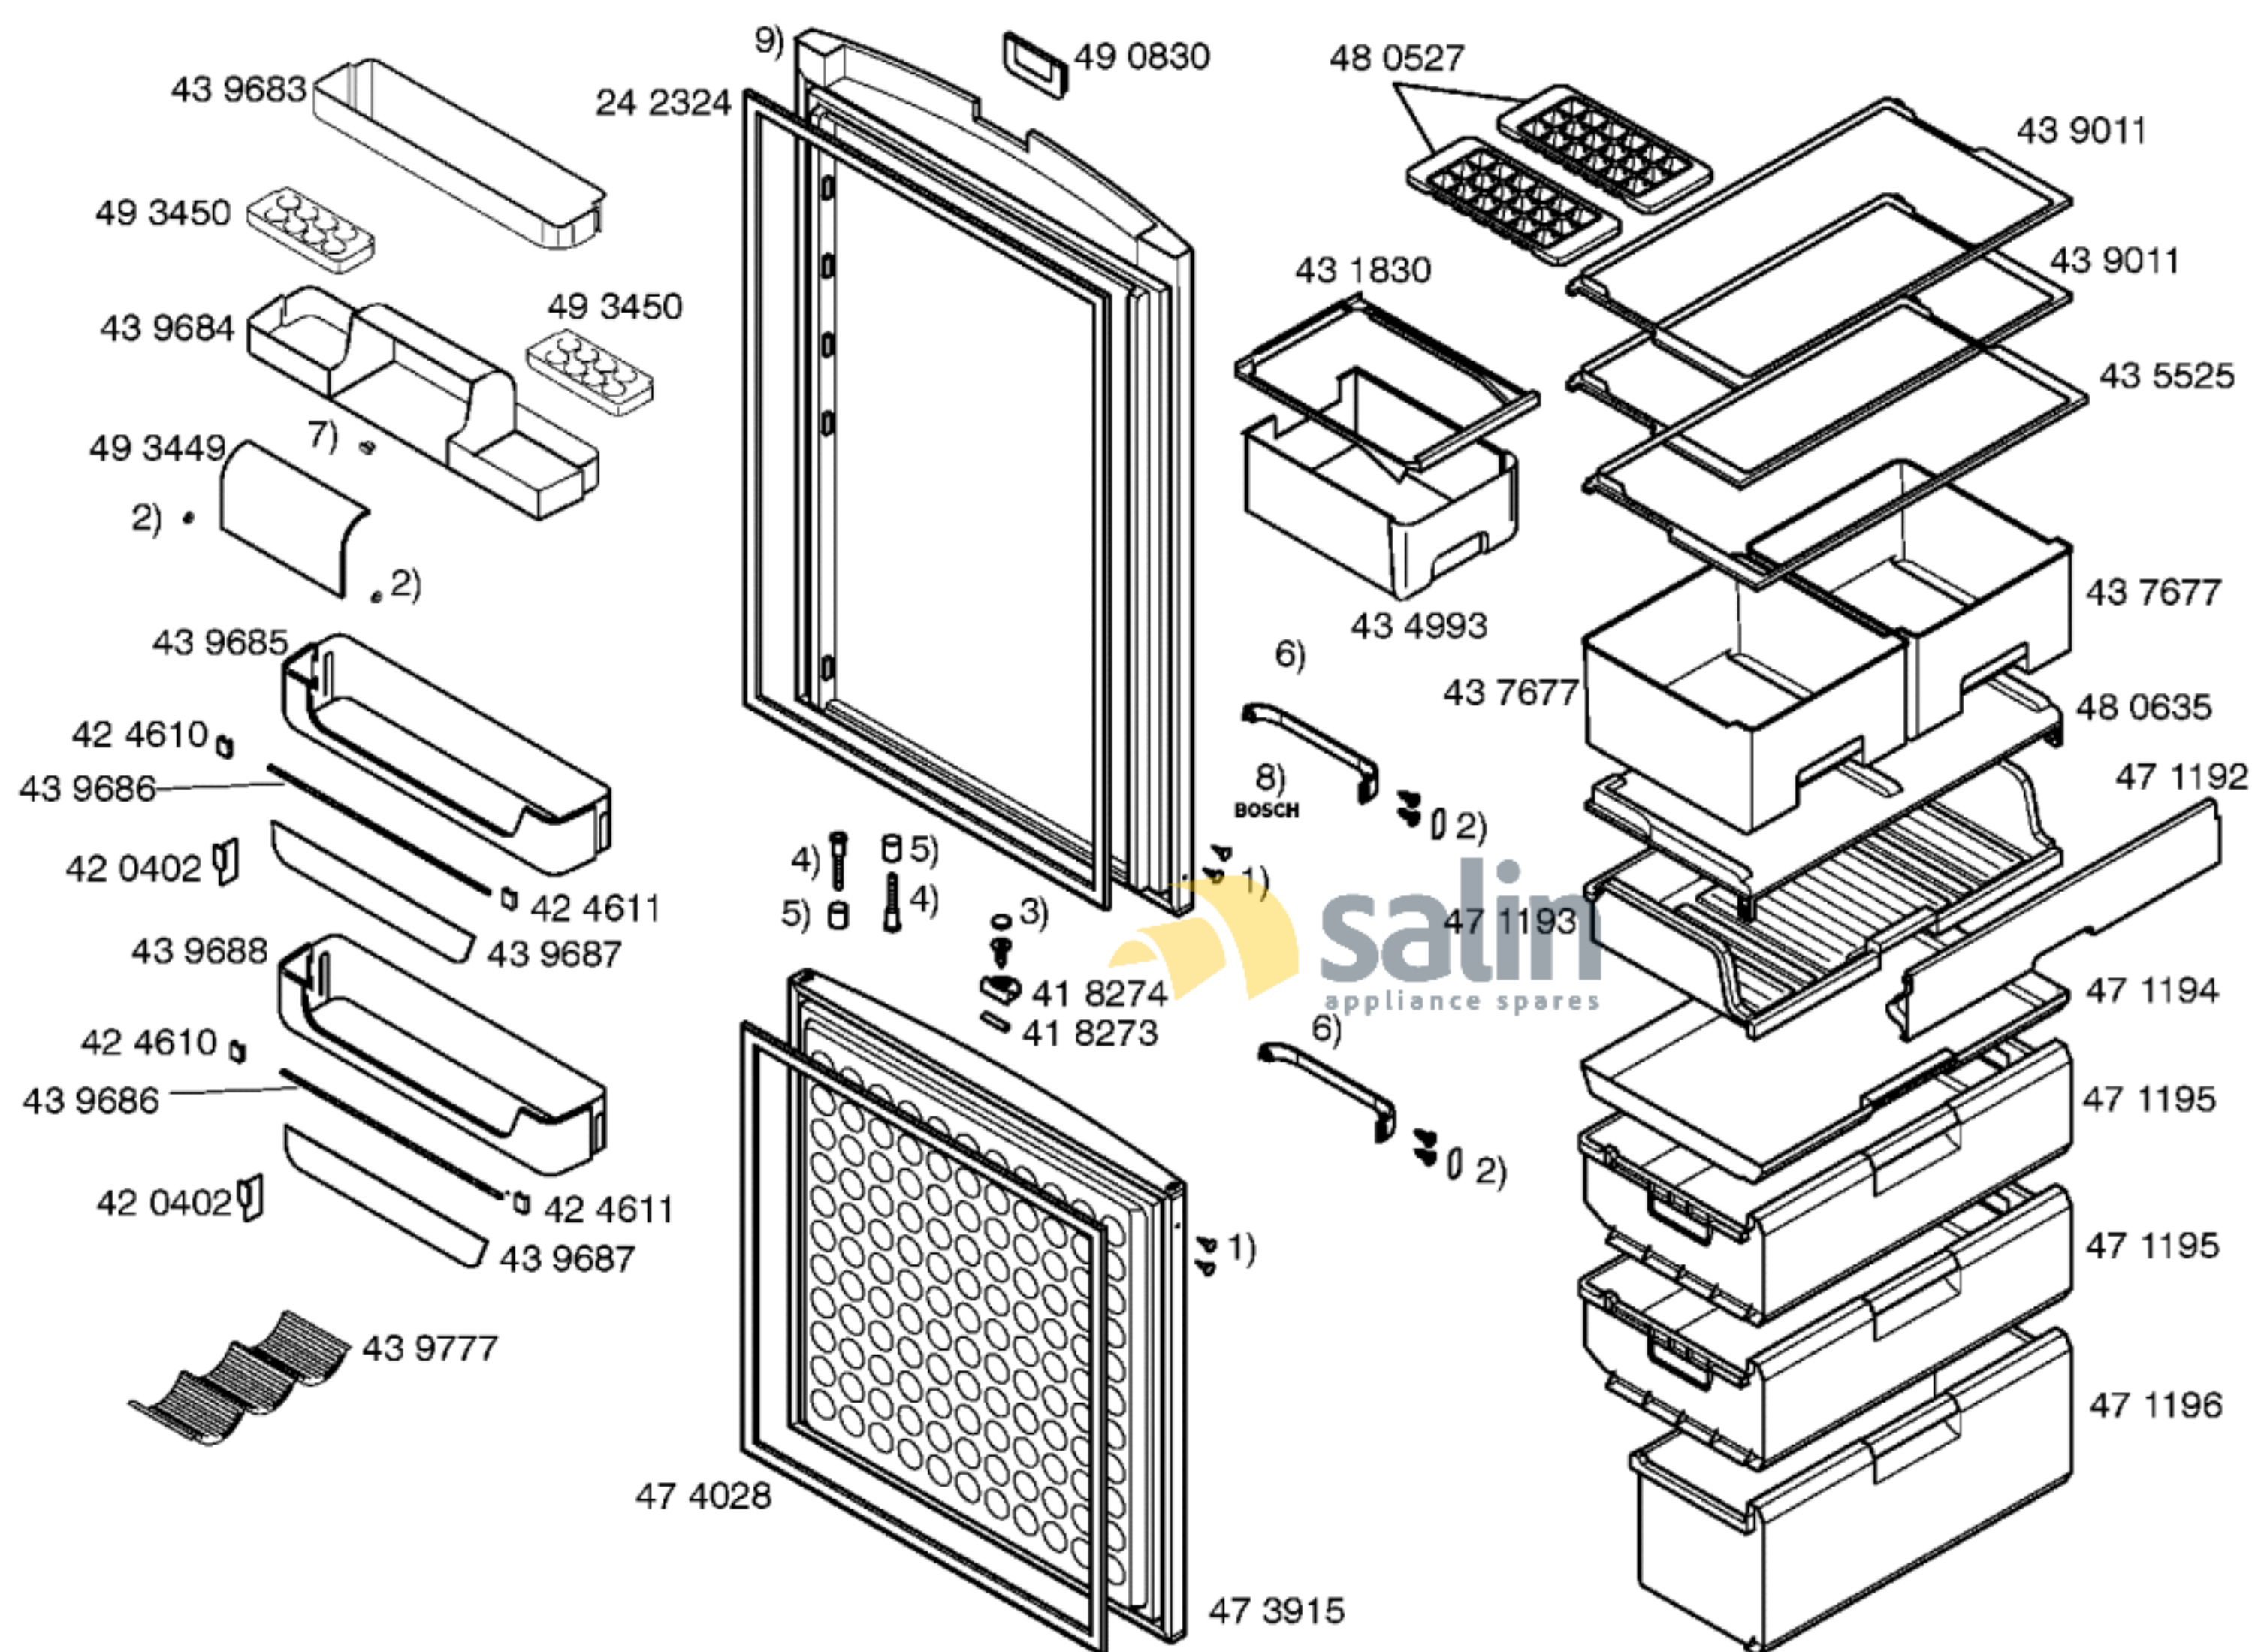

Mat. - Nr. - Konstante
3740


Gebrauchsanweisung
59 1348
(DE,GB,TR)


- 1) 42 7532
- 2) 17 2293
- 3) 17 2256
- 4) 41 8128
- 5) 42 8184
- 6) 42 4340
- 7) 42 4798
- 8) 42 0864
- 9) 42 0866
- 10) 42 5156
- V01
- 60 5353
- V02

Mat. – Nr. – Konstante
3740

- 1) 60 4835
- 2) 41 7890
- 3) 16 5557
- 4) 18 8194
- 5) 18 9083
- 6) 49 1248
- 7) 42 0751
- 8) 42 4562
- 9) 24 2259

Mat. - Nr. - Konstante
3740

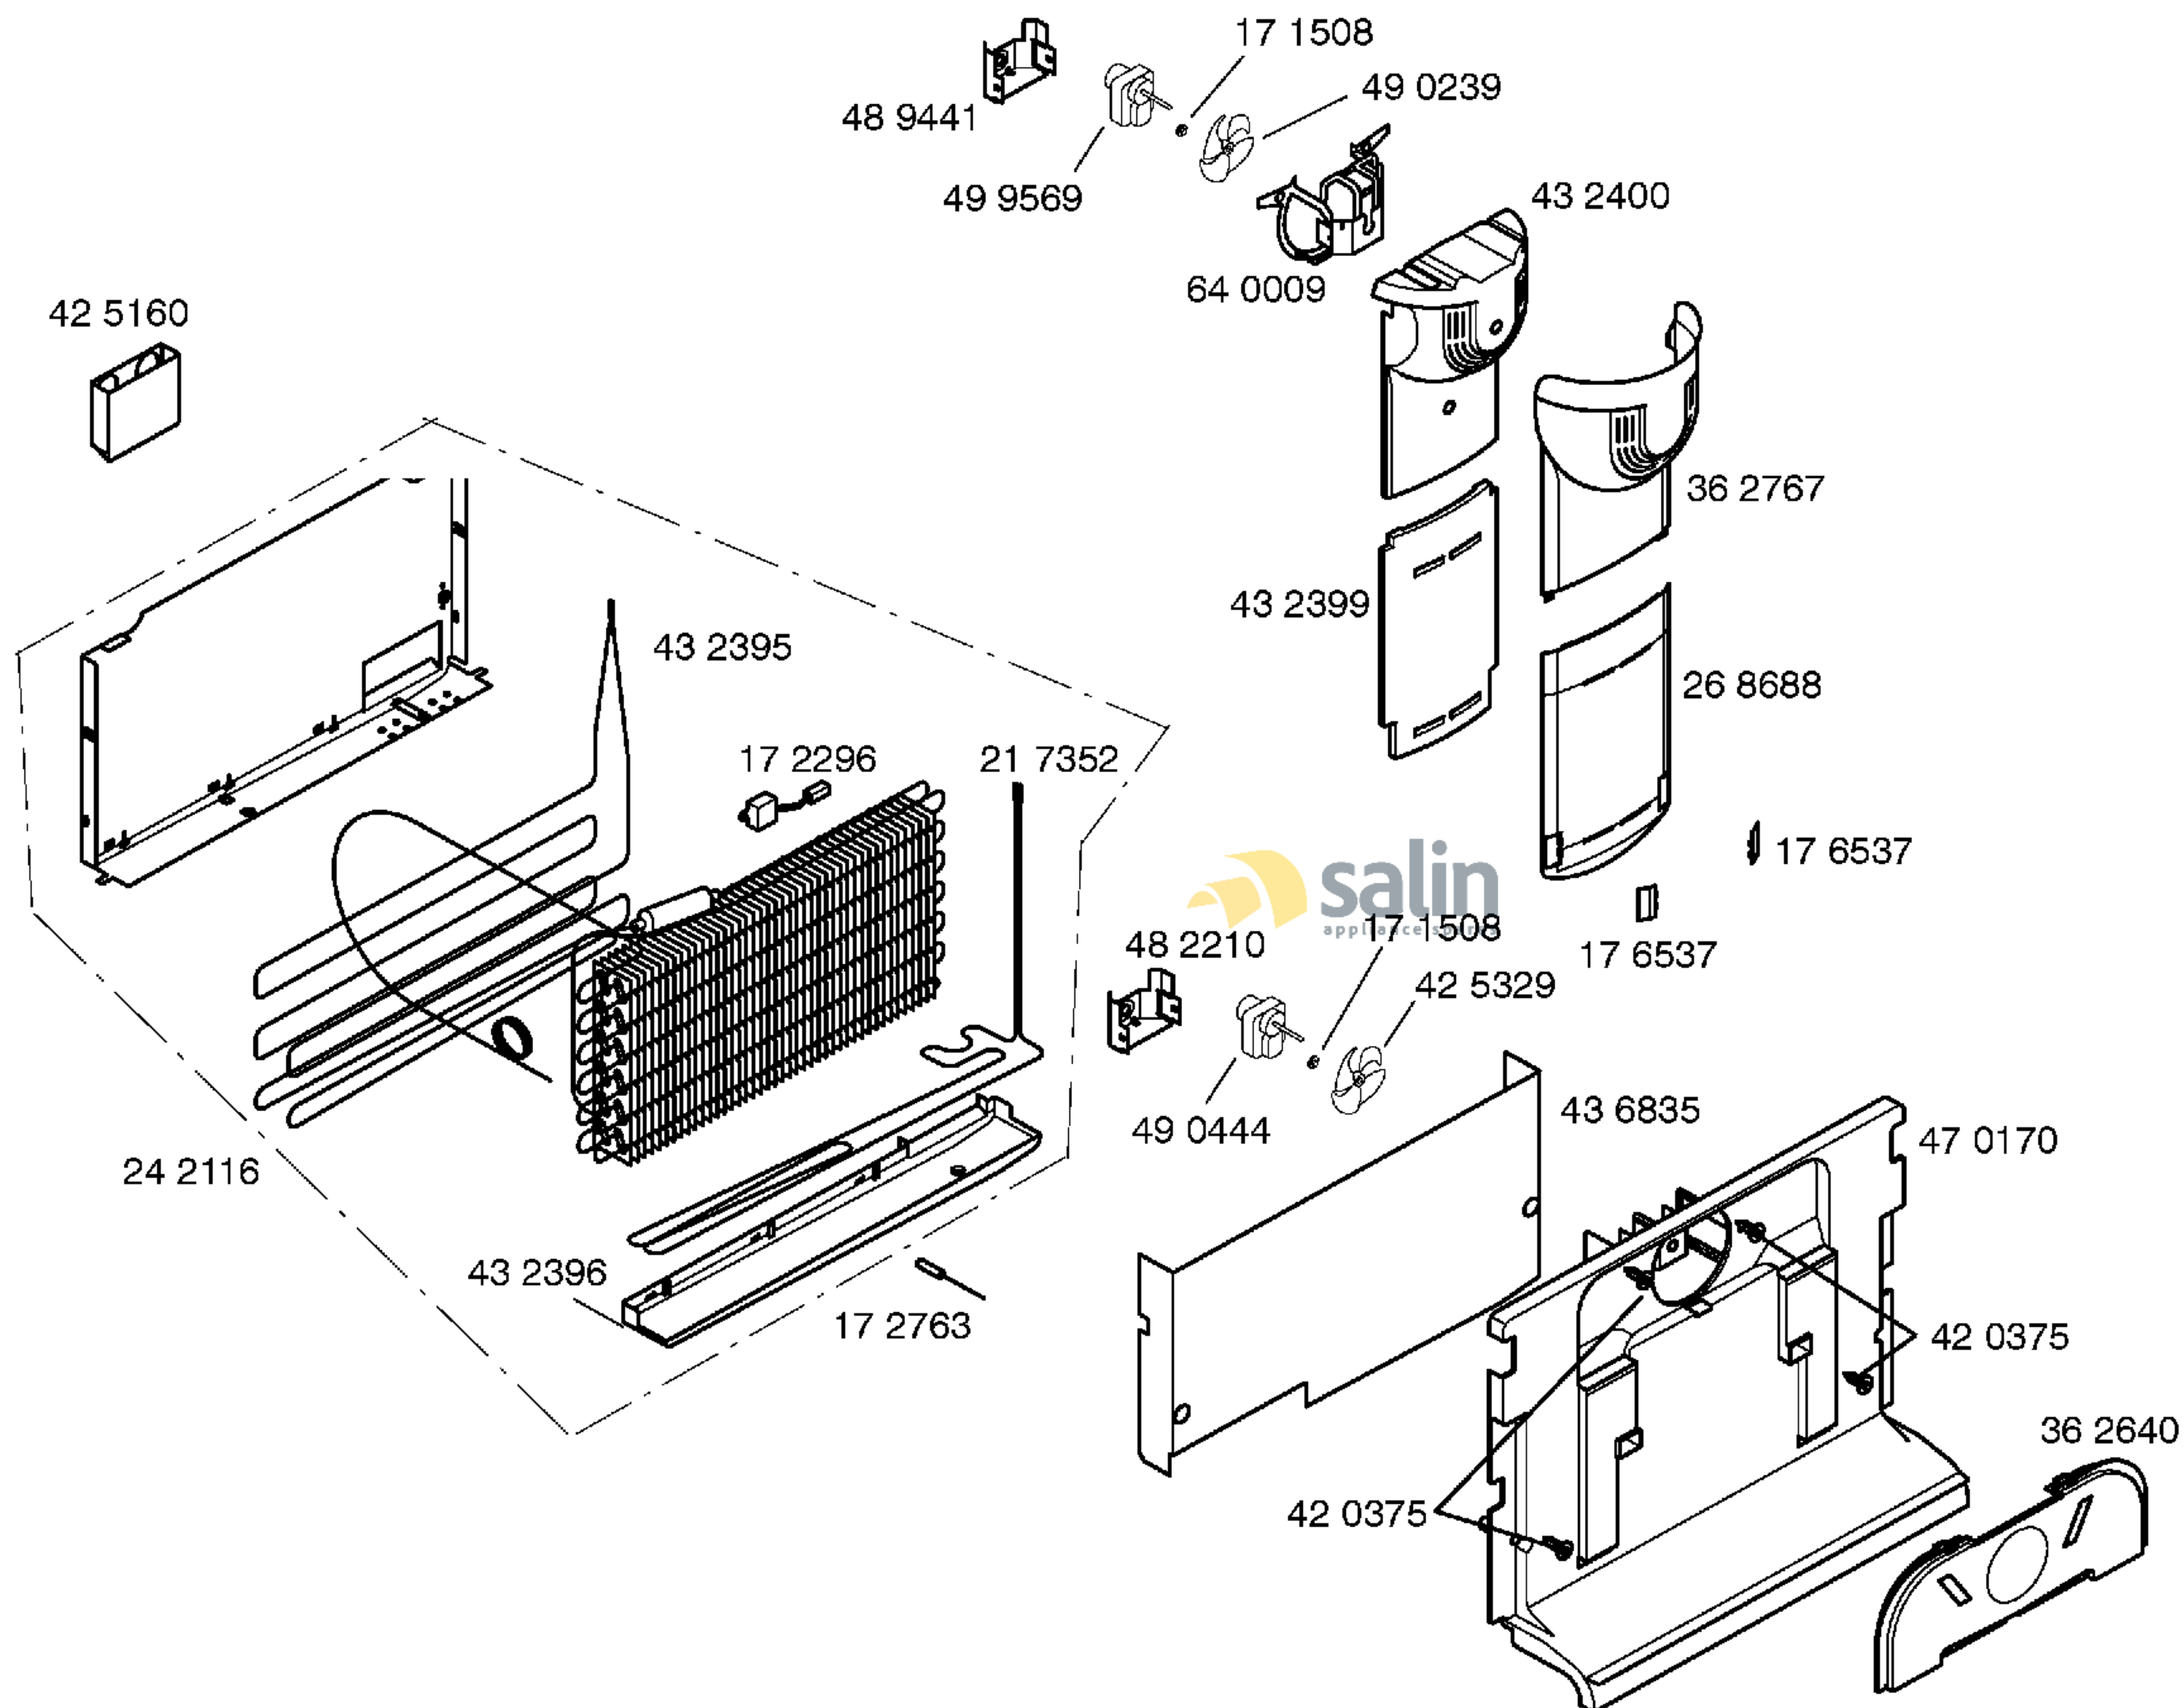

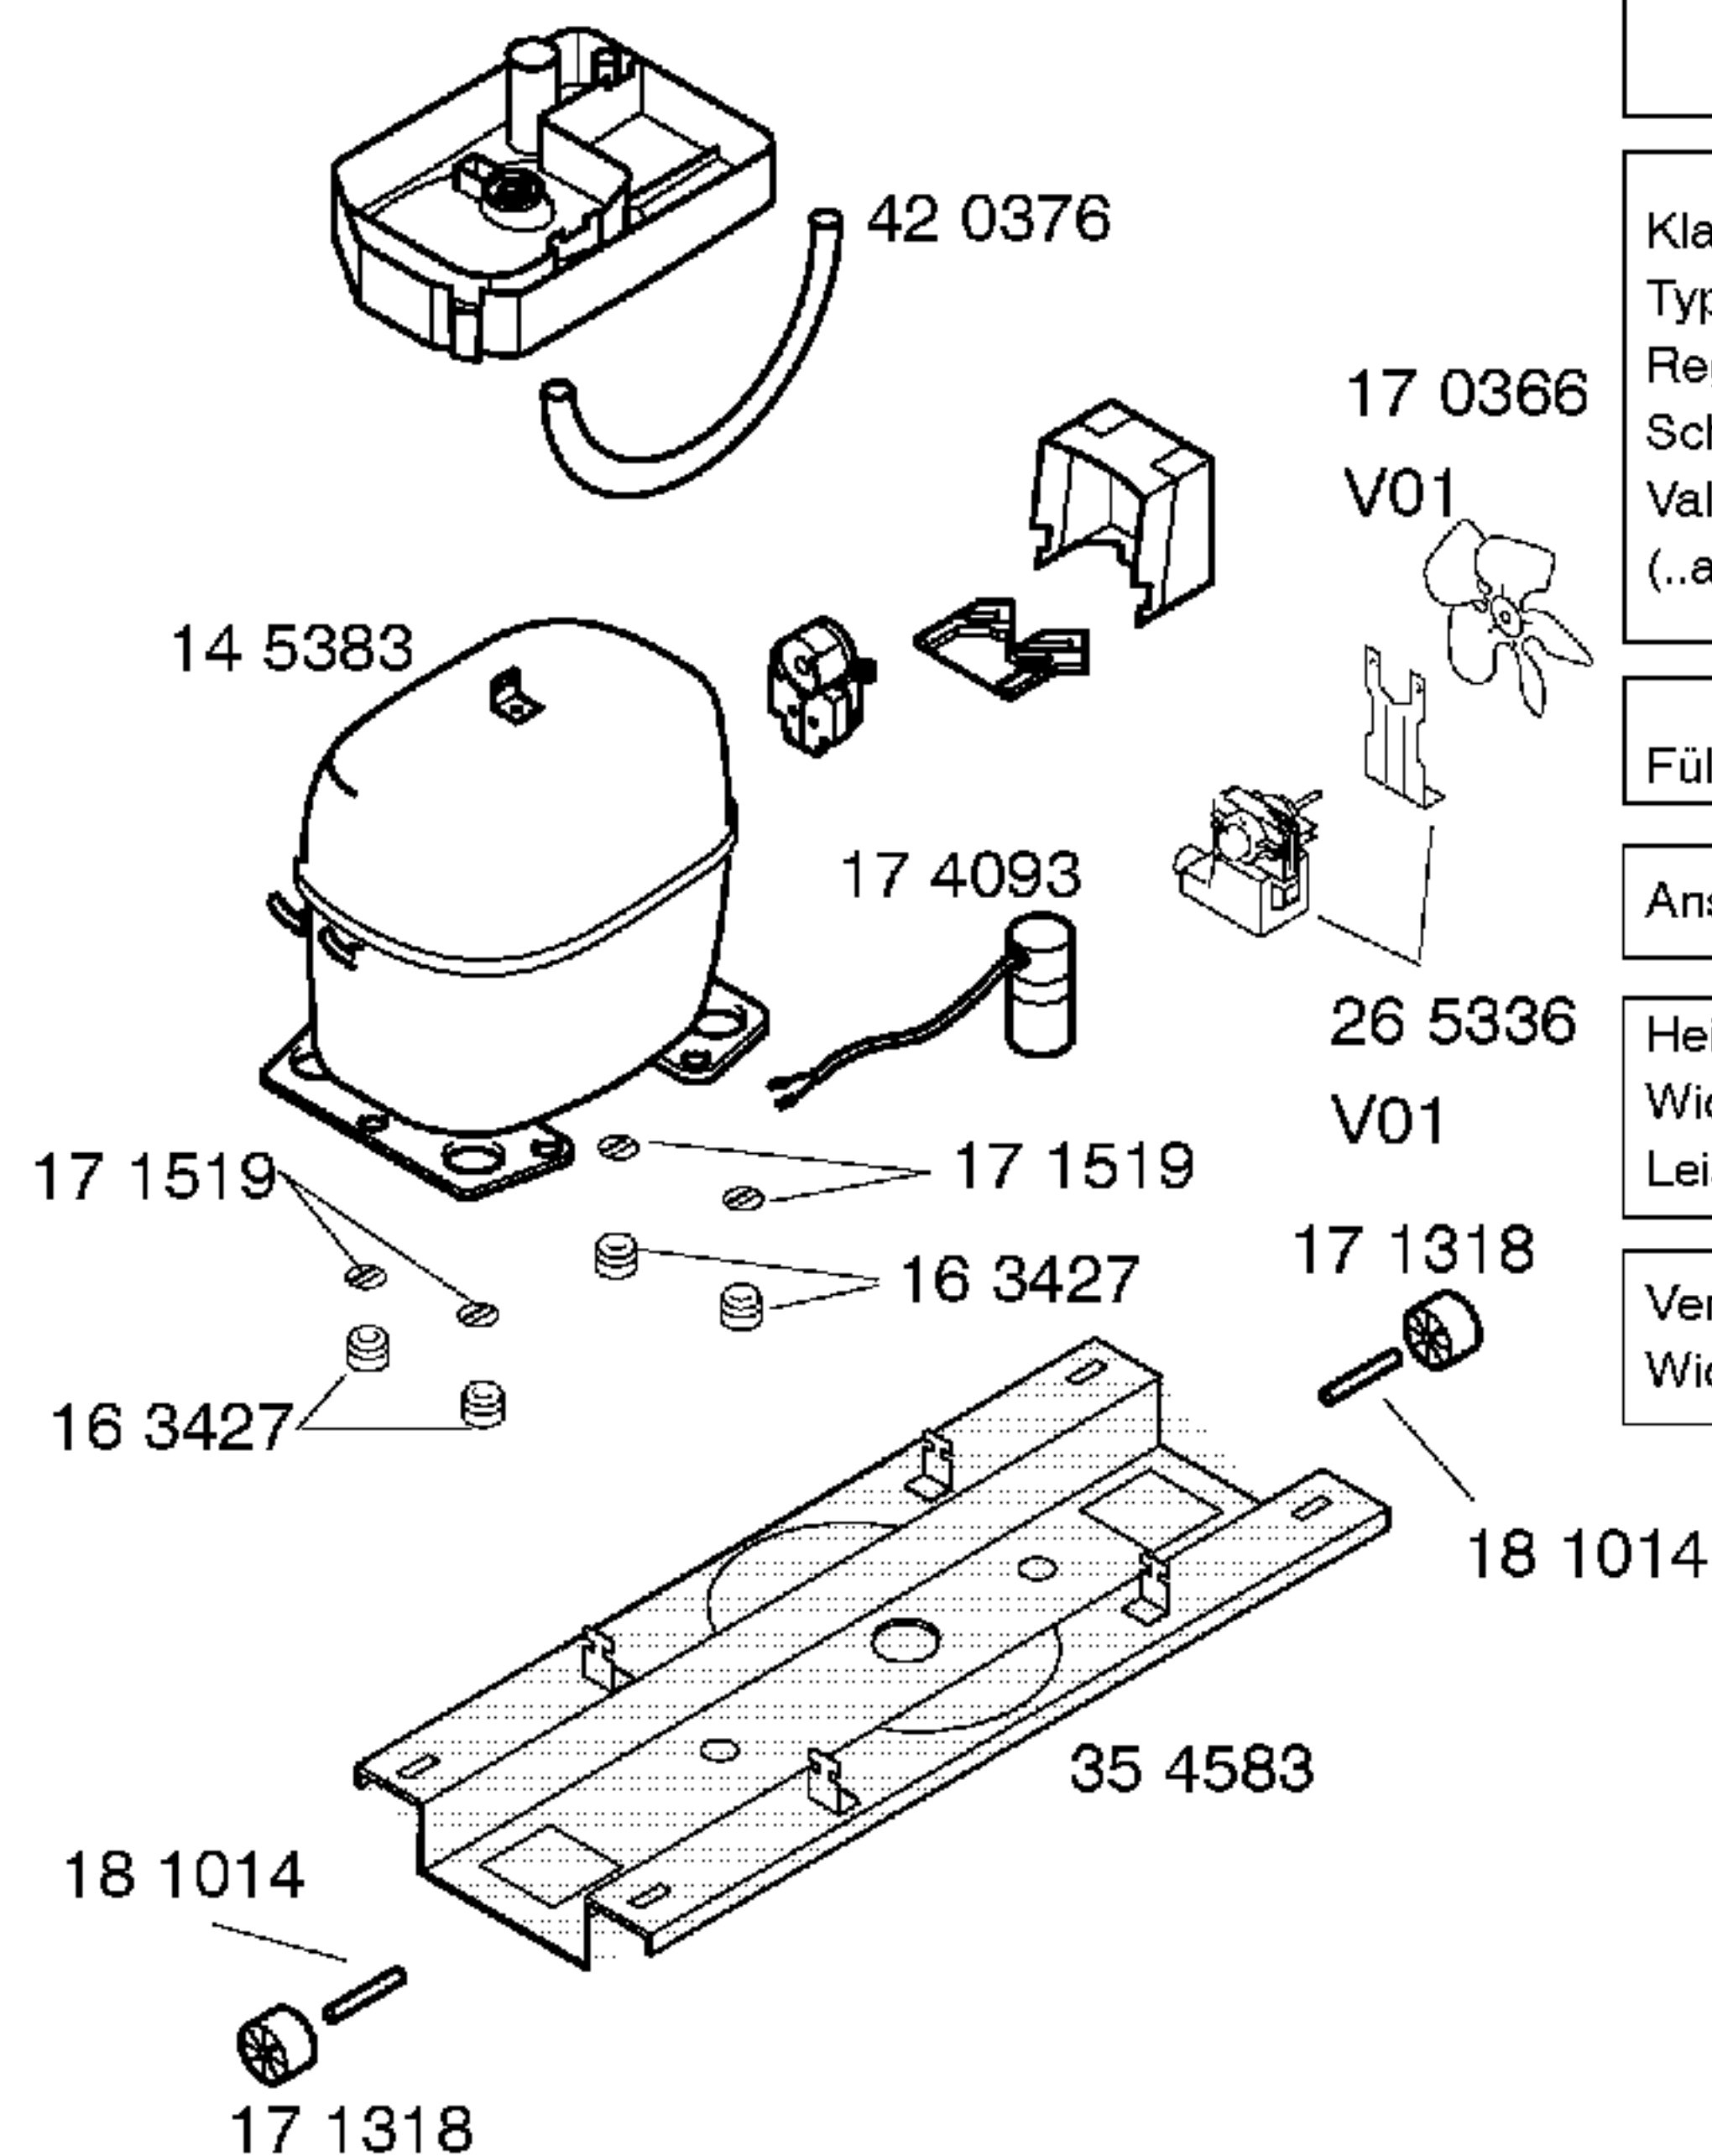

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	ACC HXK12AA		
Klappe Therm./Thermostat/Termostat Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'			
Füllmenge/Fill. quantity/Charge/Carga R600	g		
Anschlusswert/Comm. load/Puiss. Connect./Potenc.	W		
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia	KΩ W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia	KΩ		

Mat. – Nr. – Konstante
3740